

## Index

- 1.1 Foreword (2)**
- 1.2 SmartPhoneHandling (2)
- 1.3 Safety Instructions (2)
- 1.4 Abbreviations and Terminology(2)
- 1.5 SmartPhoneOperation&Setup (3)
- 1.6 Phablet Status and Messages (3)
- 2. Quick Start Guide (3)**
  - 2.1 Key Functions (3)
  - 2.2 Key Functions (3)
- 3. Startup and Shutdown (3)**
  - 3.1 Open and Close Screen (4)
  - 3.2 Touch Screen (4)
  - 3.3 Home Page (5)
  - 3.4 Application Procedures (6)
  - 3.5 USB Connection (7)
  - 3.6 Virtual Keypad (7)
  - 3.7 Management (8)
- 4. Basic Settings (8)**
  - 4.1 SIM Management (8)
  - 4.2 Wireless and Internet (11)
  - 4.3 Bluetooth (13)
  - 4.4 Data Management (16)
  - 4.5 Additional Options (17)
  - 4.6 Contextual Model (20)
  - 4.7 Display (22)
  - 4.8 Storage (24)
  - 4.9 Battery (25)
  - 4.10 Application Program (26)
  - 4.11 Account and Sync (27)
  - 4.12 Location Service (28)
  - 4.13 Securing your Phablet (28)
  - 4.14 Language & Input (29)
  - 4.15 Backup and Reset Function (31)
  - 4.16 Date and Time (31)
  - 4.17 Fixed-time Startup and Shutdown (32)
  - 4.18 Assistance Function (32)
  - 4.19 Engineer Selection (33)
  - 4.20 About Your Phablet (34)
- 5 Multimedia (34)**
  - 5.1 Music (34)
  - 5.2 Video (35)
  - 5.3 Photo Gallery (36)
  - 5.4 Camera (37)
- 6. Communications (37)**
  - 6.1 Phone (37)
  - 6.2 Text Messages (38)
  - 6.3 Contact List (39)
- 7. Internet (40)**
  - 7.1 Browser (40)
  - 7.2 Email (41)
- 8. Other Applications (42)**
  - 8.1 Clock (42)
  - 8.2 Calculator (43)
  - 8.3 File Manager (44)
  - 8.4 Recorder (46)
- 9. Installation (47)**
  - 9.1 Uninstall (47)
- 10. Troubleshooting (47)**

## .1 Foreword

Thank you for choosing our SmartPhone Model **M66AYG-P** high definition Phablet with a 6" LCD Screen. This manual introduces you to the features and functions of your new Phablet. This manual also includes recommendations which we encourage you to follow such in order to assure proper operation of your Smartphone.

## .2 SmartPhone Smart Handling

- Please make sure to keep the Phablet in a dry and proper place. To avoid circuitry and hardware damage do not expose the phone, battery and charger to direct sunlight, wet or moist environments.
- Please avoid sudden shake or shock since it may permanently damage the Smartphone.
- If your phone has been running for long periods of time, especially in hot environments, heat may be pushed to the surface of the phone. If your phone is overheating, cease using it immediately and unplug it from any power source to let it cool down. Do not hold on to the phone for too long to avoid burn injuries.
- Under any circumstance attempt to repair or change parts, otherwise this will render the manufacturer's warranty void.

## .3 Safety Instructions

- Never use the PHABLET while driving a car, in order to ensure safe driving. The primary responsibility of every driver is the safe operation of his or her vehicle. Responsible drivers understand that no secondary task should be performed while operating a vehicle whether it be eating, drinking, talking to passengers, or **using a mobile device** — unless the driver has measured the driving conditions and is confident that the secondary task will not interfere with their primary responsibility.
- Do not engage in any activity while driving a moving vehicle which may cause you to take your eyes off the road or become so absorbed in the activity that your ability to concentrate on the act of driving becomes compromised. Our commitment is aimed at responsible driving and giving drivers the tools they need to understand the potential hazards of distractions.
- Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to cellular signal interference.
- Switch your mobile device off before boarding an aircraft. The use of wireless portable devices in aircraft is prohibited and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.
- Always follow any special regulations applicable, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or hazard. When connecting the mobile device or any accessory to another device, read its user's manual.
- Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while fueling or other area where you would normally be advised to shut down your vehicle engine.
- Your SmartPhone is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device. Keep the mobile device and all its parts and accessories out of the reach of small children.

our mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by your local authority.

#### .4 Abbreviations and Terminology

Abbs/ Terminology	Device Name	Description
PHABLET	Mobile Internet Device	Mobile Internet Terminal
WIFI	Wireless Fidelity	Based on standard N° IEEE802.11b wireless Lan
TF	TransFlash	Alternate name for Micro SD, Super Miniature Memory Card
RF	Radio Frequency	A frequency or band of frequencies suitable for telecommunications

#### .5SmartPhone Operation and Set Up










##### attery Charging

our Smartphone is powered by rechargeable standard li-ion battery. A Wall/ USB charger is  
cluded with your SmartPhone for charging the battery.

#### .6 Phablet Status and Messages

##### essage Icons

hen message icons appears or pops up on the screen, click on the message column and slide  
cross the screen to open the selection list. Choose the menu you need, and confirm the  
nformation. You may close the message window by clicking on the option and sliding up. Below  
ou will find status icons:





	Incoming Message (Email)		Airplane Mode
	Connected to USB Port		Debugging Via USB
	Return		Download in Process
	Current Battery Level		Start Button
			Conectado al WIFI, disponibilidad de Internet

#### . Quick Start Guide

##### .1 Keys Function

##### Keys Function Description

ower button: Turn Off/On - Long Press; Sleep Mode Off/On - Short Press.

Power button	Short press to sleep/activate, long press for startup and shutdown.
Volume + (up)	Increase the volume
Volume - (down)	Decrease the volume
 Home Button	Will return to Home Screen, regardless of the application being used.
 Back Button	Will return to the previous option and/or screen.
 Menu Button	This button will display the main menu.
 Setting Button	Displays recent browsing history.

## Startup and Shutdown

### Startup

Press the POWER key for three seconds (long) and the Home Screen will appear and the system enters into screen a lock status.

### Shutdown

1. Press the POWER key for three seconds and a shutdown prompt will appear and select whether you want to shutdown;
2. Or select other option such as mute mode, airplane mode or reboot.
3. Shutdown would be the last option on the popup window.

### 1 Open and Close Screen

While the phone remains idle and for energy saving purposes, it automatically switches to sleep mode.

1. If you wish to activate the sleep mode, short press the POWER button.
2. If in Sleep Mode, short press the POWER button and the screen will light up. The screen will appear on the lock mode, just like in the picture shown below, and slide to the right side to view the Home Screen or to the right for Camera mode.



Image 3.1

## 3.2 Touch Screen

### Tablet Operation

In order to view the Home Screen, you will have the following options.

#### Touch (click)

A virtual QWERTY keyboard that allows you to enter text by touching keys on the screen. The keypad includes predictive text, which matches your key touches to common words so that you can select the word to enter it into your text.

#### Applications

If you need to open an application (ex. Textbox, application or a webpage's link) just select it with your finger (click on it).

#### Gliding/Sliding Across the Screen

This function allows to glide/or slide throughout the screen and wander across to select the desired application, function or command.

#### Release

Before you release, first select the desired target application select and then release.

#### Rotate

Orientation Lock: Touch to enable or disable Orientation Lock. When enabled, the screen orientation locks in the current orientation (horizontal or vertical) and will not rotate when you rotate the device

### 3 Home Page

lain interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.



Image 3.2

#### Extended Home Screen (landscape)

The Home screen consists of the Home panel, plus (panels) that extends beyond the display width to provide more space for adding shortcuts, widgets and folders. You can also add panels further panels. Slide your finger horizontally across the screen to scroll to the left or right side panels. The examples shown in image 3.3 comprise two sections.



Image 3.3

#### Desktop Shortcuts

to create a shortcut in the desktop

- Drag the icons you would like to put together on one icon (multiple icons can be

overlapped) as shown in Image 3.4.

The overlapped icons can be placed in folders as shown in image 3.5.

elect the folder in the black box and the virtual keyboard will appear where you will be able to enter the folder's name. The folder's names can be changed by pressing the text field below the icon.



Image 3.4



Image 3.5

### Remove Desktop Icons

To remove icons from the desktop, long press the selected icon and on the upper right hand side will appear a blue 'X' icon.

drag the selected to the remove (X) which will turn red and release.

### Changing the Desktop's Wallpaper

long press any blank space in main screen, a popup window will appear allowing you to change the wallpaper. You may change select your wallpaper or personal image at the Gallery option.

### 4 Application (Procedures)

select the menu icon (click) on the upper right hand side, as shown in Picture 3.2; allowing you (Picture 3.6) to choose the desired application procedure.



Image 3.6

### 5 USB Connection

#### Phablet storage setup

Before transferring documents, you must setup your storage directory:

1. Connect the Phablet to your PC with an USB cable followed by a popup message.
2. Open the message board; Check the Phablet's status and a message on learning how to use the message board.
3. On the USB message board, select the "USB Connected" option (see Picture 3.4), then select "open USB storage configuration".
4. At this point the device should be successfully connected to the PC.





Image 3.7

#### aving/Copying a document into the storage media

1. Connect the Phablet to the PC using an USB cable.
2. A message will appear, successfully connected to PC.
3. Select "My computer" on your PC's desktop, check any items listed as "removable disc" (you may see a Mass Storage message)
4. Copy the documents you need into "removable disc" (you may drag & drop, copy & paste).
5. Once the desired files are copied & pasted, select "shutdown USB storage configuration" to uninstall.

lease note that you will not be able to see the data (files, images, music and video) on the hablet's memory card while connected to the PC. Once the cable is disconnected from the PC ou will be able to see the information on the Phablet's memory.

#### .6Virtual Keypad

##### Use the screen keypad

his is a custom virtual QWERTY keyboard, featuring predictive text. Input characters by apping the onscreen keys with your finger, or use speech recognition. As you enter characters, redictive text matches your key touches to common words and displays them. Select a word rom the display to insert it into your text. When you start the procedure or choose the words r numbers edition, it will show the screen keyboard. The keyboard contains below typing ptions:

1. Android keyboard

##### Choose the desired typing option

1. Select Setting on applications.
2. Select Language and Keyboard.
3. The Text Setting will show the installed typing options offered by your Phablet.
4. Select your typing option.

Use and switch input options

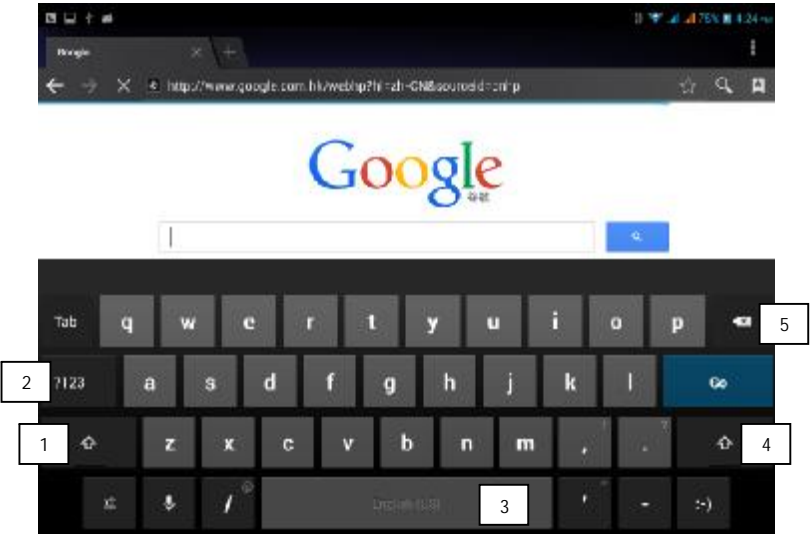 


Image 3.8

1	Toggle between upper/lowercase.
2	Switch to numeric input.
3	Insert space.
4	Execute command (input).
5	Deletes the character to the left side of the cursor; to delete all characters on the left side of the cursor select and hold.

7.Management

Widgets Menu

1 the application menu, select widgets option on the upper area of the screen, or slide the screen which will alternate between widgets. In order to create a short cut, long press the esired widget.

create a desktop shortcut for an application

1 the application or widgets menu, long press any icon, drag, hold and drop the icon to any osition within the desktop area.

ote that if no space is available in the desktop area, you will not be able to create a shortcut.

Basic Settings

.1 SIM Management

.1-1 Voice call

elect settings in Main Menu and choose SIM Management, as shown in Picture 4.1.



Image 4.1

elect voice call and select default SIM card, as shown in Image 4.2

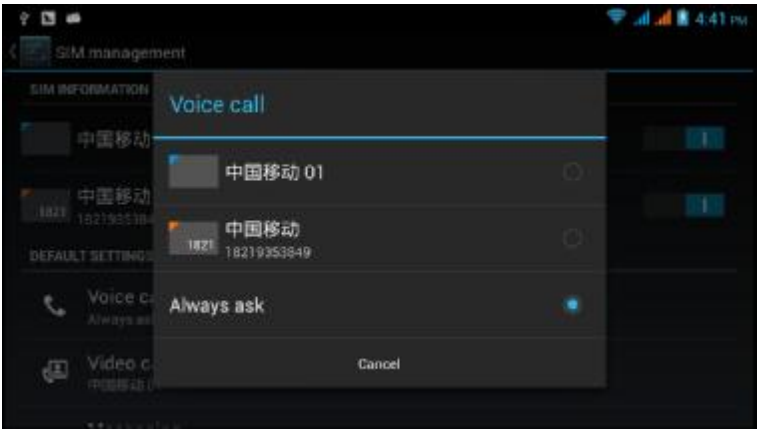 


Image 4.2

.1-2 Video Call

elect settings option in main menu, choose SIM Management, and select video call, while making the video call it will select the default SIM card, as shown in image 4.3.

### .1-3 Messages

elect settings option in the main menu, select SIM Management, select message, and then elect the default SIM card when message is sent, as shown in Image 4.4.

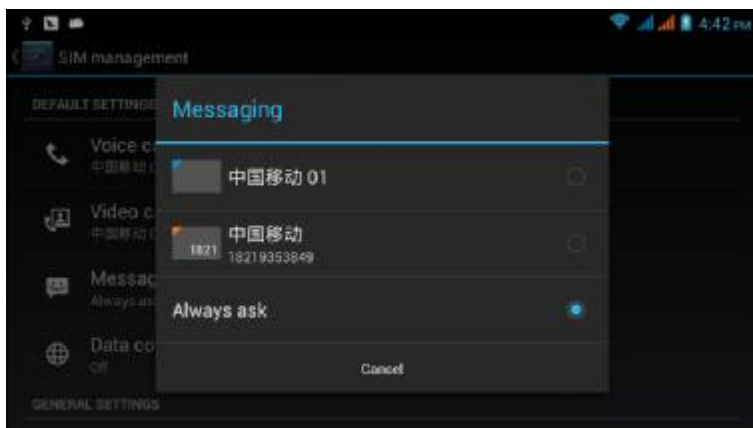 


Image 4.4

#### .1-4 Data Connection

elect setting application in main menu >SIM management> select data connection then select the default SIM card, as shown in image 4.5.



Image 4.5

## .2 Wireless and Internet

### . Wi-Fi Network Connection

1. In the main menu option, select **setting** application.
2. Select WLAN, open WiFi, the Phablet will automatically search for available Wi-Fi's. As shown in image 4.6.
3. Select the desired Wi-Fi, if protected, a popup password window will appear, enter password and select connect.



Image 4.6

### 2. Add Network

- 1) Select the **ADD NETWORK** icon in right hand side upper corner, as shown in Image 4.7

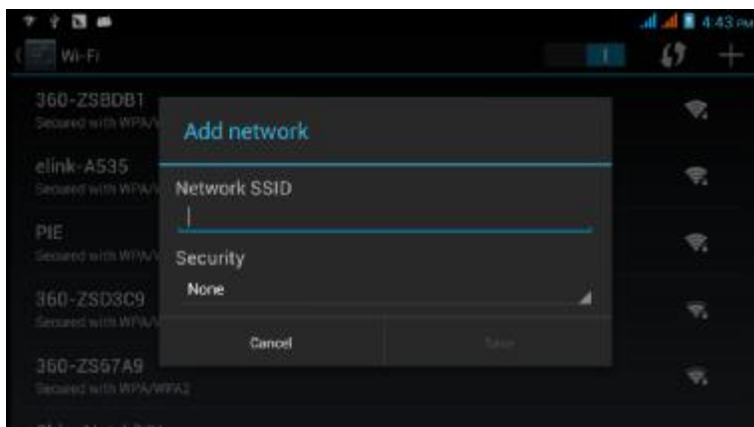 


Image 4.7

- 2) Enter network SSID, the Wi-Fi's name and save.

- 3) Select username already saved and connect in order to join the network, as shown in Image 4.8.



Image 4.8

### 3. Network Message

When you open a Network Message, the WIFI signal is displayed on the lower right hand side corner(WLAN network available), as shown in Image 4.6

### 4. Keep Wi-Fi on during sleep mode


1. Select the menu  icon on the right hand side corner, as shown in image 4.8, select advanced.
2. Select “Keep Wi-Fi on during sleep”, as shown in Image 4.9.



Image 4.9

## 4.3 Bluetooth


## Bluetooth Function & Operation

1. Select setting application in Main Menu.
2. Select Bluetooth and open it.
3. If a Bluetooth is open within your range, select search device in the upper right hand side corner, then the Phablet will automatically search for Bluetooth devices nearby, as shown in image 4.10.





Image 4.10

4. Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.
5. After match successfully, choose the operation you want to, click  to enter into Picture 4.11.

(Picture 4.11)

Bluetooth setting  
Rename tablet


Click  icon in right hand side upper corner, as shown in image 4.12, select rename tablet and enter desired name.



Image 4.12

- Verify visibility timeout

elect visibility timeout setting as shown in Image 4.12, choose the desired time frame, as shown in Image 4.13 (confirm that the overtime setting matches the time setting once the luetooth is verified)

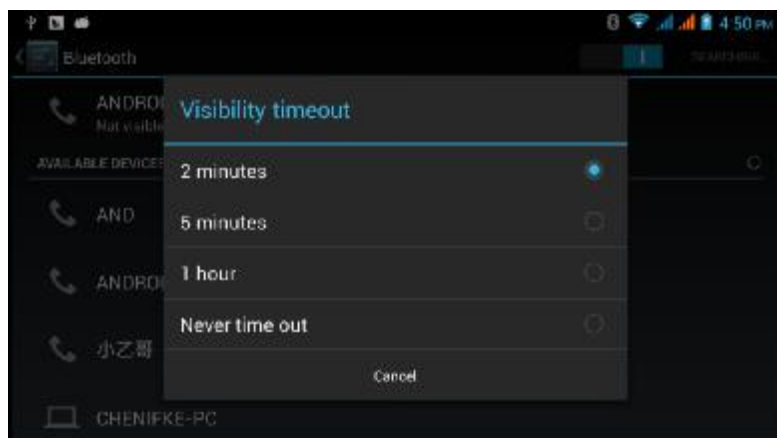 


Image 4.13

#### Display Received Files

You may select the received file as shown in image 4.12 then you may proceed to download and/or upload files.


4 Data Usage (Management)

check SIM card data usage, as Picture 4.15



Image 4.15

check WIFI data usage

select the  icon on the upper right hand side corner, as shown in Image 4.15, select **Data Usage**, as shown in Image 4.16.

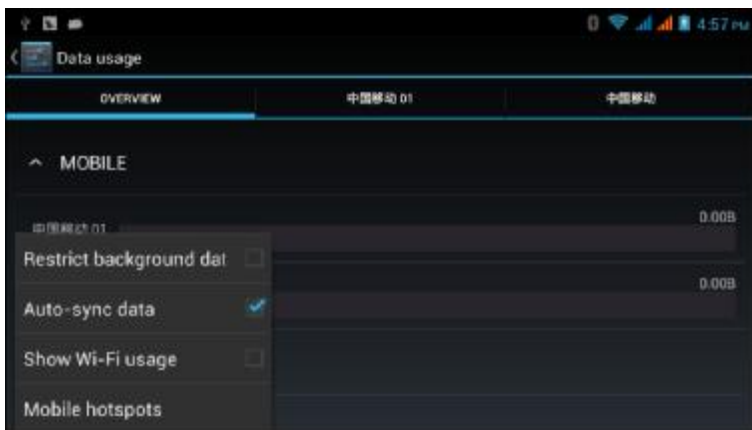 


Image 4.16

## 4.5 Additional Options (More)

### 4.5-1 Airplane Mode

When airplane mode is activated, your device's wireless connections are disabled, and you will not be able to connect to networks. While in airplane mode, you can use other features of your device, such as playing music, watching videos or other applications.

### 4.5-2 VPN

To open a VPN (Virtual Private Network), select **add VPN network**, as shown in Image 4.17. Enter the **name** and **server address** then save.

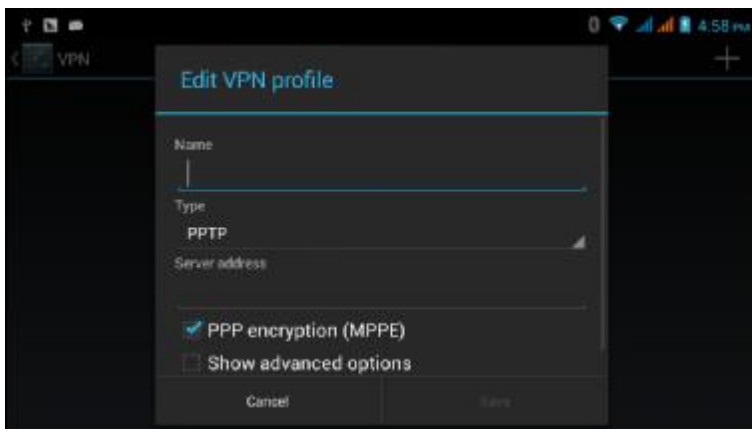 


Image 4.17

elect VPN, as shown in picture 4.18, select the desired VPN, enter your user name and assword then select connect.

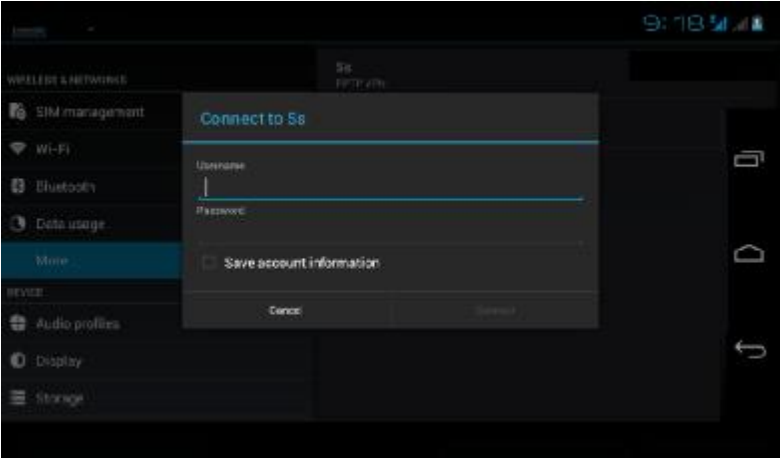 


Image 4.18

.5-3 Network sharing and portable hotspots

ortable WI-FI hotspots

- 1.Select setting application in main menu.
- 2. When a connection with a reliable source is achieved, open network share > portable hotspot

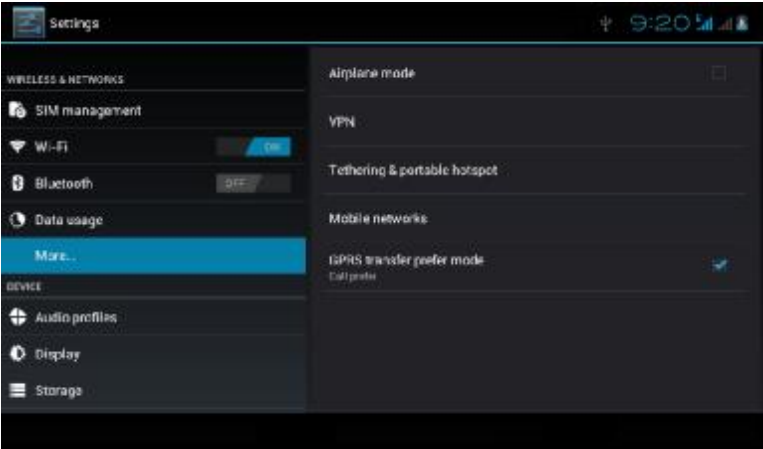 


Image 4.19

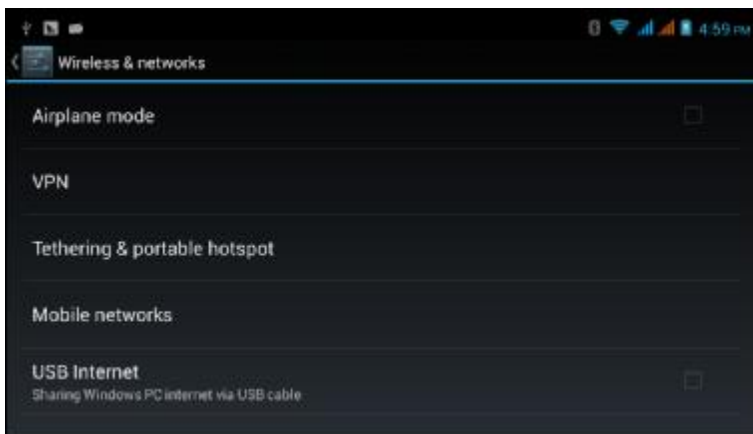 


Image 4.20

3. Select keep Wi-Fi hotspots on, then select open time.
4. Return to the previous menu, open portable WLAN hotspots, select configure Wi-Fi hotspots.



Image 4.21

5. To request a password to enter your device as hotspot and set a password.

#### .5-4 Mobile Networks

##### . 3G Service

select 3G services shown in image 4.22, select available default SIM card, GSM is 2G network, /CDMA is 3G network.

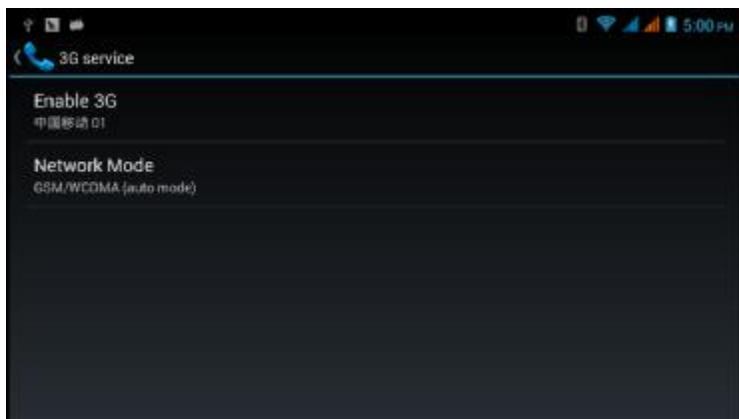 


Image 4.22

. Access Point Name (APN)  
elect Mobile Network, as shown in image 4.23



Image 4.23

choose access points name (APN), choose SIM card you need to connect,  
choose connect type, as Picture 4.24



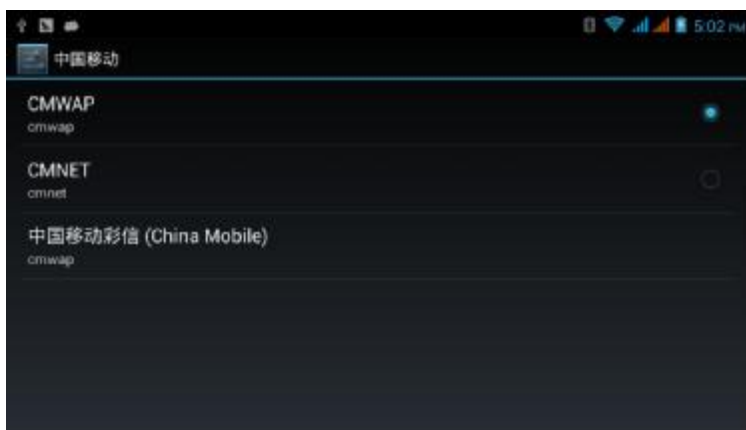 


Image 4.24

ote: CMWAP transmitters data through GPRS, Please visit wap's website, and for CMNET for urther support and please bear in mind that charges may vary).

#### . Network Operator

elect the network operator>select the desired SIM card and the system will search for available GSM and WCDMA networks, as shown on image 4.25.

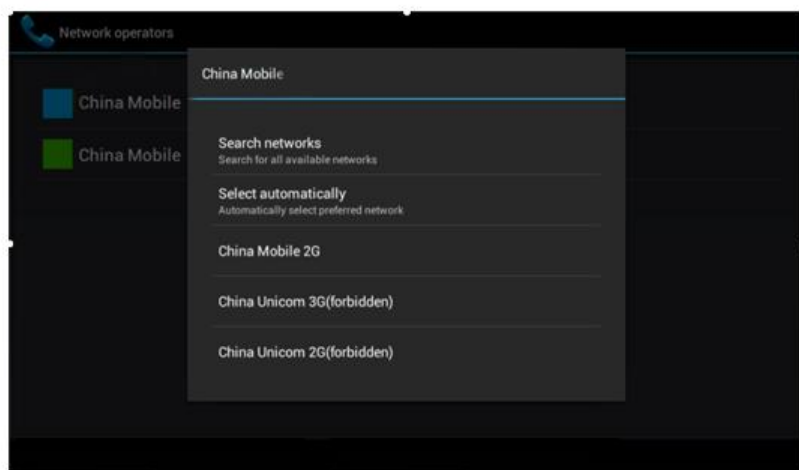 


Image 4.25

#### .5-5 GPRS data prior mode

fter Opening the GPRS data prior mode, systems will establish priority to select the desired network.

#### .6 Contextual Model

1. Open settings, click contextual model, as Picture 4.26,

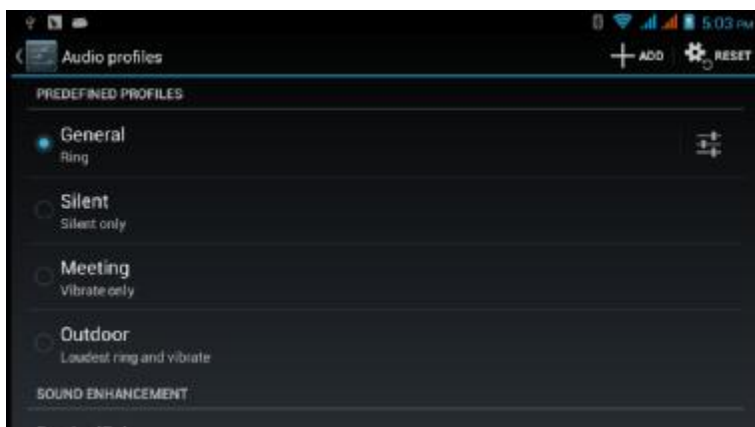 


Image 4.26

Select **standard** to enter as shown on image 4.27

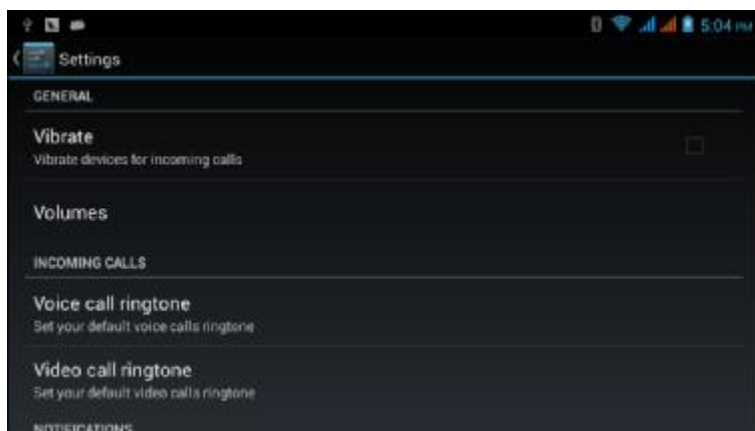 


Image 4.27

1. **Vibrate**  
Select **Vibrate**, the Phablet will vibrate during incoming calls. Please refer to the menu shown on Image 4.27.
2. **Volume**  
To select the desired volume level, you may do so by means of a ringtone, message and alarm volume, as shown on image 4.28.

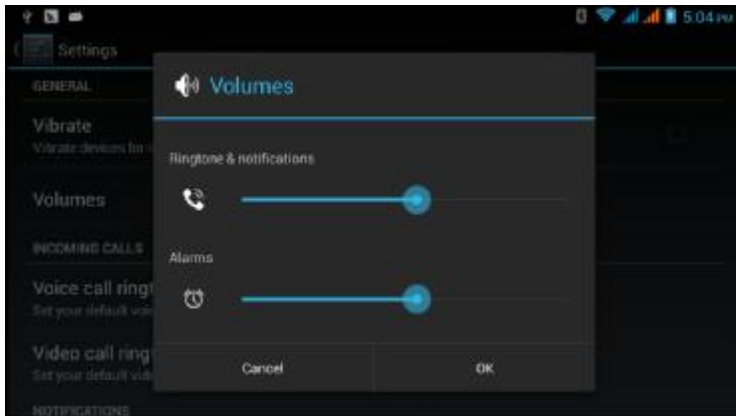 


Image 4.28

3. Voice Call Ringtone

Select voice call ringtone to choose your preferred voice call ringtone, as shown in image 4.29.

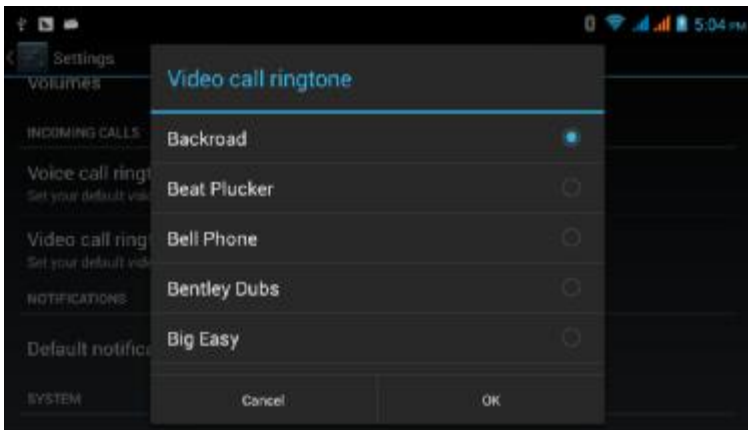 


Image 4.29

4. Video call ringtone

Select the video call ringtone to choose your preferred voice call ringtone, as shown in image 4.30.

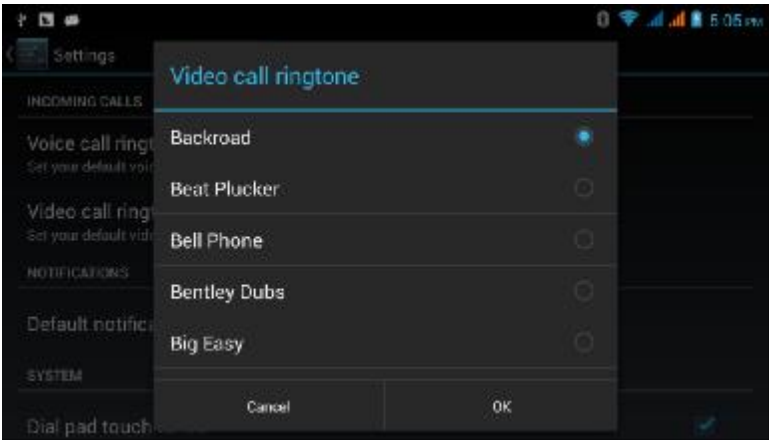 


Image 4.30

Note: These options will NOT work while on the following modes: standard, silent, meeting, outdoor)

## .7 Display

### .7-1 Adjust the Screen Brightness

1. Select **Setting** application.
2. Select **Display**, brightness,
3. Drag the slider to set the brightness as shown in Image 4.31

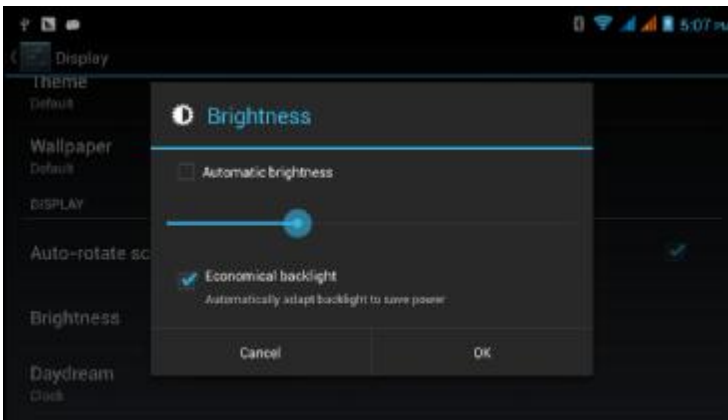 


Image 4.31

4. Once the desired brightness is set, select **OK** after brightness is set.

### 4.7-2 Wallpapers

1. Select the **Setting** application.

2. Select **Display** and select **Wallpaper**.
3. You may select from an array of wallpapers (Gallery, Live Wallpapers, Pre-Loaded Wallpapers) as shown in Image 4.32.

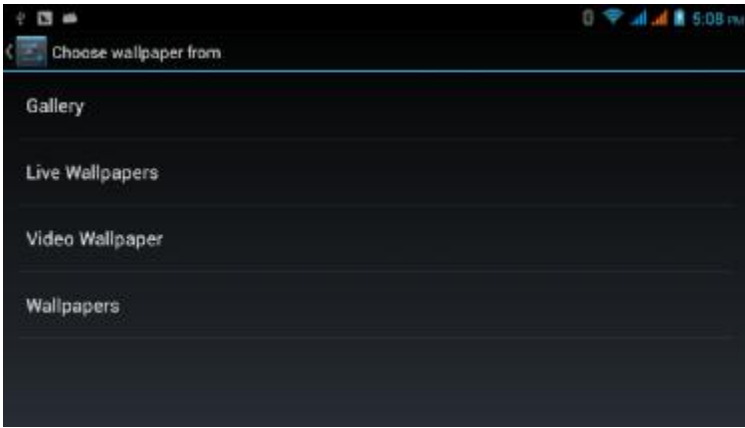 


Image 4.32

#### .7-3 Auto rotation Mode

The system has an open auto rotation feature by default. When turned off, the system will not enable the G-sensor.

#### .7-4 Sleep

1. Select Setting Application.
2. Select Display Mode.
3. Select Sleep Mode.
4. Set the desired Sleep Time as shown in image 4.33.

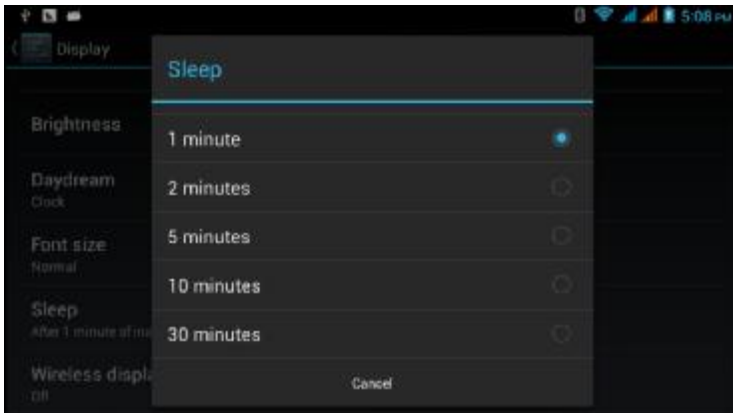 


Image 4.33

#### .7-5 Font Size

elect Font Size to set the desired size, as shown in image 4.34.

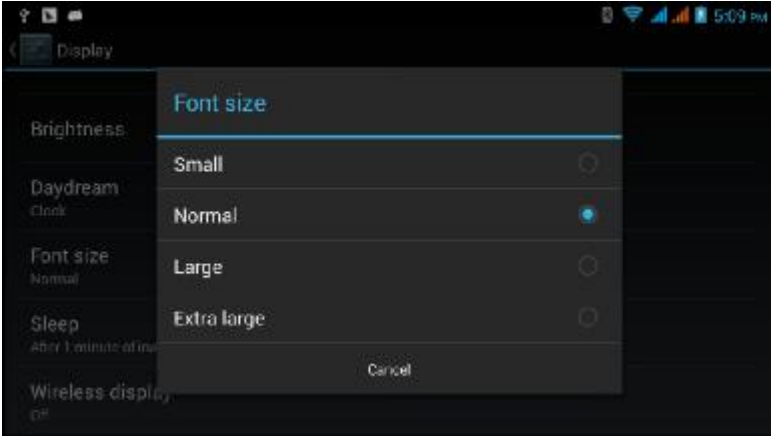 


Image 4.34

.8 Storage

Open Setting function, select Memory, select preferred install location, select install new application and target directory.

Check SD card and Phablet's storage space.

- 1. Open Setting Application.
- 2. Select storage, check storage space.
  - 1. Internal storage (built-in memory)
    - (1) System storage

System storage is the Phablet's built in memory, as shown in image 4.38.

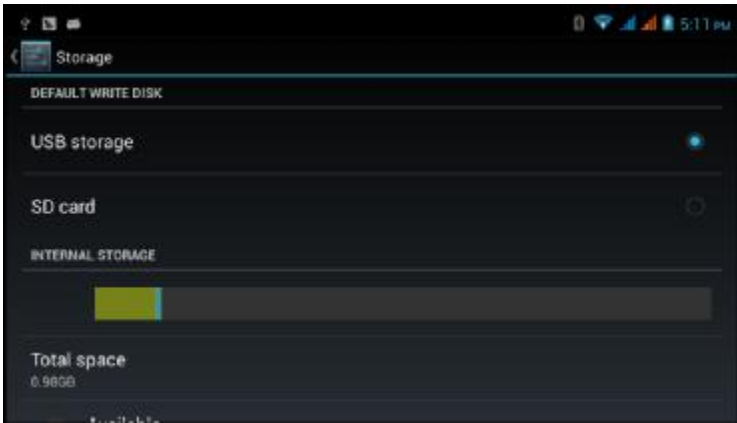 


Image 4.38

- (2) Internal storage

The Phablet's Built in Internal storage is NAND based, as shown in image 4.39. You may view and check stored files using the Main Menu.

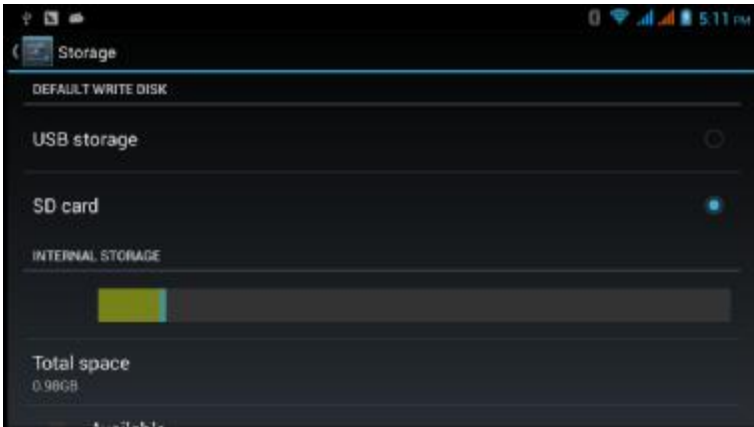 


Image 4.39

#### . SD card

ou may also check the SD's card storage space availability, as shown in Image 4.40.

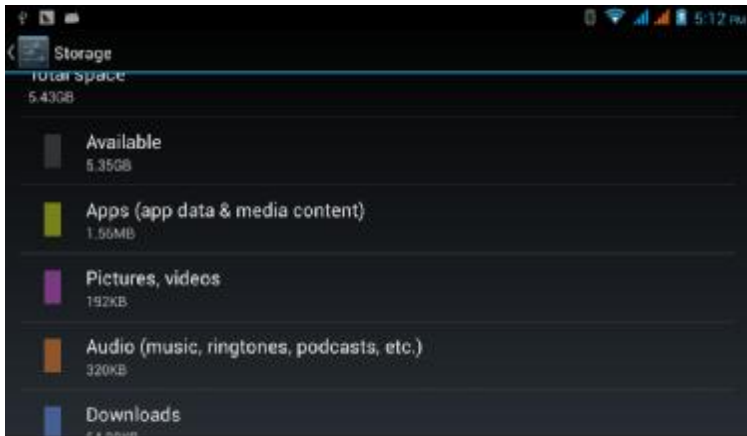 


Image 4.40

#### D Card Removal

1. Select Setting Application.
2. Select memory.
3. Select Uninstall SD card.
4. Remove the SD card.

ote: Safe removal of the SD Card will increase the card's lifecycle.

#### .9 Battery

elect Setting then battery. The battery status can be viewed in Image 4.41

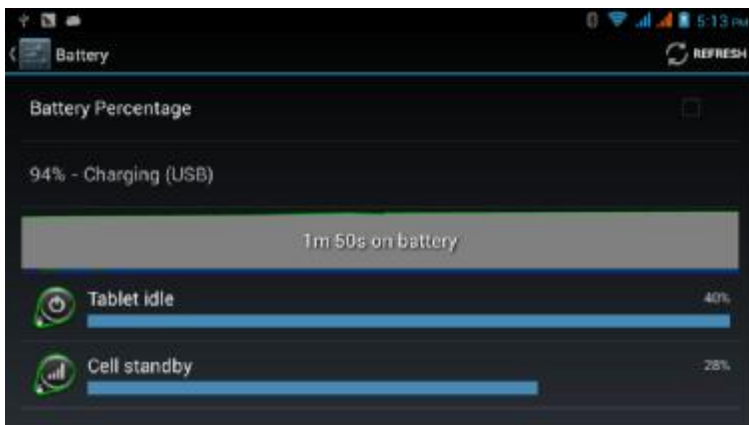 


Image 4.41

#### 4.10 Application Program

1. Select Setting application.
2. Select application, after pressing enter, you will be able to manage and delete application; check disk space availability, as shown in Image 4.4.2.

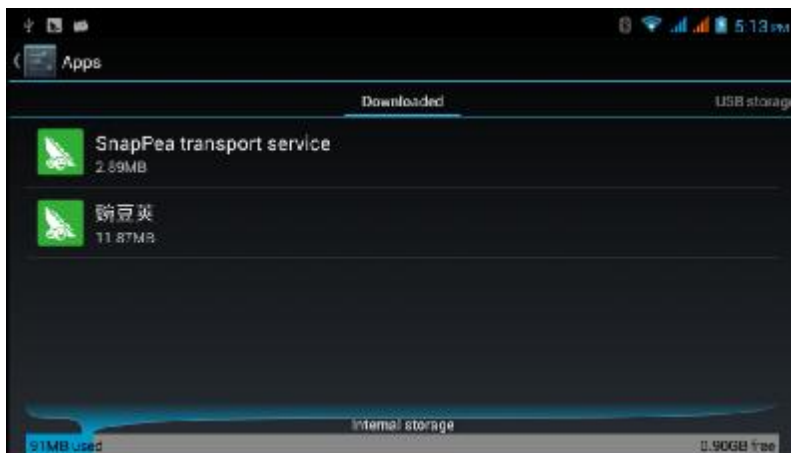 


Image 4.42

3. This option will enable you to view internal storage available, as shown in Image 4.43



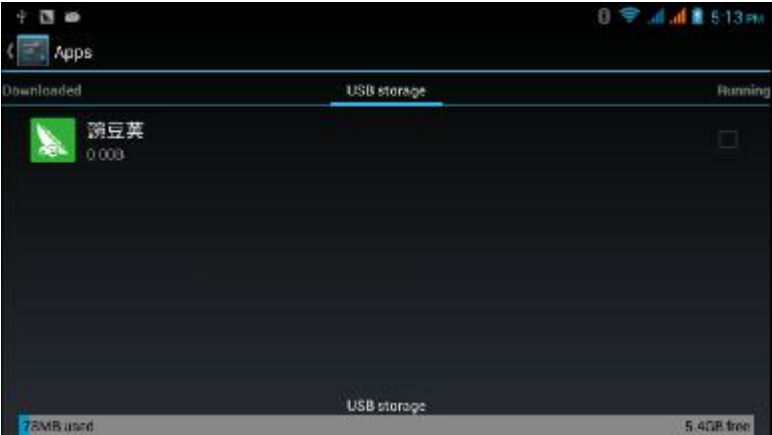 


Image 4.43

4. This option will enable you to view external storage available (USB Flash Drives, SD Card) as shown in Image 4.44.

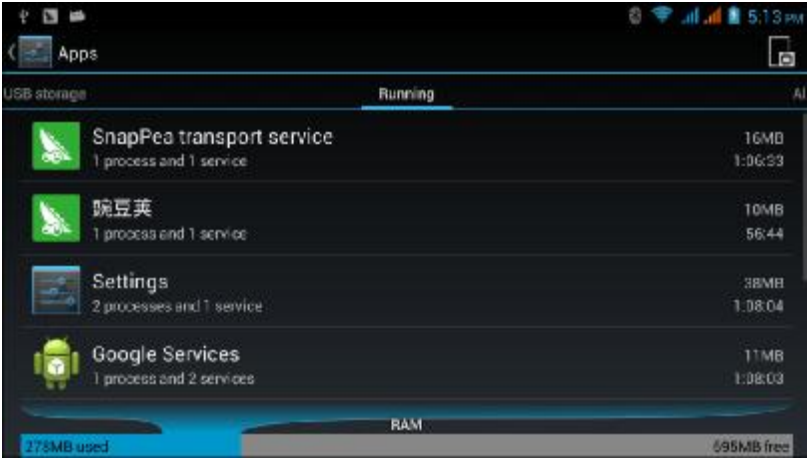 


Image 4.44

#### .11 Account and Sync

1. Select Setting Application
2. Select Add an Account, as shown in image 4.46

 


Image 4.46

3. Once the application loads, it will open the Sync function as shown in Image 4.47.

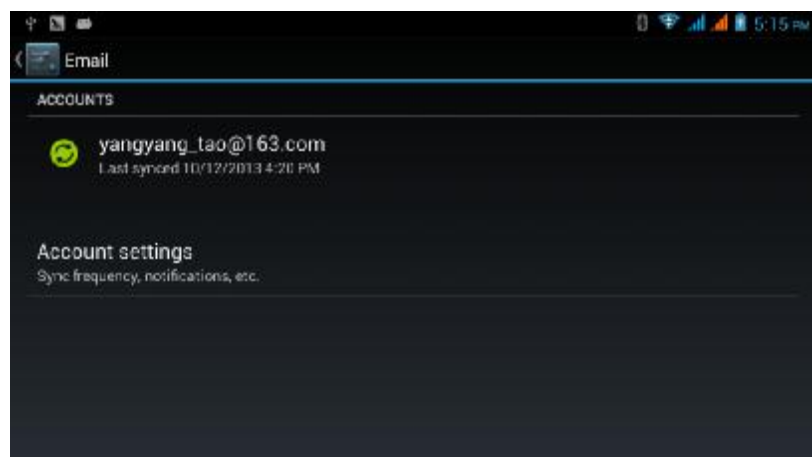 


Image 4.47

## .12 Location Service

elect setting, then Location Service, as shown in Image 4.48.

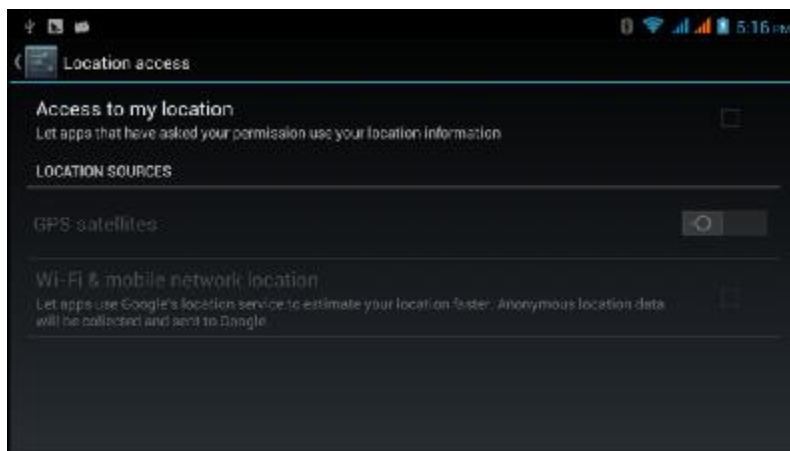 


Image 4.48

1. **Google's Location Service**  
Open Google Location Service, you may do so through your local network.
2. **GPS**  
Open GPS satellite, you may use the GPS feature to position the Phablet.
3. **GPS Assistance**  
By using the Open GPS Assistance feature, the positioning speed will increase, but It will require a SIM card for data transfer.
4. **EPO (Extended Prediction Orbit) Setting**  
Select the EPO Setting, as shown in image 4.46, then make sure that the EPO positioning feature is on and auto download activated.

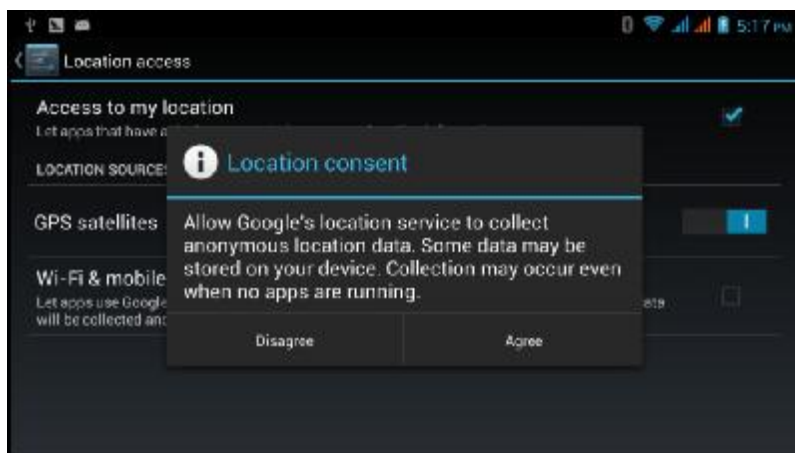 


Image 4.49

## 5. Location and Google Search

Select & Open a location, Google Search. In order to enhance positioning you may enter your current location (ex. Address).

### 4.13 Securing your Phablet

#### Screen Lock

To secure your Phablet, you may lock the screen using the “lock” icon or the POWER button. A password can also be set.

Note: Once your screen is secured (locked), you may need to use as a password to unlock such.

#### Unlock Icon

1. Select Setting Application (Main Menu).
2. Select **Safe**.
3. Select **Lock Screen**.
4. Select **Icon** in text setting field.
5. Select next step after the notification message.
6. The Unlock Pattern Screen will popup, displaying nine touch spots and you will have to connect 4 points in any direction in a single trace. As shown in Image 4.10, once you finish tracing your unlock pattern, remove your finger and the system will save your established trace.
7. Select **Continue**.
8. When you see the notification message, make sure to enter the Unlock Pattern then **Confirm**.

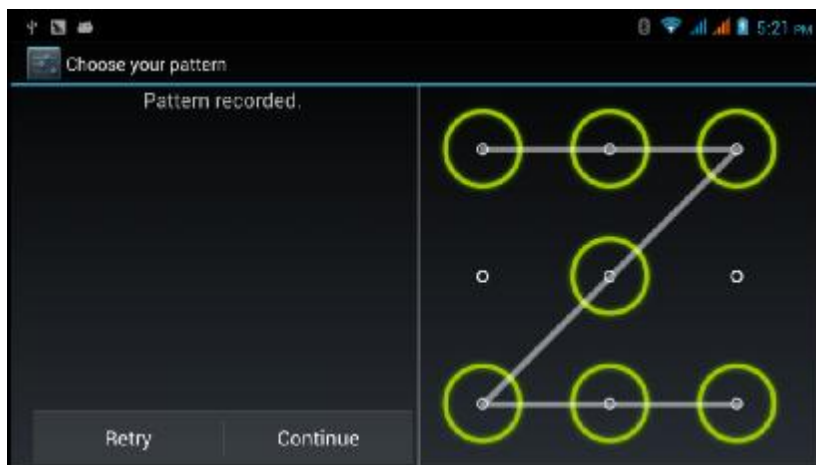 


Image 4.53

#### Inlock PIN code

1. Select **Setting** application in Main Menu.
2. Select **Safe**.
3. Select **Screen Lock**.
4. Select **PIN** in text setting area.
5. Enter new PIN code (number) and select **Continue**.
6. Re-enter new PIN code and **Confirm**.

#### et unlock password

1. Select Setting application in Main Menu.
2. Select **Safe**.
3. Select **Screen Lock**.
4. Enter password in text field.
5. Enter the new password (alphanumeric) and then select **Continue**.
6. Re-enter the password and **Confirm**.

#### Inknown source

1. In Main Menu, Select **Setting**.
2. Select **Safety**.
3. Select **Unknown Source**, as shown in Image 4.54.

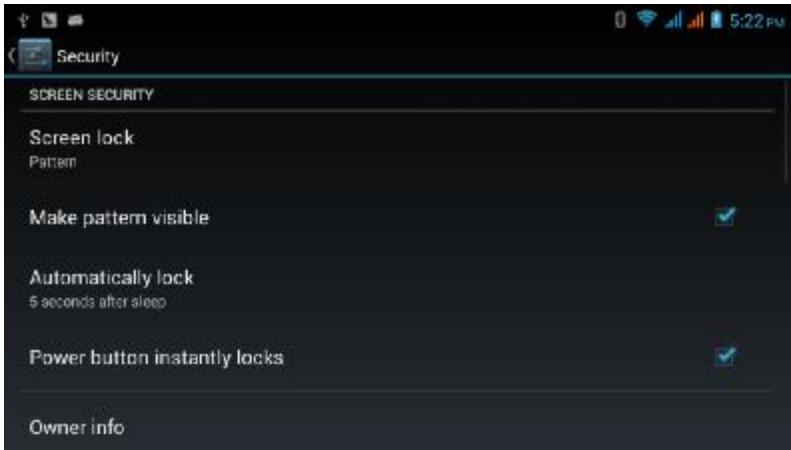 


Image 4.54

lease note that in order to install application files the unknown source option must be active.

#### 4.14 Language & Input

elect Setting, then language and input option, select the desired language and/or feature - see below.

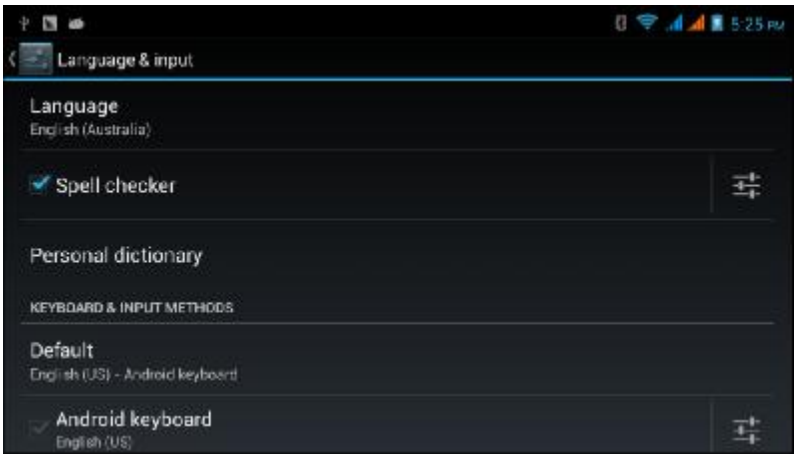 


Image 4.55

elect Setting, language and input, select Android keyboard setting, select the desired language features, as shown in Image 4.56.

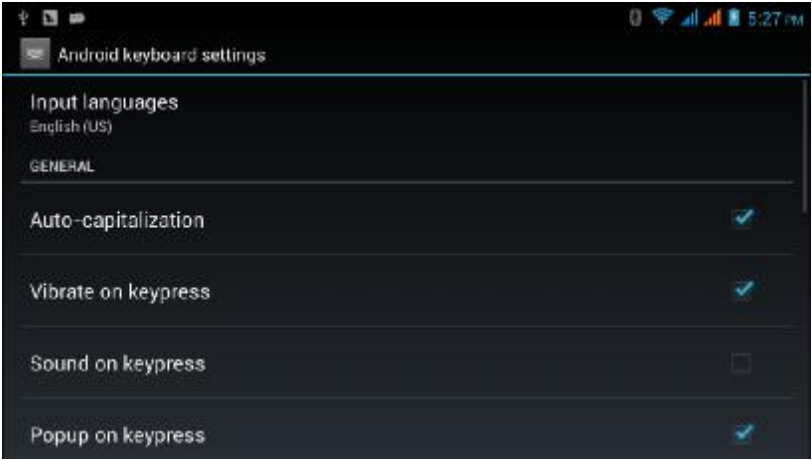 


Image 4.56

elect the desired language displayed in the language list, as as shown in image 4.57.


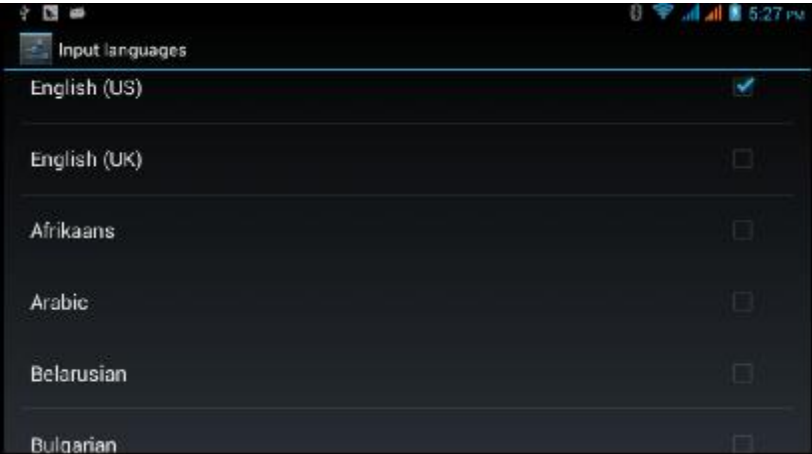 


Image 4.57

.15 Backup and Reset Function

connect to an available WIFI and login to your Google account, Select **Backup My Data** and the system will backup your data into a Google server.

 ^ you need to reset the entire system, select RESE, as shown in Image 4.59.

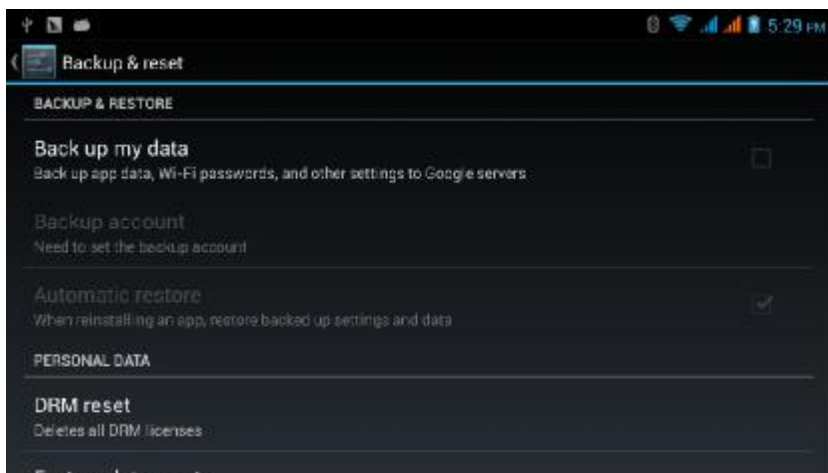

Picture 4.59

lease note that the Reset option will erase any information stored in the NAND memory (built-in) and before doing so, please make sure to remove any SD Cards.

#### .16 Date and Time

he system will automatically apply the date, zone, and time established by your Internet Service Supplier.

ate, time and zone manual setup.

1. Select Setting application.
2. Slide [scroll] down the screen, select **date and time**.
3. Turn off “auto setting of date and time”.
4. Turn off “auto setting zone”.
5. Select Zone, then choose your time zone shown on the dropdown list. Many other time zones are included in this feature.
6. Select **Date Setting**, then with the up/down selector adjust date, month, and year, and select **Setting** once again.
7. Select **Time setting**, then with the up/down selector adjust hour and minute, click AM or PM to change morning or afternoon. Click **Setting** to finish.
8. Select **24-hour format**, switch between 12-hour or 24-hour format, this format will be used for the alarm clock.
9. Select date format setting then select the time format you want to show on the Phablet.



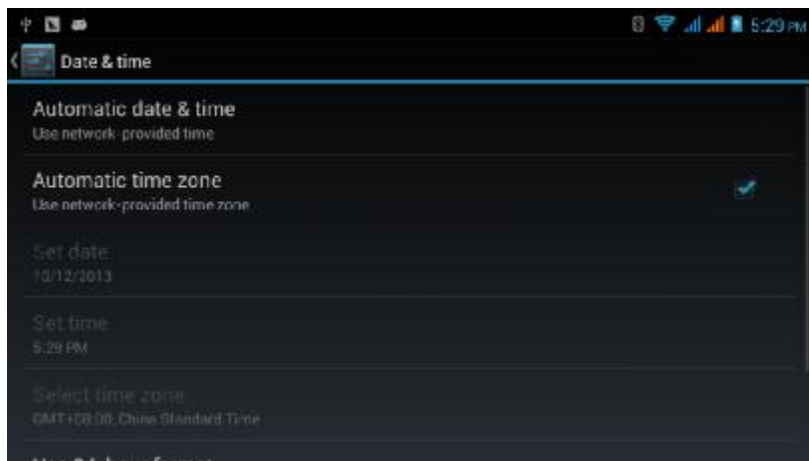 


Image 4.60

note: If you use the time internet provided, you will not able to set the date, time and time zone.

#### .17 Fixed-time Startup and Shutdown

1. Select **Setting** application.
2. Select **fixed-time startup and shutdown**.
3. Handle this function as shown below (Image 4.61)

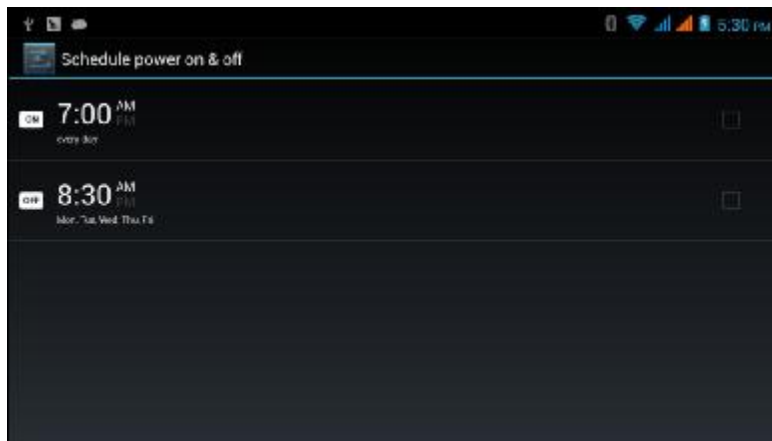 


Image 4.61

#### .18 Assistance Function

##### .18-1. Large Size Font

This function must be selected to change font size.

#### .18-2. Click Power Button to End Calls

call can be ended by pressing the POWER button.

#### .18-3. Touch and Hold Delay

elect touch and hold delay to increase timeframe, as shown in Image 4.62

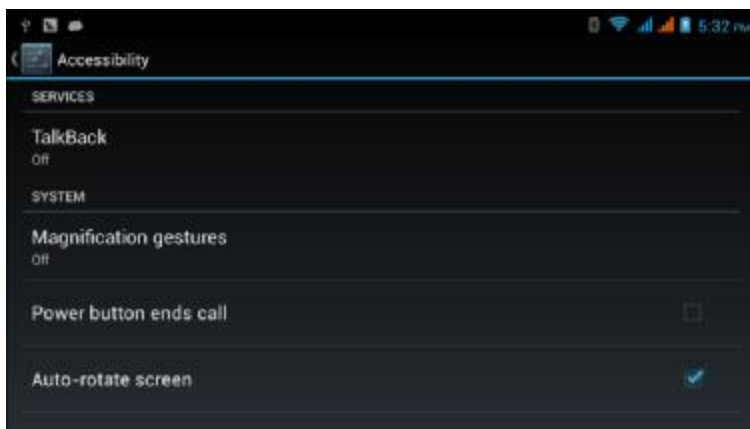 


Image 4.62

#### .18-4 Install Webpage Script

Once the system is open, It will allow you install webpage scripts (while increasing browsing risks).

#### .19 Engineer Selection

##### .19-1 USB Adjustment

This option will allow you can use the Phablet's software, but if the USB adjustment option is turned on, the USB storage will require manual settings.

##### .19-2 Continuous Active State

If your device is set in this option, it will not enter into a sleep mode as long as your Phablet is charging.

### .19-3 Pointer Location

When you open the Pointer Location mode, it will display touch-trace for vertical and horizontal direction.

### .19-4 Show Touches

When you open this option, it will display touch areas on the screen and it is suggested to have this option match the pointer's location.

### .19-5 Show Screen Update

This option will display given areas being refreshed.

### .19-6 Show CPU usage

The information about the status of the Phablet's CPU will appear on the upper right hand side corner as shown on image 4.63.

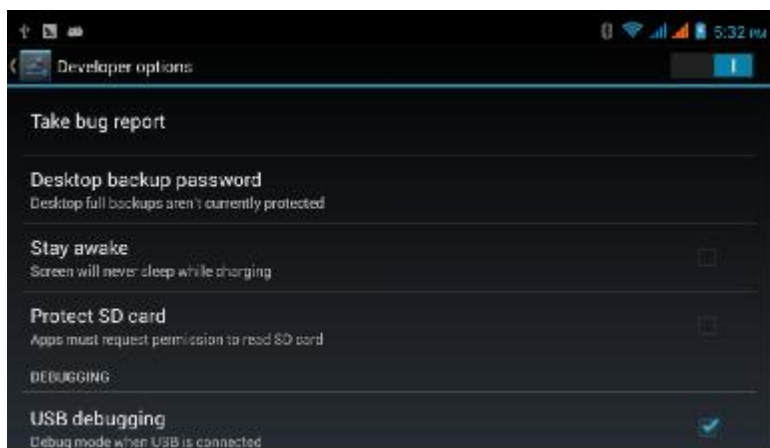 


Image 4.63


## .20 About Your Phablet

Check the Phablet's Status

1. Check **Setting** application.
2. Select **About tablet**, check **State Message**, **Model**, **Android Version**, **Version #** among other information.
3. Select the **State Message**, check **Battery State**, **Battery Volume**, **SIM State**, **IMEI #**, **IP Address**.

## Multimedia

### .1 Music

To enter into the music player: On the menu or desktop select the music  icon, and choose the music you want to play, as shown in Image 5.1.

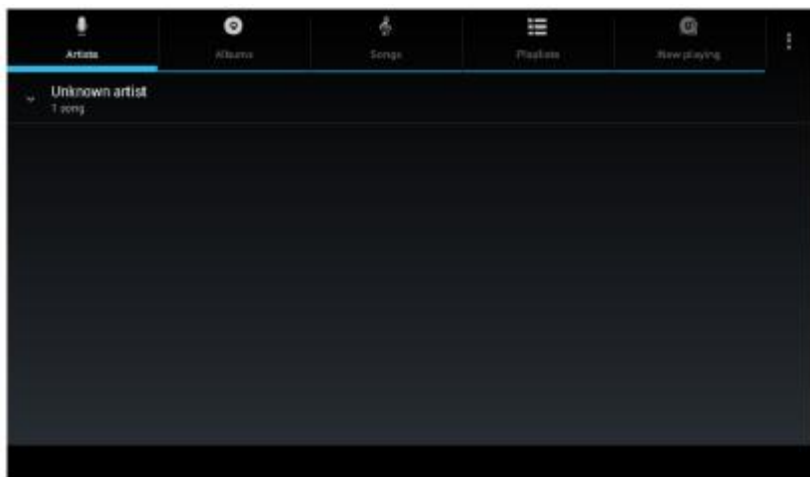 


Image 5.1

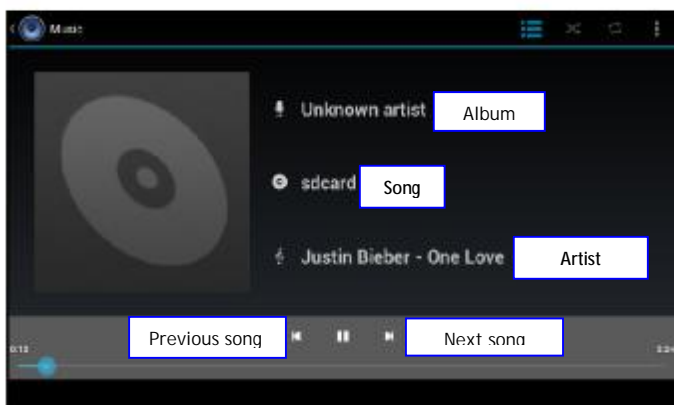 



Image 5.2

- I Drag the selector to modify the track's state.
- I Image of an active track being played as shown in Image 5.2

## .2 Video

- I To enter into the video player: In the Main Menu, select video player  application then select the video you wish to play.
- I The video player buttons are shown in Image 5.3.

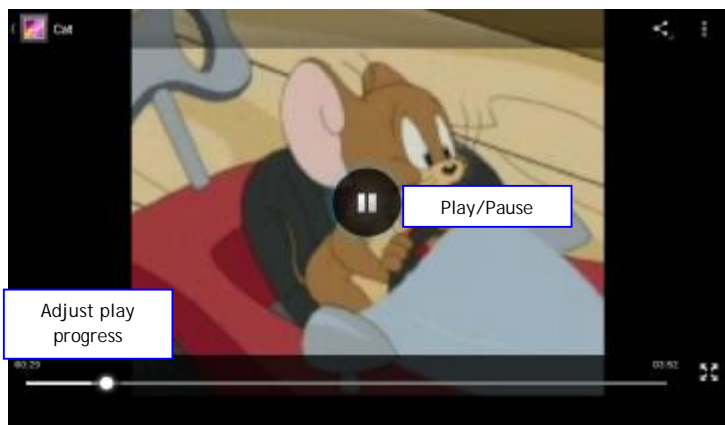 


Image 5.3

### 5.3 Photo Gallery

In the **Photo gallery** application you can search for photos and video files stored in the SD card and this function will organize all photos and videos in a folder. You can use the Photo Gallery option to view and edit photos, set the photos as wallpaper and watch the video.

#### View pictures


1. Select Photo Gallery option in the main menu.
2. Once inside the Photo Gallery, select the desired folder and open any image.
3. Select the picture you want to view and the system will automatically display it in a full screen mode.
4. The pictures can be zoomed in and out, to zoom out place two fingers on the screen and slide them apart and to zoom in, bring your fingers together.

Please note that when you browse through your pictures you can do it from left to right and vice versa.

#### Edit and set pictures

When pictures are in full screen mode, select Menu to display menu options, you may select the image to be edited.

#### Slide Show

1. Open a picture use virtual key to select Menu, this option will display the Menu.
2. Select **Slide Show**, it will auto loop by default play (or choose  button in picture folder)


#### Crop

1. Select the **Menu** key to display menu options.
2. Select Crop and then select & drag the cropped area enabling the crop function.
3. Select cropper and you may drag it in or out and this will allow to operate with any given section of the image.
4. After adjust the desired area or size, select **Crop**.
5. You may **cancel** the crop option and the image will remain unchanged.

 
## I **Edit**

1. Select the **Menu** key to display menu options.
2. Select **Edit**.
3. In this option you may adjust the following settings: brightness, style, color and antialias.
4. Select **Save**.
5. To cancel press the **Return** key and it will remain unchanged.


4 Camera

to select the camera application in the main menu or desktop  , then you will enter into the camera option.


- 1 Camera option: select the Menu key, then select switch front/back camera, as shown in Image 5.4

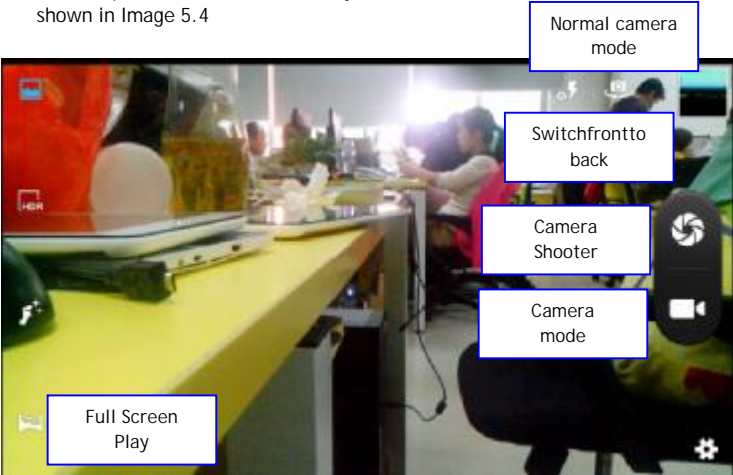

5 FM Radio

in the Main Menu option select FM Radio .

 - 1 The instruction to use the radio are shown in image 5.5.

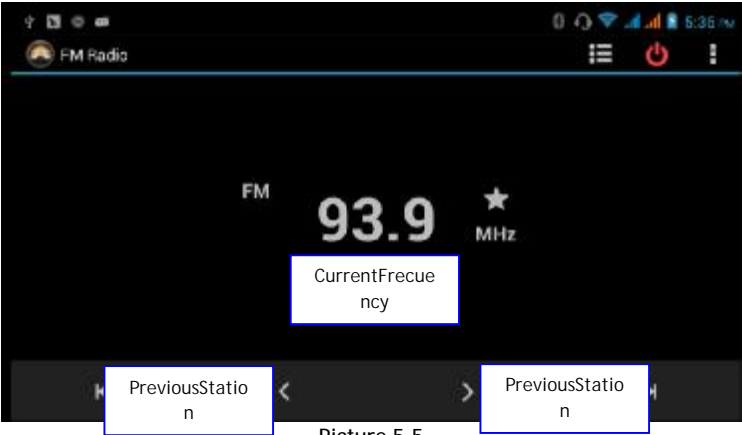

Picture 5.5

to search for a FM station, follow details shown on image 5.6

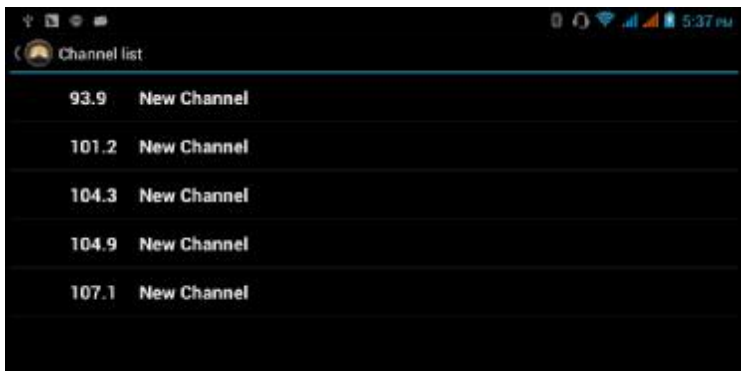 


Image 5.6

- I To save stations Select the star  button, and will be added to a list.

lease bear in mind that you will need to plug in your earphones in order to activate the radio the earphone's cable works as the Phablet's Antennae).

## Communications

### 6.1 Phone

Select **Phone** application

- 1 Please follow details shown in Image 6.1.



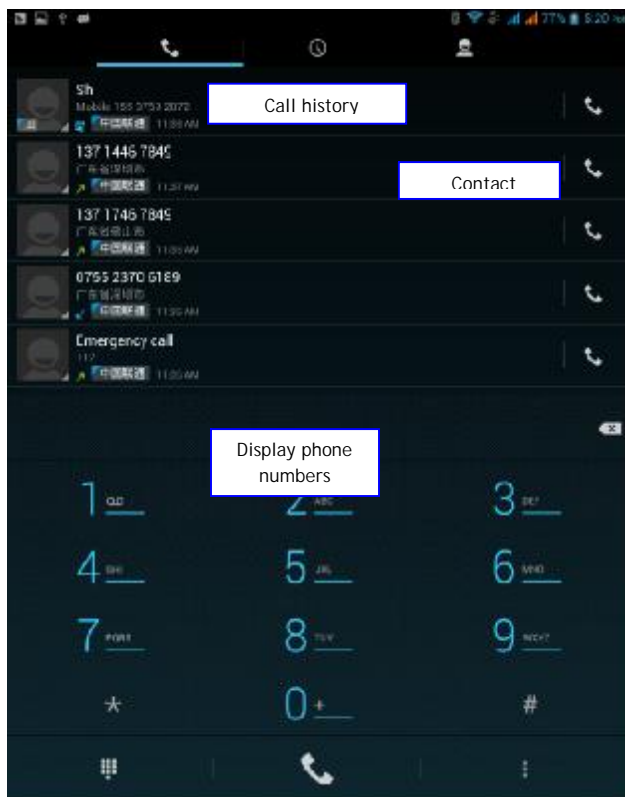 


Image 6.1

.2 Text Messages



Main Menu, select message icon  
Select “Edit New Message”

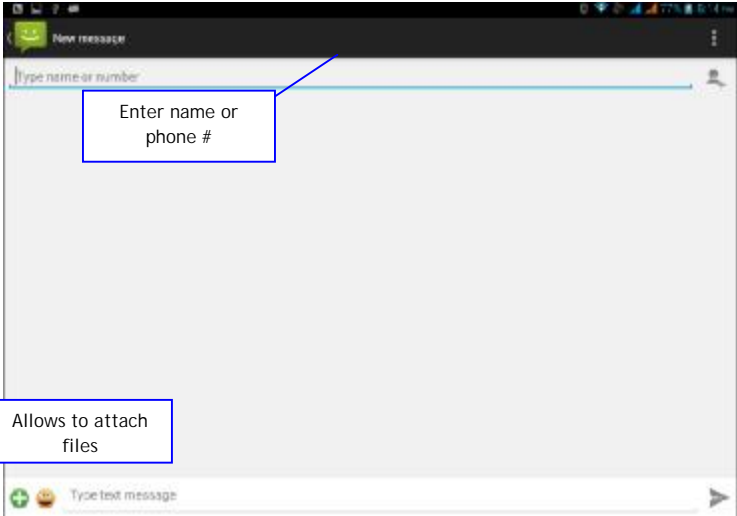 


Image 6.2

.3 Contact List



elect Contact list in the main menu and then enter into the contact list as shown in image .3.

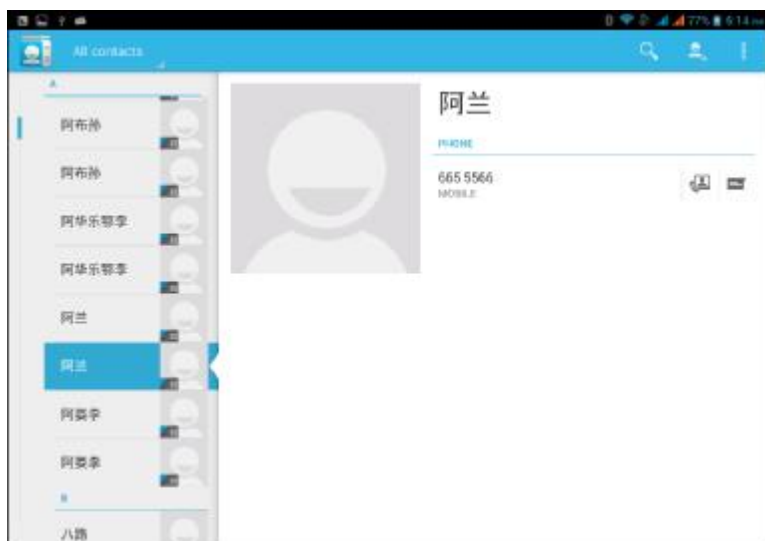 




Image 6.3

Search contact: Select  button, enter into search function

Add contact: Select  button, enter into add contact function.

## . Internet

### .1 Browser

You may connect or open internet via Wi-Fi or mobile network (please refer to Section 4.1), select the browser icon  in the main menu or desktop to as shown in Image 7.1.

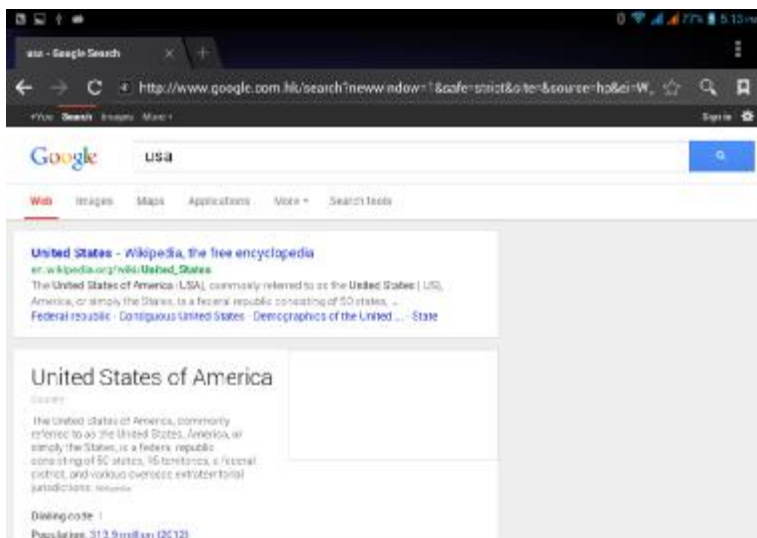 


Image 7.1

type in the desired website, select start and this should lead you to a webpage, then you may browse the website information, as shown in image 7.1.2 you will be able to refresh, save bookmarks, share pages, view browsing history and special settings.

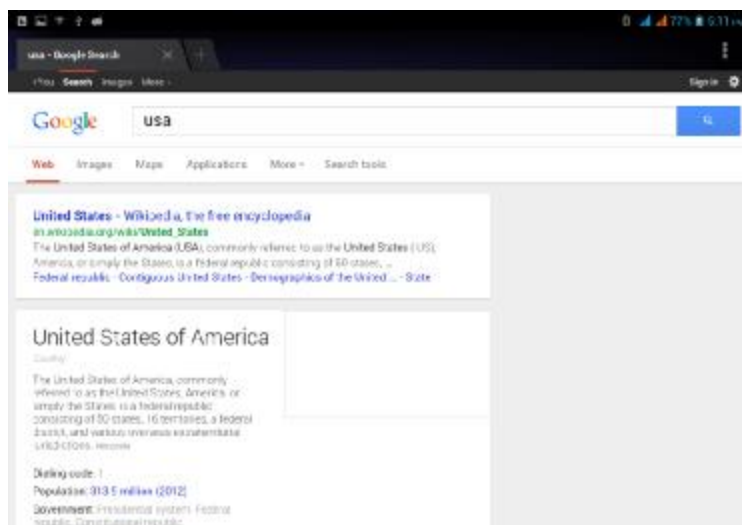 


Image 7.1.2

## 7.2 Email

The Email application contains email setting guide, you may add external POP3 or IMAP email accounts from web email service provider (For instance, Yahoo, Gmail, Hotmail), as shown in page 7.2

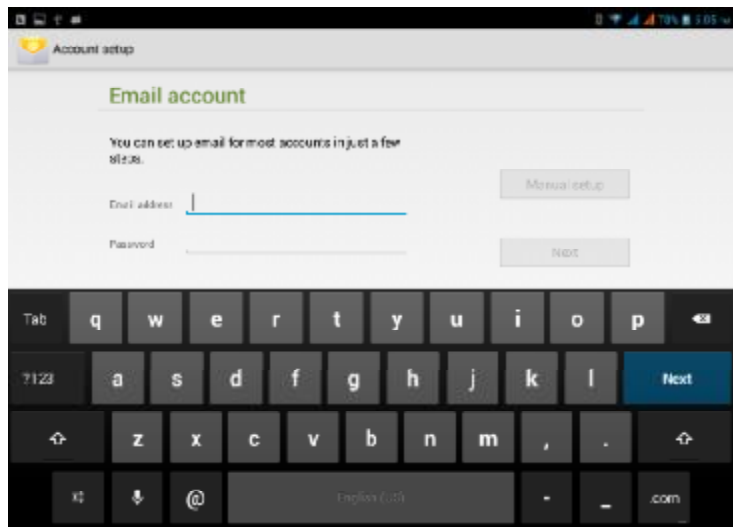 




Image 7.2

## . Email Setting



1. After you select the email icon , you will see the email setup instructions.
2. Enter your email and password.
3. Select “Next step” button, choose your email type: POP3 or IMAP.
4. Select “Next Step” button to check if the email box service can receive or send messages.
5. Enter the email account and text in the subject field, and press Finish.
6. If the email mailbox is available, you will have immediate access.

## . Delete an email account

ou may delete POP3 or IMAP email accounts from your Phablet by selecting  icon.

1. Enter to your mailbox.
2. Press the Menu key.
3. Select Account
4. Select the account to be deleted.
5. You will be prompted to confirm.

## . Send E-mail

1. Select the  icon.
2. Select inbox refreshing with new incoming emails and select the messages to be read.
3. Select Menu option and a popup screen will appear.
4. Select Edit  to draft or edit new messages.
5. Enter the recipient's email address.
6. Enter subject and email content.
7. To add an attachment, select the menu key and a popup screen will appear.
8. Select “Attach File” (photo, music, video, contacts).
9. Click “Send” to send message.

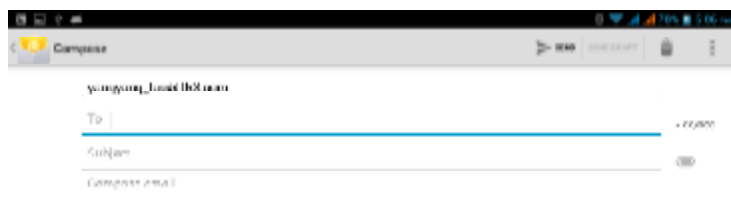 


Image 7.3

## Other Application Procedures

### 9.1 Clock

elect **Clock** option and you will enter into the screen shown below, Image 9.1. You will view the following buttons: Picture, music and homepage buttons.

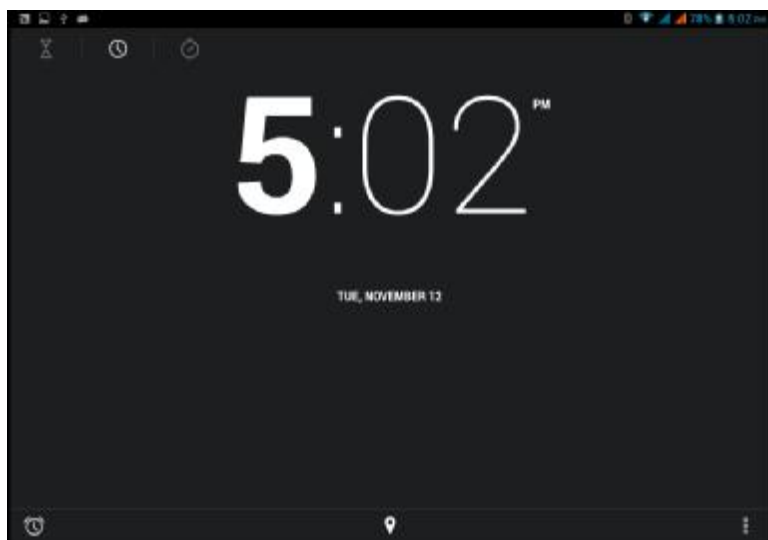 


Image 9.1

### 9.2 Calculator

1. Select the Calculator Icon






2. You will enter into Calculator's keypad and you will be able to engage any operation offered by this feature.

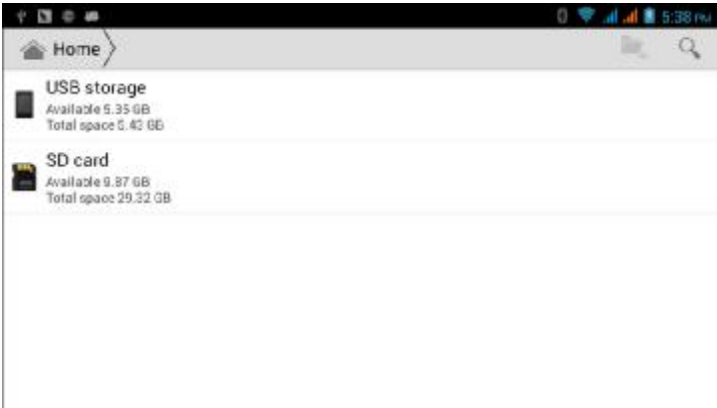 


Image 9.2


9.3 File Manager

The File Manager will allow you to copy, cut, delete, rename documents in the built-in (NAND) memory or SD Card; share the files, install applications and other features.

To enter into the File Manager, main menu, then the File Manager icon  to view the document manager.



Picture 9.3

To paste, copy or cut a file then you will be able to paste the chosen file (see Image 9.5), select the  icon located on the upper right hand side corner, enabling you view the following screen (Image 9.6).

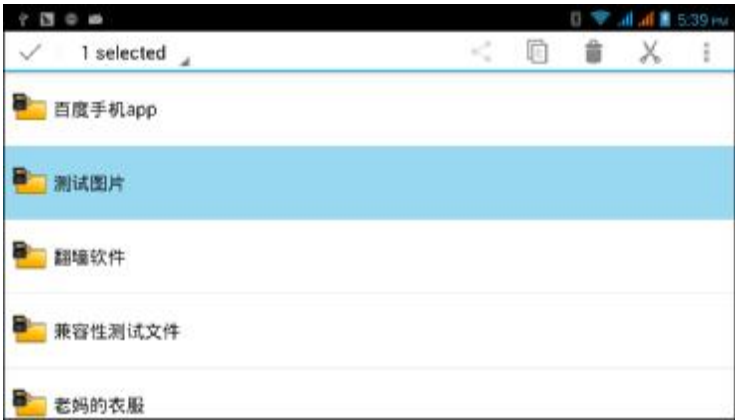 


Image 9.4

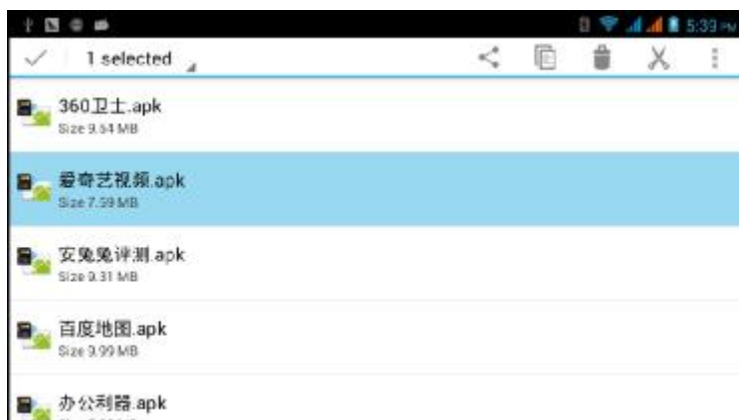 


Image 9.5

to share a file: Select the desired file (long press) a popup share option will appear, offering share options, such as those shown on Image 9.6.

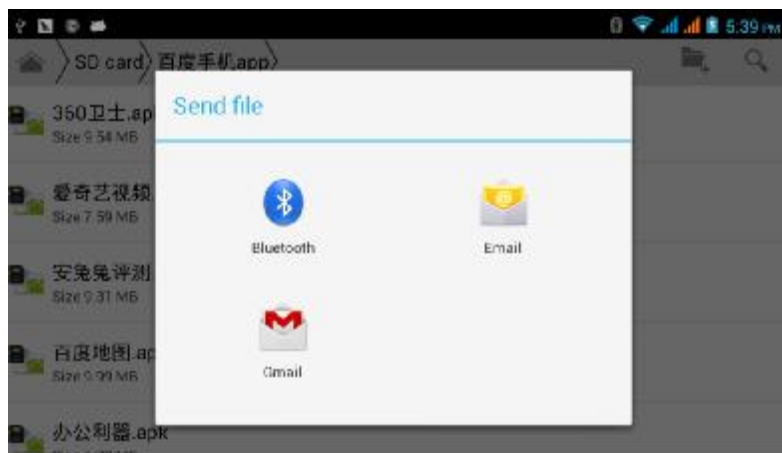 



Image 9.6


to install an application: Choose the file's suffix (.apk) shown in the file manager, allowing to install third party software.

to create a new folder: Choose the location for the new file, select the  icon on the upper right hand side corner choose New Folder.

#### 9.4 Recorder

to launch the recorder: From the main menu or desktop, select the recorder icon  launching the recording screen,

to start and stop recording: Press the record key  to start and to stop recording (a pause button will appear). For playback

press the Play key . The system will prompt you in case you choose not to save and this takes place manually.

The recorded file can be viewed in the source manager, and played either at a music and/or video player.

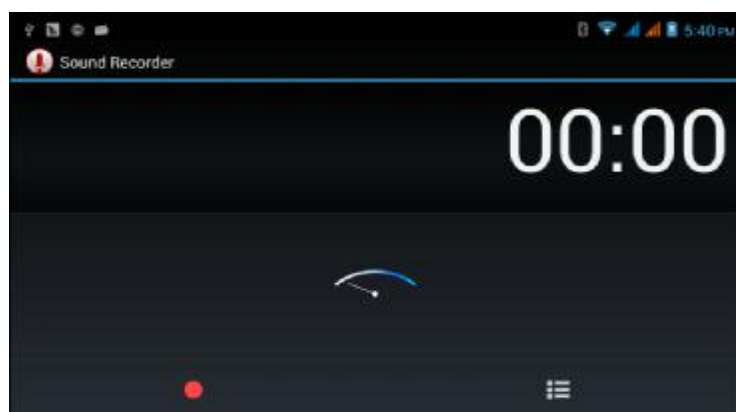 


Image 9.70

## Third Party Software Installation

### 1. Installation

#### Third Party Application Setup

1. Select “File Manager” application; choose the application to be installed.
2. Hold the application to be installed.
3. A popup **install** message will appear select **install apk**.
4. Complete installation.

Please note that all third party applications are suffixed with .apk.

### 2.1 Uninstall

Select setting icon in the Main Menu.

Select **Manage Application**, showing a list of all applications available.

Select the APK you want to delete then select **uninstall**.

Select **confirm** to finish.

The File Manager offers many options to delete applications.

## 0 Troubleshooting

### 1. Slow Startup

- Once the Phablet software is upgraded and updated, the applications will be installed and this could take between 3 and 5 minutes. Once the information is uploaded startups will be faster.

### 2. No Wi-Fi Connection

- Check that wireless routers are working properly and your Wi-Fi connection is active (ON).
- In case of wireless router connections, make sure you have a proper distance between the router and Phablet without obstacles.
- Check and confirm your access login and password.

### 3. The Phablet Feels Hot

- When using multiple applications simultaneously and/or a high brightness intensity setting the Phablet will warm up.

### 4. Email Problems.

- Make sure to have a proper Internet connection.
- Make sure your email is properly configured.
- Make sure your time zone is properly set.

### 5. The System is not Working Properly.

When third party applications are installed, it could generate abnormalities and you may press the Reset Key to restart the Phablet.

#### . Cannot Open Webpages

- Please make sure to have a proper distance between the Phablet and signal source (ex. Router, access point).
- Please reset WIFI and try again.

#### . The Phablet Performs Slow

his can happen from time to time. If your Phablet is running multiple applications, you may lose those not being used and if necessary, delete third party applications.

## FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Tablet (FCC ID: ZL9-SP6020) has also been tested against this SAR limit. *The highest reported SAR values for head, body-worn accessory, product specific (wireless router), and simultaneous transmission conditions are 0.38 W/kg, 0.41 W/kg, 0.36 W/kg, and 0.56 W/kg respectively.* Compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.