



IT


EN

ISTRUZIONI PER UN FUNZIONAMENTO SICURO DEL RADIOCOMANDO

Il Radiocomando può essere utilizzato da bambini di età non inferiore a 8 anni e da persone con ridotte capacità fisiche, sensoriali o mentali, o prive di esperienza o della necessaria conoscenza, purché sotto sorveglianza oppure dopo che le stesse abbiano ricevuto istruzioni relative all'uso sicuro dell'apparecchio e alla comprensione dei pericoli ad esso inerenti. I bambini non devono giocare con il Radiocomando. La pulizia e la manutenzione destinata ad essere effettuata dall'utilizzatore non deve essere effettuata da bambini senza sorveglianza.

White KITO165599


LEGENDA Tasti

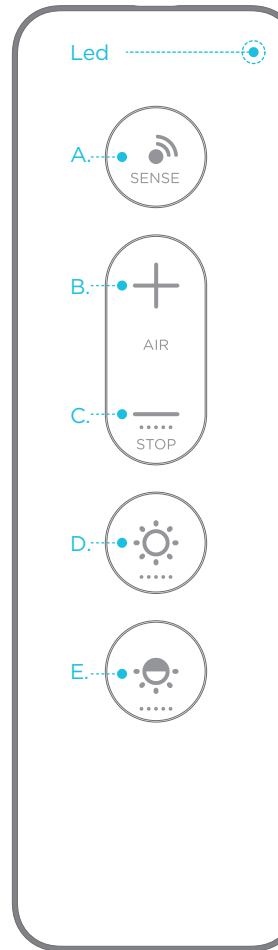

LEGENDA Led



LEGENDA Tipi di pressione sui tasti

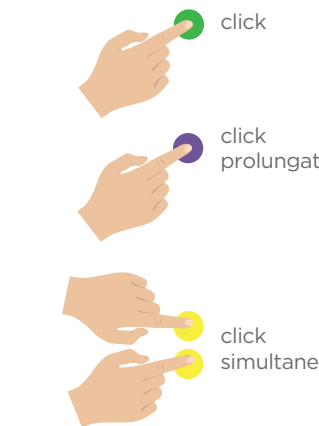

ATTENZIONE!

Alcune funzioni, qui contrassegnate con (~), sono attivabili solo su alcuni modelli di cappa. Fare riferimento al manuale d'uso della propria cappa per maggiori informazioni.

ATTENZIONE!

Per poter controllare la cappa tramite radiocomando è necessario eseguire la procedura di affiliazione (vedi 1 | AFFILIAZIONE).

RICARICA DEL RADIOCOMANDO!


Collegare il cavetto USB in dotazione al radiocomando e ad un caricabatterie con presa USB a 5Volts certificato. Attendere che il LED diventi verde fisso.

IN CASO DI MALFUNZIONAMENTO

Seguire la procedura di assegnazione nuovo codice (vedi 14 | ASSEGNAZIONE NUOVO CODICE). Poi scollegare e ricollegare la cappa alla rete elettrica e ripetere la procedura di affiliazione (vedi 1 | AFFILIAZIONE).

1 | AFFILIAZIONE


Scollegare e ricollegare la cappa alla rete elettrica ed entro il primo minuto premere per 5 secondi i tasti **B** e **E**.

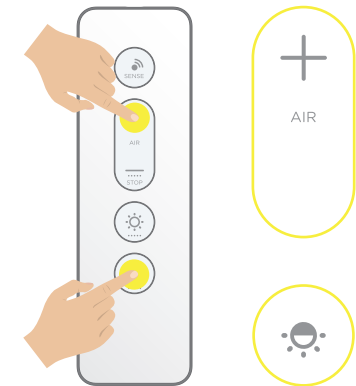


NOTA!

Nel caso l'affiliazione non sia riuscita scollegare e ricollegare nuovamente la cappa alla rete elettrica e ripetere la procedura di affiliazione.


2 | ACCENSIONE CAPPA 3 | INCREMENTO VELOCITÀ

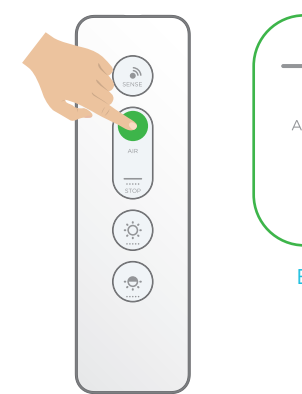


4 | SPEGNIMENTO RITARDATO TEMPORIZZATO (della velocità attuale) (#)

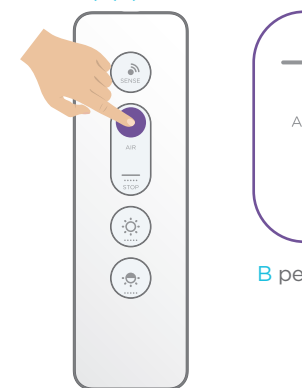


5 | DECREMENTO VELOCITÀ (fino allo spegnimento della cappa) 7 | ACCENSIONE LUCE (direzionata sul piano cottura)

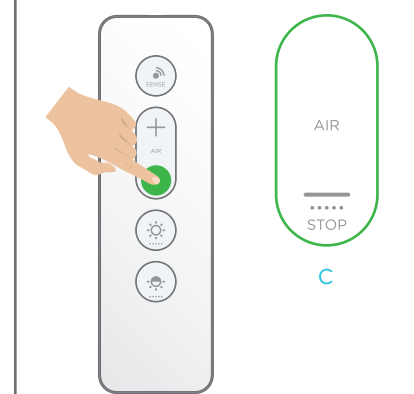

6 | SPEGNIMENTO CAPPA (#)

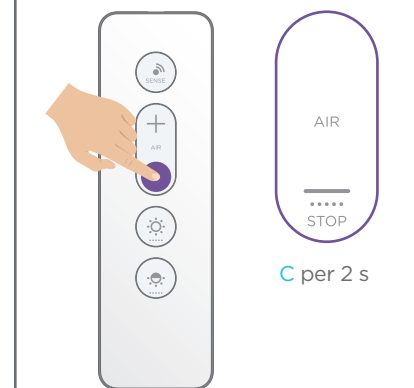

9 | ACCENSIONE LUCE AMBIENTE (#)

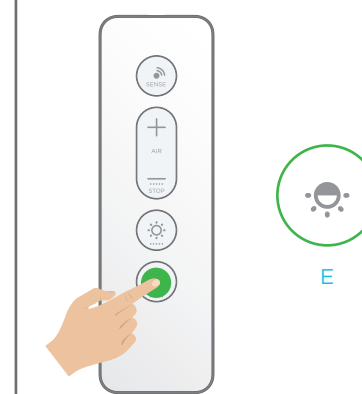

8 | REGOLAZIONE INTENSITÀ LUCE (direzionata sul piano cottura) (#)




10 | REGOLAZIONE INTENSITÀ LUCE AMBIENTE (#)



11 | REGOLAZIONE TONO ILLUMINAZIONE (luce calda/luce fredda) (#)



12 | ATTIVAZIONE SENSORE (#)

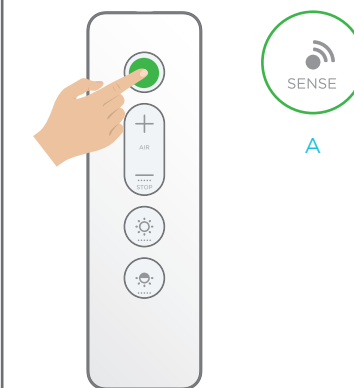

13 | RESET FILTRI (#)



14 | ASSEGNAZIONE NUOVO CODICE



INFORMAZIONI SULLA SICUREZZA
Utilizza il Radiocomando con cura, contiene delicati componenti elettronici. Il Radiocomando può danneggiarsi se fatto cadere, bruciato, perforato o schiacciato o se entra in contatto con sostanze liquide. Non aprire il Radiocomando e non tentare di ripararlo autonomamente. Se disassembli il Radiocomando potresti danneggiarlo.

BATTERIA


Non tentare di sostituire autonomamente la batteria del Radiocomando poiché potresti danneggiarlo.

Con la presente Elica dichiara che questo radiocomando è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva RED 2014/53/EU. La dichiarazione di conformità può essere consultata al seguente link:
<http://elica.com/DeclarationOfConformity.pdf>


INSTRUCTIONS FOR SAFE OPERATION OF THE REMOTE CONTROL

The remote control can be used by children who are younger than 8 years old and by persons with reduced physical, sensory or mental capacity, or without experience or the specific knowledge, as long as they are under surveillance or after they have received instructions regarding the safe use of the remote control and understand the dangers related to it. Children must not play with the remote control. The cleaning and maintenance that should be carried out by the user should not be done by unsupervised children.


KEY Keys

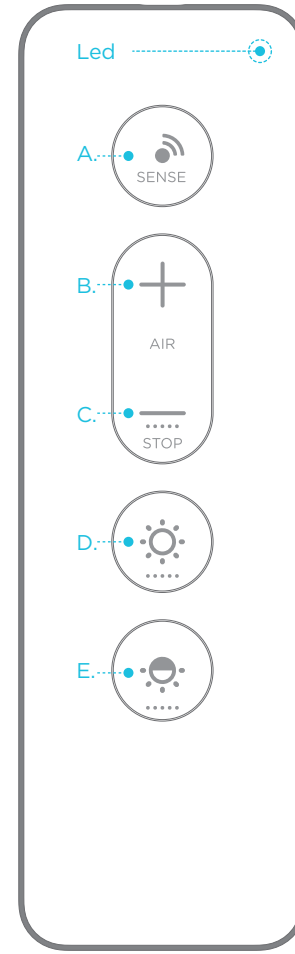

KEY Led

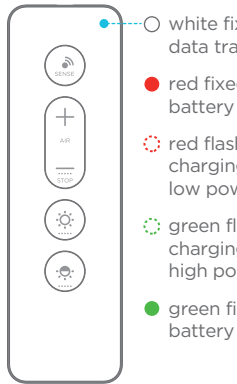

KEY Key pressing methods

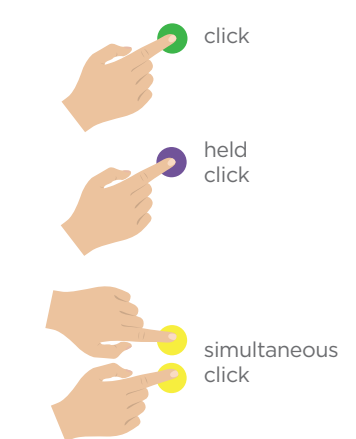

CAUTION!

Some functions marked here with an (#) can only be activated on certain hood models. See the operation and maintenance manual of your specific hood for further information

CAUTION!

To control the hood via remote control, the affiliation procedure must be carried out (see 1 | AFFILIATION)

RECHARGE THE REMOTE CONTROL!


Connect the supplied USB cable to the remote control and to a battery charger with a certified 5V USB port. Wait for the LED to start flashing green

IF THERE IS A MALFUNCTION

Follow the procedure for a new code allocation (see 14 | NEW CODE ALLOCATION). Then disconnect and reconnect the hood to the power supply and repeat the affiliation procedure (see 1 | AFFILIATION).

1 | AFFILIATION


Disconnect and then reconnect the hood to the power supply and within the first minute, press keys **B** and **E** for 5 seconds.

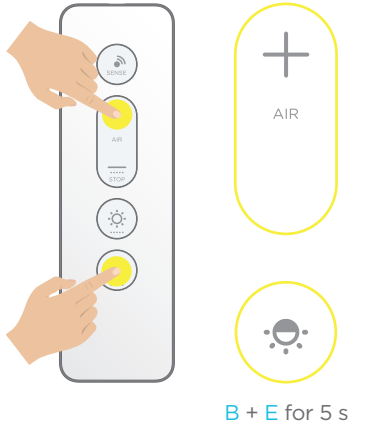

NOTE!

If a liation is unsuccessful, disconnect and then reconnect the hood to the power supply and repeat the affiliation procedure.


2 | HOOD ON 3 | INCREASE SPEED

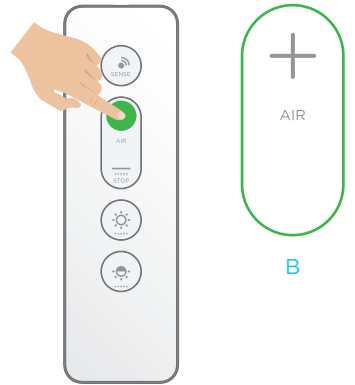

4 | DELAYED TIMED SHUT-DOWN (of current speed) (#)




5 | DECREASE SPEED (until hood shuts down)

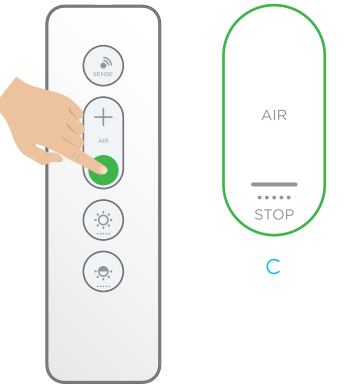


6 | HOOD OFF (#)




7 | LIGHT ON (directed onto hob)

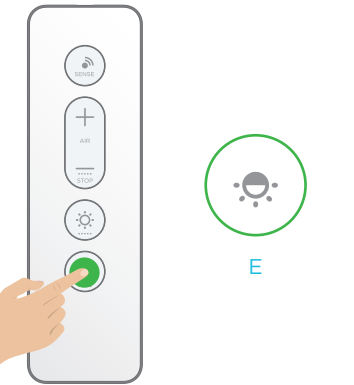


8 | LIGHT REGULATION (directed onto hob) (#)

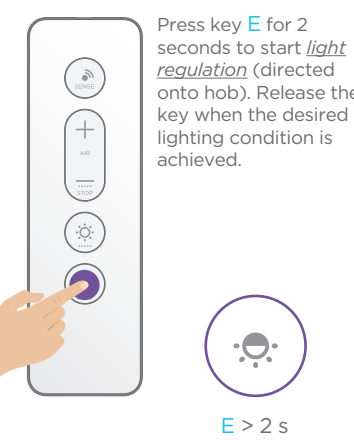


9 | AMBIENT LIGHT ON (#)

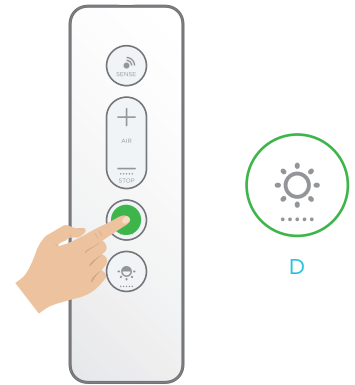


10 | AMBIENT LIGHT REGULATION (#)

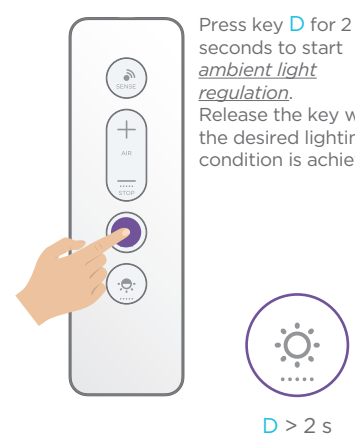


11 | LIGHT TONE REGULATION (warm/cold light) (#)

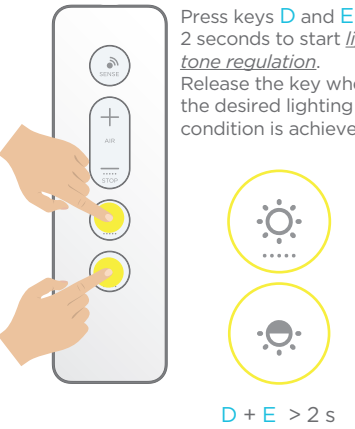


12 | SENSOR ACTIVATION (#)

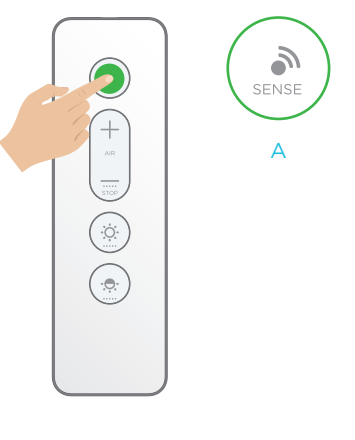

13 | RESET FILTERS (#)

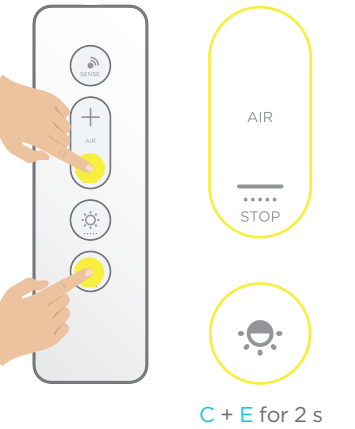

14 | NEW CODE ALLOCATION

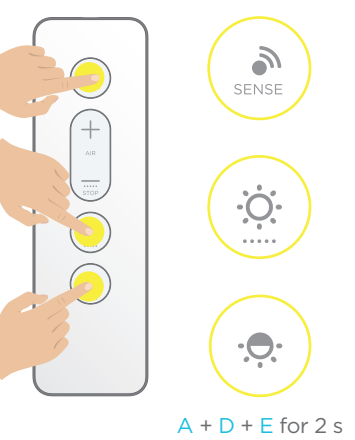

SAFETY INFORMATION

Use the remote control with care; it contains delicate electronic parts. The remote control may be damaged if dropped, burned, pierced or crushed, or if it comes into contact with liquid substances. Do not open the remote control and do not attempt makeshift repairs. If the remote control is disassembled, it may be damaged.

BATTERY

Do not attempt to replace the remote control battery using your own initiative, as it may be damaged.

This certificate attests that this remote control is in compliance with the essential requirements and other pertinent dispositions established by Directive RED 2014/53/EU. The Declaration of Conformity can be viewed at the following link: <http://elica.com/DeclarationOfConformity.pdf>

CONFORMITY

Elica remote control complies with the following requirements:
-FCC (Federal Communications Commission) Part 15.
Operation is subject to the following two conditions:
1) This device may not cause harmful interference and
2) This device must accept any interference received, including interference that may cause undesired operation.
Changes or modification not expressly approved by the party responsible for compliance could void the user's

authority to operate the equipment.
NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rule. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measure:
-reorient or relocate the receiving antenna.
-increase the separation between the equipment and receiver.
-connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-consult the dealer or an experienced radio/TV technician for help.

DISPOSAL WARNING

Do not dispose of electrical products in the general waste and ensure the used product or batteries are disposed safely according to your local authority and regulations.

