


1. Before using your Hands-Free BHF-200

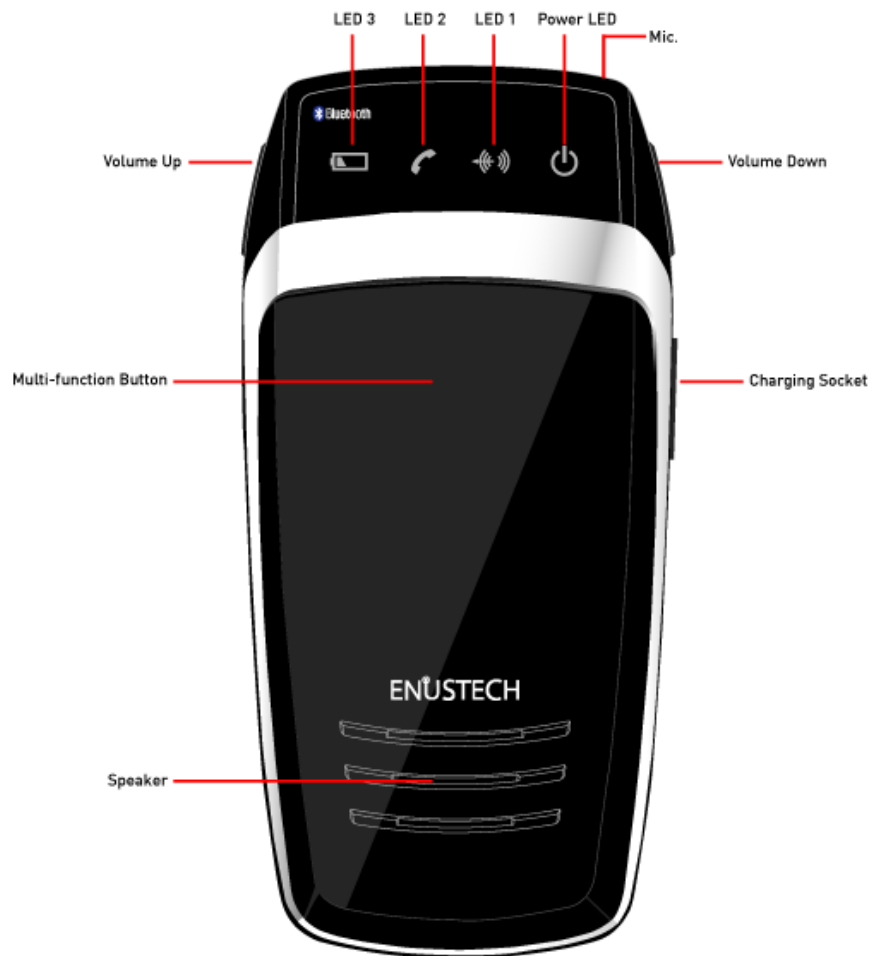

Status Indicators

- 1) Power LED – Power on mode
- 2) LED 1 -> Connecting Status
Stand by Mode : two times blinking every two second
Pairing Mode : blinking continuously.
Active Mode : Power on continuously
- 3) LED 2 -> Call Activity Status
Sending and Receiving Phone Call : Blinking shortly
Using Hands Free : Power on continuously
- 4) LED 3 -> (Low battery Status) : LED blinking continuously

2. Charging Your Hands-Free

Use the vehicle power charger provided.

BHF-200 uses a rechargeable battery that must be fully charged before you use it for the first time.

Connect the supplied vehicle power charger to power socket and then to your Hands-Free. The status of indicator on Vehicle charger will be illuminated red while charging and change to Green when the Hands-Free is fully charged.

It takes approximately 2 hours to fully charge the Hands-free

NOTICE:

If battery is Low, Blue light of the LED 3 will blink in every second.

3. BLUETOOTH PAIRING

Before using your hands-free for the first time with a mobile phone or another Bluetooth device, you must first pair it with the device.

Follow the steps below for most devices. You can also refer your phone user guide.

- 1) Turn on both devices.

For Hands-free, press the multifunction button for two seconds.

- 2) Place the Hands-free in pairing mode by pressing and holding the volume down

button for six seconds. Release the button when the status indicator begins to flash with beep sound.

NOTICE:

If the pairing is not successful for two minutes, the Hands-free becomes to stand-by mode.

- 3) Use your phone's menu to search for Bluetooth audio devices and select "BHF-200"
- 4) When the phone display asks for a pass key, enter "0000".

The Bluetooth icon appears on the display, once the hands-free successfully paired.

If the Hands-free stops responding to button presses, you must reset the Hands-free.

4. USING YOUR HANDS-FREE

1) Power On / Off

Press the multifunction buttons for two seconds in order to turn on the device.

Press the multifunction buttons for five seconds in order to turn off the device.

2) Connect the Hands-free to the phone

When disconnected, the Hands-free can be re-connected to the phone by simply short pressing the multifunction button.

3) Disconnect the Hands-free from the phone

Press the volume up /down button simultaneously

4) Answer / End / Place a call

To answer a call, short press the multifunction button.

To end a call, long press the multifunction button for two seconds.

To place a call using voice dialing, short press the multifunction button.

If you are on a call using your phone handset, you can transfer the call to your Hands-free by two times press of the multifunction button.

5) Call transfer back to phone

To transfer a call from your Hands-free back to your phone, two times press of the Multifunction button.

6) Call reject

To reject a call without answering when the Hands-free is ringing, long press the volume up and multifunction buttons simultaneously.

7) Last number redial

To redial the last number, two times press the multifunction button.

8) Volume Up / Down

Press the volume up / down button to adjust the volume

Regulatory Information

FCC compliance Information

This device complies with part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received.

Including interference that may cause undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio Frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

The no co-location statement: "This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter."