

Front

billboard®

Active Noise Cancellation Wireless Headphone BB2609



Headphone Specifications:
Driver Unit Size: 2" 40mm
Frequency Response: 20Hz-20KHz
Impedance: 32 Ω

Battery Information:

Built-in Battery: Lithium
Battery Capacity: 300mAh
Music playing time: 10 hours
Charging time: 2 hours

*Approximate playback time. Battery life depends on individual use and may be slightly more or less than the time specified.

Bluetooth Information:

Bluetooth Specification: V5.0
Operating Distance: 10m
System Requirements: Bluetooth-capable device

Additional Connection Sources:

Power Source: Built-in rechargeable battery or via USB cable

Active Noise Canceling: 18dB



Buttons & Functions

- | | |
|--|----------------------------|
| A. Active Noise Cancellation | E. 3.5mm Aux Input Port |
| B. Volume Up/Next Track | F. Micro USB charging port |
| C. Volume Down/Previous Track | G. Microphone |
| D. Power ON/OFF Play/Pause, Answer/End Calls/Reject/Redial | H. Charging Cable |
| | J. LED indicator |
| | K. 3.5mm auxiliary cable |



Charging the Headphones

1. Plug the micro USB cable into the micro USB port on the headphones, and connect the other end of the cable to either a computer USB port or to a USB-compatible car or wall charger.
2. The charging LED light will turn red during charging.
3. When the battery is fully charged, the charging LED light will turn blue.
4. Charging time is approximately 2 hours.
5. Headphones will make a sound when the battery is low.

Turn On/Off

- **To power on:** Press and hold the power icon on. The LED lights will flash blue and red alternately.
- **To power off:** Hold the power icon until The LED lights goes off.
- If there is no device paired within 5 mins, the headphones will turn off automatically to save battery.

Playing Music

To listen to music on the headphones, you must be paired to a Bluetooth-enabled device or connected via the 3.5 mm aux port. Consult the **Bluetooth Pairing or Connecting with a 3.5 mm Aux Cable** section of this manual for further instruction.

Bluetooth™ Connect with a new device

1. Turn the headphones on, The LED light will flash blue and red alternatively.
2. On your Bluetooth™-enabled device navigate to the Bluetooth™ settings, turn on the Bluetooth feature and search for new devices.
3. After a few seconds you will see it's pairing name listed as **BB-BT-HP**
4. Tap the display name to select it. The headphone will have A Chime sound and the blue LED will Flash every 4 seconds when it is successful pairing with your device .

** If your device asks for a pin code, enter 0000 or 1234.

Wireless Audio Control

1. Once you have connected to your Bluetooth™ enabled device (refer to the "Bluetooth™ Connect with a new device" section) open an audio app on your device, and press play.
2. On the headphone controls:
 - press and hold the Volume UP button to raise the volume.
 - press and hold the Volume Down button to lower the volume.
 - press the Volume UP button to next track.
 - press the Volume Down button to previous track .
3. You can pause and resume music playback by pressing the Power ON/OFF button.

Answer/End Calls/Reject/Redial

1. When there is a call, press the Power ON/OFF button to answer. After the call press the Power ON/OFF button to hang up.
2. When there is a call, press and hold the Power ON/OFF button to reject the call.
- ** If the other party hangs up first, you do not need to press the button.
3. If you need to redial the last number called, quickly press the Power ON/OFF button twice .

Connecting with a 3.5 mm Aux Cable

Plug one connector of a 3.5 mm auxiliary cable into the 3.5 mm aux input port on the bottom of the left earcup. Plug the other connector into the audio output port on your media-playing device.

- In auxiliary mode, playback and volume will be adjusted with the controls on your connected device.
- The headphones will automatically power OFF when a 3.5 mm aux cable is plugged.

Using the Active Noise Control

The headphones' Active Noise Control (noise cancelling) feature reduces unwanted noise from the outside environment. You can use ANC while listening to audio, or use ANC by itself.

- Press the **[ANC]** button to turn on Active Noise Control (noise cancelling). The ANC LED indicator will **Light up solid Green**.
- Press the **[ANC]** button again to turn ANC off. The ANC LED indicator will turn OFF.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music and making phone calls.

Back

Battery information

- Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.
- Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.
- Never use any charger that is damaged.
- Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged.
- Always dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste

Technical Support: techsupport@esicellular.com or call 212 883-8838

© 2019 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC.

Bluetooth™ is a registered trademark of Bluetooth SIG

Limited Warranty

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases and Accessories.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Send device with the product to:

ESI Cases and Accessories
44 East 32nd Street, 6th floor, New York, New York 10016
*Enclose proof of purchase and \$11.95 for Shipping and Handling.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Your Wireless Headphones have an internal rechargeable battery. Improper usage may result in the Wireless Headphones becoming hot, ignite or burst and cause injury if exposed to conditions of abuse.

Be sure to follow the safety warnings listed below:

1. Do not disassemble, throw away or damage the Wireless Headphones.
2. Store the Wireless Headphones in a dry place, keeping it away from damp corrosive materials and environments such as salt air.
3. Keep the Wireless Headphones away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Headphones inside a car during hot weather. Remember a closed car acts as a green house allowing the inside temperature to possibly reach over 200F.
4. The Wireless Headphones are not a toy. Please keep it out of the reach of young children.
5. Please do not discard the Wireless Headphones. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2recycle.org" for a battery recycling drop off location near you.



Charging the battery

This device has an internal, rechargeable battery.

1. Plug the charger cable into the Headphones.
2. Connect the charger to a USB power source. The red indicator light will display during charging. If charging does not start, disconnect the charger plug it in again, and retry. Charging the battery fully may take up to 2-3 hours.
3. When the battery is fully charged, the red indicator light will turn blue. Disconnect the charger from the USB Power source and the Headphones. The fully charged battery has power for up to 10 hours of music time or up to 100 hours of standby time. However, the talk and standby times may vary when used with different devices, settings, and environments.

FCC Information

FCC ID: 2AHFC-BB2609

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving equipment.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

205mm

159mm