

INSTRUCTION MANUAL

The device function described as below:

RF wireless remote controller function will operate ipod by FM switch or adjusting FM frequency.

Operation description:

1. During the period, "FUN" key on the remote controller could close FM; or FM frequency could be adjusted by "UP/DOWN" key. The show mode will be exited after FM isn't operated for ten seconds.
2. After exiting the show mode, We could control the function of ipod by operating remote controller: play/pause, volume+, volume-, skip>>, skip<<. Pressing "FUN" key on the remote controller, FM switch will be controlled ; Pressing "UP/DOWN" key on the remote controller, FM frequency will be adjusted ; Pressing "Play/pause" key, it will be continued or stoped temporarily. Pressing "volume+/volume" key, the volume will be turned up or down; Pressing "skip>>/skip<<" key, it will be entered the next or last.



ESI CASES AND ACCESSORIES
Product Name: Wireless Remote
Model No. : MP1045R

FCC ID: UTOMP1045R

THIS DEVICE COMPLIES WITH PART15 THE FCC RULES.
OPERATION IS THE SUBJECT TO THE FOLLOWING TWO CONDITION:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION

Warning:

Do not use or store in dusty, dirty areas.

Do not use the device near water.

Clean only with dry cloth.

Do not attempt to open the equipment. Non-expert handling of the device may damage the system.

Do not change or modification. It is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

