

Congratulations on your purchase of the Multifunction Shower Speaker.
Please read all instructions and warnings in this sheet prior to using your speaker. Keep this instruction sheet as it contains many contains in the sheet prior to the she

SAFETY WARNINGS

- SAFETY WARNINGS
 Inspect the product before every use. If the product appears worn, frayed, cracked, or broken in any manner, discontinue use and discard immediately.

 Do not use more use and user.

 Do not disassemble.

 Do not disassemble.

 Do not disassemble.

 This is not a children's product. Keep out of reach of children.

 Do not allow moisture to enter USB port.

FEATURES

11.69" (297mm)

- Water resistant
 Built in rechargeable battery
 Compatible with BLUETOOTH® devices





CHARGE THE SPEAKER

- CHARGE THE SPEAKER

 1. Remove USB Protector Cover.

 2. Attach the small connector of the USB Charging Cable to the Charging Jack (I).

 3. Attach the soft connector of the cable to a computer's USB port.


 4. A red LED light (I) will turn on, indicating speakers are charging.

 5. Remove the USB cable from computer when the red LED light turns off

 6. Cover (I) with water resistant USB Protector Cover

 7. When the battery is low, and alert note can be heard reminding you to recharge the speaker.

Note: It takes approximately 4 hours to fully charge speakers.

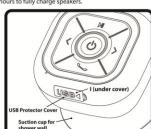

Attach the suction cup to the smoothest surface in your shower. For the best bond, make sure all surfaces

(BC)

8.27" (210 mm)

©2015 Merchsource, LLC. All Rights Reserve

Project Name

BSShowerSpeaker_IM

07.08.2015

 
Revision:

PAIRING THE SHOWER SPEAKER

Your device must have BLUETOOTH* capability. Consult your device manufacturer or user manual if you are unsure if your device has this feature.
Turn off any devices that may have been previously paired to the speakers.

- 1. Press and hold (H) to turn the speaker ON. You will hear a voice say, "Waiting for Device."
- 2. Place your device within 3 feet of the speaker (Figure 1).
- 3. Enable BLUETOOTH® on your device and search for new BLUETOOTH® devices. Refer to your device's manual on how to enable and operate BLUETOOTH®.
- 4. Select SHOWER from the list of BLUETOOTH® available devices (Figure 2).
- 5. A voice from the speakers will notify you when the speaker is successfully paired.
- 6. You can now stream music wirelessly from your device to your speaker.
- 7. After the speaker has been and there is not a BLUETOOTH* device paired to it, it will turn off automatically after 15 minutes.

 $Note: If you \ restart \ the \ Speaker, it \ will \ automatically \ pair \ with \ your \ device. \ A \ voice \ will \ notify \ you \ when \ it \ is \ successfully \ paired.$

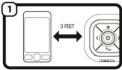




Before exposing the Shower Speaker to moisture, cover the Speaker's USB port with the USB Protector Cover.

CONTROLS

- A. While playing music- press and hold to decrease volume volume/ Short press to skip to previous track. During a call - Press and hold to decrease volume.
- B. Play and pause audio.
- C. While playing music Press and hold to increase volume / Press once to skip to the next song. During a Call - Press and hold to increase volume.
- D. Turns blue when Bluetooth is active.
- E. Answering a call Press once to answer / Press twice to reject. During a call - Press once to end the call. Redialing - Press twice.
- F. Microphone
- G. Red light turns on while charging.
- H. Press and hold to turn on Shower Speaker / Press and hold to turn off Shower Speaker.
- I. Charging jack

The Bluelooth% word mark and logos are registered trademarks owned by Bluelooth SIG, inc. Computers, tablets, Smart Phones, and music players must have built in BUETOOTH® wereless starthough or connect. This product is not affiliated with or endorsed by any of the above mentioned, referenced or pictured trademarks, companies or devices.

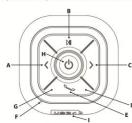

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipmen

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCD Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment operates, uses and can adalate radio Trequency energy and, if not installed and used in accordance with the instructions, may cause humble interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment does cancel harmful interference to radio or believed in recipions, which can be determined by laming the equipment of and on, the user is encouraged to by so correct the interference by one or more of the Tolkinghy missioners:

Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is

Consult the dealer or an experienced radio/TV technician for help

©2015 MerchSource, LLC. All rights reserved.

The Black SeriesTM and all associated logos are trademarks of MerchSource, LLC. Distributed by MerchSource, LLC., Irvine, CA 92618.

For technical support, please visit www.mscustomercare.com or call 1-800-374-2745

The artwork and design of this instruction manual are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this manual.

A RECYCLE WARNING

PLEASE RECYCLE OR DISPOSE OF ELECTRONICS PROPERLY