

Owner's Manual

Please read before using this system.

SYLVANIA

DVD/CD Player with AV Receiver

 
 
 
HT6051F / HT6051FB

5 inch
Disc ONLY


INSTRUCCIONES EN
ESPAÑOL INCLUIDAS.

Supplied Accessory


- Remote control with two AA batteries (Silver: NB140UD) (Black: NB144UD)
- Audio/Video cables (WPZ0102TM015/ WPZ0102LTE01/ WPZ0102CAB01)
- Owner's Manual (1VMN21407)
- AV Receiver (Silver: X6000UD) (Black: X6003UD)
- Speaker Unit (Silver: USPUSPKHYE07) (Black: USPUSPKHYE09)

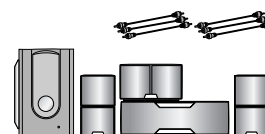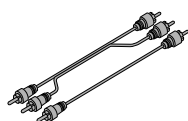

 
- BUS cables 8 Pin: (WX1X6000-007) and 10 Pin: (WX1X6000-006)

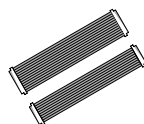

- Foot x 2 (1VM421328)

 

 - Stand x 2 (Silver: 1VM422542) (Black: 1VM422733)



- FM wire antenna (WX1E9000-081)



- AM loop antenna (UANTAMALH002)



Table of Contents

Precautions

Laser Safety	2
■ IMPORTANT SAFEGUARDS	3
Avoid the Hazards of Electrical Shock and Fire	4
Moisture Condensation Warning	4
Installation Location	4
About Copyright	4
Notice for Progressive Scan Outputs	4
Symbols Used in This Manual	4
Maintenance	4
■ About the Discs	5
Playable Discs	5
Unplayable Discs	5

Setup

■ Functional Overview	6
Front / Rear Panel Controls	6
Setting the DVD/CD Player (the AV Receiver)	7
Speaker Setup	7
■ About the Remote Control	7
Installing the Batteries for the Remote Control	7
Remote Control Operation for the DVD/CD Player	8
Remote Control Operation for the AV Receiver	8
■ Connections	9
Connection to the AV Receiver and the Speaker Unit	9
Connection to a TV	10
RF Modulator Connection	10
(If Your TV Does Not Have A/V Input Jacks.)	11

Functions

■ Playback	12
■ MP3/WMA Playback	13
■ Search Function	13
Using Track Search	13
Using Title / Chapter Search	13
Using Time Search	13
■ On-Screen Display	14
■ Marker Setup	14
■ Repeat / Random / Programmed Playback	15
Repeat Playback	15
Random Playback	15
Programmed Playback	15

■ Special Settings	16
Subtitle Language	16
Audio Language	16
Camera Angles	16
Black Level Setting	16
Stereo Sound Mode	16
Dolby Pro Logic II	16
■ DVD Setup	17
SETUP Menu	17
LANGUAGE Setting	18
DISPLAY Setting	18
AUDIO Setting	19
PARENTAL Setting	20
OTHERS Setting	20

AV Receiver

■ AM/FM Radio	21
To Connect AM/FM Antenna	21
Preset Radio Stations	21
Selecting Radio Stations	21
■ Sound Setting	22
Digital Sound	22
Bass Boost	22
Surround Sound	22

Information

■ Specifications	22
■ Troubleshooting Guide	23
■ Language Code List	24
■ Limited Warranty	24
Español	25
Quick Use Guide	27

If you need additional operating assistance after reading this owner's manual, please call
TOLL FREE : 1-800-968-3429
 or visit our web site at
<http://www.SylvaniaConsumerElectronics.com>

Precautions

Setup

Functions

AV Receiver

Information

Español

Precautions

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Laser Safety

This unit employs a laser. Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. DO NOT STARE INTO BEAM.

LOCATION: INSIDE, NEAR THE DECK MECHANISM.

FCC WARNING- This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

RF Exposure Guidelines

The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

RADIO-TV INTERFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

A NOTE ABOUT RECYCLING

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

For Customer Use:

Read carefully the information located at the bottom of this unit and enter below the Serial No. Retain this information for future reference.

Model No. _____

Serial No. _____

Avoid the Hazards of Electrical Shock and Fire

- Do not handle the power cord with wet hands.
- Do not pull on the power cord when disconnecting it from AC wall outlet. Grasp it by the plug.
- If, by accident, water is spilled on this unit, unplug the power cord immediately and take the unit to our Authorized Service Center for servicing.

Moisture Condensation Warning

Moisture condensation may occur inside the unit when it is moved from a cold place to a warm place, or after heating a cold room or under conditions of high humidity. Do not use this unit at least for 2 hours until its inside gets dry.

Installation Location

For safety and optimum performance of this unit:

- Do not place anything directly on top of the unit. Do not place the unit directly on top of the TV.
- Shield it from direct sunlight and keep it away from sources of intense heat. Avoid dusty or humid places. Avoid places with insufficient ventilation for proper heat dissipation. Avoid locations subject to strong vibration or strong magnetic fields.
- Be sure to remove the disc and unplug the AC power cord from the outlet before carrying the unit.

About Copyright

Unauthorized copying, broadcasting, public performance and lending of discs are prohibited.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Notice for Progressive Scan Outputs

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of picture problems with 525 progressive scan output, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding your TV set compatibility with this 525p DVD player, please contact our customer service center.

Make your contribution to the environment!!!

- Used up batteries do not belong in the dust bin.
- You can dispose of them at a collection point for used up batteries or special waste. Contact your council for details.



Symbols Used in This Manual

The following symbols appear in some headings in this manual.



: Description refers to playback of DVD-Video discs.



: Description refers to playback of Audio CDs.



: Description refers to playback of MP3 files.



: Description refers to playback of discs formatted with WMA.

Maintenance

SERVICING

- Please refer to relevant topics on the "Troubleshooting Guide" on page 23 before returning the product.
- If this unit becomes inoperative, do not try to correct the problem by yourself. There are no user-serviceable parts inside. Turn off, unplug the power plug, and please call our help line mentioned on the front page to locate an Authorized Service Center.

CLEANING THE CABINET

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasive.

CLEANING DISCS

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out. Do not wipe in a circular motion.
- Do not use solvents such as benzene, thinner, commercially available cleaners, detergent, abrasive cleaning agents or antistatic spray intended for analog records.

CLEANING THE DISC LENS

- If this unit still does not perform properly although you refer to the relevant sections and to "Troubleshooting Guide" in this Owner's Manual, the laser optical pickup unit may be dirty. Consult your dealer or an Authorized Service Center for inspection and cleaning of the laser optical pickup unit.

DISC HANDLING

 
- When you handle a disc hold it by its edge and try not to touch the surface of the disc.
- Always store a disc in its protective case when it is not used.
- If the disc's peripheral edge is rough, rub it with pen or pencil stem in order to fine the rough completely. If not, the disc may not be inserted correctly, or the plastic fragments may stick on the disc and cause skips of playback.

"WMA" (Windows Media Audio) is a new audio codec developed by Microsoft® in the United States of America.

Manufactured under license from Dolby Laboratories.

"Dolby", "Pro Logic II" and the double-D symbol are trademarks of Dolby Laboratories.

6 Remote Control operation for the DVD/CD Player

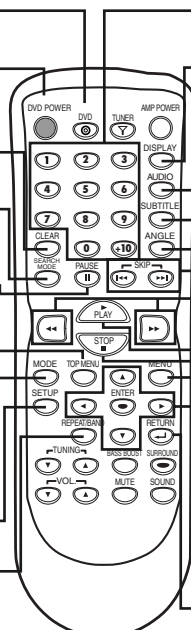

DVD button
To activate the AV Receiver and the remote control in DVD mode.

DVD POWER button
To turn the DVD/CD Player on or off.
To activate the AV Receiver and the remote control in DVD mode.

CLEAR button
To clear the markers (DVD/CD) and numbers entered incorrectly.
To remove status number in program input. (CD/MP3/WMA)

SEARCH MODE button
To search chapter, title or time. (DVD)
To set or search the markers (DVD/CD) and time (CD).
To search track. (CD/MP3/WMA)

PAUSE button
To pause disc playback.
To advance playback one frame at a time. (DVD)

TOP MENU button
To call up the Top Menu on a disc. (DVD)
To return to the top file of the highest hierarchy in the program and file list. (MP3/WMA)

MODE button
To set rapid play off /x1.3 /x0.8 and black level on/off. (DVD)
To set Dolby Pro Logic II on/off.
To arrange the playing order or play randomly. (CD/MP3/WMA)

SETUP button
To call up the DVD setup menu. (DVD)

REPEAT/BAND button
To play a chapter or title repeatedly. (DVD)
To play a track or disc repeatedly. (CD)
To play a track, group or disc repeatedly. (MP3/WMA)

NUMBER buttons
To select chapter or title directly. (DVD)
To select track directly. (CD/MP3/WMA)

DISPLAY button
To display the current disc mode.

AUDIO button
To select audio languages on a disc. (DVD)
To select STEREO, L-ch or R-ch. (CD)

SUBTITLE button
To select subtitles on a disc. (DVD)

ANGLE button
To select camera angles on a disc. (DVD)

SKIP << / >> buttons
To skip chapters (DVD) or tracks (CD/MP3/WMA).

FWD >> / REV << buttons
To search forward / backward through a disc.
To begin slow forward / reverse playback during the pause mode. (DVD)

PLAY button
To begin disc playback.

 
STOP button
To stop playback.

MENU button
To call up the Menu on a disc. (DVD)
To call up the file list. (MP3/WMA)

ENTER / ▲ / ▼ / ◀ / ▶ buttons
To move the cursor and determine its position.

RETURN button
To return to the previous operation in menu.

7 Remote Control operation for the AV Receiver

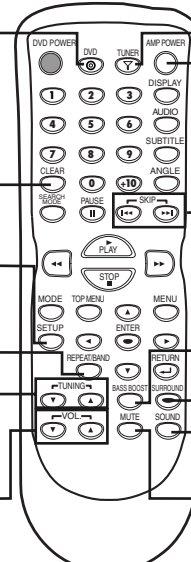

DVD button
To activate the AV Receiver and the remote control in DVD mode.

CLEAR button
To delete preset radio station in Preset Radio Stations.

SETUP button
Press and hold to enter channel preset mode for radio stations.

REPEAT/BAND button
To select FM or AM in Tuner mode.

TUNING buttons
To increase or decrease the frequency.
Hold 2 seconds to seek radio stations.

VOL. buttons
To adjust the volume.

TUNER button
To activate the AV Receiver and the remote control in Tuner mode.

AMP POWER button
To turn the AV Receiver on or off.

SKIP << / >> buttons
To select preset radio stations.
To select preset number in Preset Radio Stations.

BASS BOOST button
To turn BASS BOOST on or off.

 
SURROUND button
To turn SURROUND Sound on or off.

SOUND button
To select Digital Sound.

MUTE button
To mute the sound.

8 Installing the Batteries for the Remote Control

Install two AA batteries (supplied) matching the polarity indicated inside battery compartment of the remote control.

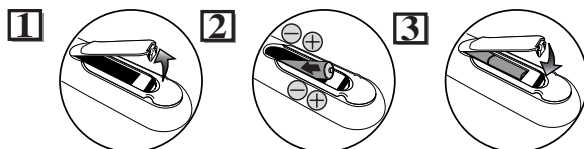

Keep in mind the following when using the remote control:

- Make sure that there is no obstacle between the remote control and the remote sensor on the player (the receiver).
- The maximum operable ranges from the player (the receiver) are as follows.
 - **Beeline:** approx. 23 feet (7m)
 - **Either side of the center:** approx. 16 feet (5m) within 30°
 - **Above:** approx. 16 feet (5m) within 15°
 - **Below:** approx. 10 feet (3m) within 30°

