封面









封底

Wireless Gaming Mouse Operating Instructions

Wireless Gaming Mouse Operating Instructions

Dear user

Thank you for choosing our **REDRAGON** product. To protect your rights and for better customer service, we ask that you note our warranty rules.


1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.

2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

Button Description

1. Left mouse button.

- 2. Right mouse button. 3. Scroll wheel and middle button.
- 7. DPI- button.
- 9. POWER Mode-SW.

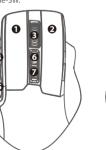

OS Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11

- 4. Forward button.
- 5. Backward button. 6. DPI+ button.
- 8. Profile button.

1. Take out the USB receiver in the package and plug it into any available USB port on vour computer.

1. Take out the USB to USB C cable in the package and plug the mouse to your computer.

4. The mouse is under recharging whatever the power switch is put to On /ECO. The scroll

wheel and LOGO will light up in red while charging, charging time is about 4 hours,

scroll wheel and logo lights will turn to green when mouse is fully charged.

2. Slide the power switch on the bottom of the mouse to On or ECO. 3. The computer will recognize and configure the keyboard automatically.

2. Slide the power switch on the bottom of the mouse to ECO/OFF.

3. The computer will recognize and configure the mouse automatically.

Basic Operation:

Wired Connection

2.4Ghz Connection

How to Connect the Mouse with a Computer

- 4. The mouse will be ready for use when the configuration is finished. The LFD of the LOGO will light on then if the power switch on the bottom of the mouse to ON.
- 5. The mouse can work about 8 hours with all backlight OFF, and about 2 hours with all backlight ON. The scroll wheel and Logo LEDS are flash indicated that battery is low.
- 6. Recharge the keyboard when the battery is low by Type C to USB A cable, in this way , it is in wired connecting mode.

5 DPI level with indicator, the LED is under the scroll wheel Press DPI+ and DPI- button can be switch mouse DPI level among

1000(Red)/2000(Blue)/4000 (Green)/8000(Purple)/26000(Yellow), defaulted as 1000 DPL

The profile setting

Press profile button at bottom of mouse to save and quit from current configuration.

The report rate setting

Report rage switch button: Middle button+backward button, There are 4 level of report rates can be switch by report rate button , the range is from 125Hz/250Hz/500 Hz /1000 Hz, The indicator LED under scroll wheel will be twinkle 1 time, 2 times, 3 times, 4 times for 125H7/250H7/500H7/1000H7

Auto Sleep and Smart Shutdown

1. First level of auto sleep, the mouse LEDs are turn OFF when it is 1 munites out of working, wake it up by press left+middle+right button, or just move the mouse to

2. The second level of auto sleep, the mouse LEDs are turn off when it is eight minutes out of working, wake it up by press left+middle+right button, or just move the mouse to

Low Battery Indication

The scroll wheel and logo LEDs will flash in RED when battery is low.

Backlight effects (Or set via software)

Press Scroll wheel button +Forward button to to switch the effects

Storage for the Nano USB Receiver

The nano USB receiver can be stored in the storage slot on the bottom of the mouse.

Software Instructions

Please download the software on www.redragonzone.com for this mouse. You can get more functions and settings after software installation. 1. The DPI value can be set from 100 to 26000 DPI.

2. Continuous keystroke function: Set the number of clicks and delay time. 3. Backlight mode of the LOGO: Steady ON/OFF.

4. Backlight mode of the side edge: Steady/OFF.

5. 10 of the mouse buttons can be remapped to various actions.

How to Recharge the Battery When the battery is low, please recharge the batter in time.

Take out the USB to USB C cable and connect the mouse and any USB power output port. While the battery is under recharging, the scroll wheel lights up and flash firstly in red (if the battery is very low), then in yellow and finally lights steadily on in green when the battery is fully recharged. Meanwhile the side edge light lights up and expands from back to front in red till the battery is fully recharged.

The battery can be recharged for more than 300 cycle times. And you can use the mouse while it is under recharging.

Note: Slide the power switch on the bottom of the mouse to OFF for long term storage.

CAUTION: DO NOT CHARGE THE MOUSE BY WALL PLUG, INPUT VOLTAGE MAX 5V/2A.

How to Reconnect the Mouse the with the USB Receiver

The mouse may lost connection with the USB receiver for some occasional reasons such as strong magnet, violent vibration. So you may need to reconnect the mouse with the USB receiver. In this case, unplug the receiver and plug it back again. Slide the power switch on the bottom of the mouse to ON or ECO, press and hold the Left+Middle+ Right button at the same time till the scroll wheel lights up and flash in yellow green. It will flash for about twenty seconds and then change back to the previous light effect. The reconnection will be completed and you can use the mouse then.

1. If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports.

2. If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

-- Regrient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

-- Consult the dealer or an experienced radio/TV technician for help This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

California Proposition 65

MARNING: Risk of Cancer from [Name of one or more chemicals known to cause cause reproductive toxicity] Exposure - www.P65Warnings.ca.gov.

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery fi material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents

are volatile, hazardous, and can be harmful.

⚠ CAUTION

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

红龙M811RGB 2911 备注:尺寸:L100*W100mm 材质:80g书写纸,风琴折页,正反印 说明书(英) 印刷: 单色 日期 2023-6-27

文件编号 1 OF 1 核准 版本 A.0