

尺寸: 100x100mm  
 材质: 100g书写纸

### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**REDRAGON**  
**KNIGHT**  
 MECHANICAL GAMING KEYBOARD

Mechanical Gaming Keyboard Operating Instructions

### US UK

#### Dear user

Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within warranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

1

#### OS support

Windows XP/Vista/Win7/Win8/Win10

#### How to connect the keyboard with a computer

##### Wired Connection

1. Take out the USB A to USB Type-C cable in the package and connect the keyboard with your computer.
2. The computer will recognize and configure the keyboard automatically.
3. The keyboard will be ready for use when the configuration is finished.
4. Once the keyboard is powered up, charging begins. It may take about 5 hours for the keyboard to be fully recharged.

##### Wireless Connection

1. Slide the ON/OFF switch on bottom of keyboard to ON.
2. Take out the nano USB receiver in the package and plug it into an available USB port on your computer. The computer will recognize and configure the keyboard automatically.
3. The keyboard will be ready for use when the configuration is finished.
4. In some cases, you may need to pair the keyboard. Turn on the keyboard and press [FN]+[P], plug the USB receiver into any available USB port on your computer within 20 seconds. The keyboard will be paired automatically. Make sure the keyboard has enough power before doing so.
5. The indicator will flash when the battery is low. Please recharge the keyboard in time or it will turn off automatically soon.

**Warning: Charging Input: 5V=1A**

2

#### Function Combination keys

Multimedia keys ([FN]+[F1]-[F12])

[FN]+[F1]		Media player
[FN]+[F2]		Volume down
[FN]+[F3]		Volume up
[FN]+[F4]		Mute
[FN]+[F5]		stop
[FN]+[F6]		Previous track
[FN]+[F7]		Play / Pause
[FN]+[F8]		Next track
[FN]+[F9]		E-mail
[FN]+[F10]		Home
[FN]+[F11]		Calculator
[FN]+[F12]		Search

4

#### Function Introduction

1. Standard USB A plug for connection with computer. Plug and play without drivers or software installation.
2. Multi-level backlight brightness: Press and hold the [FN] + [↑] / [↓] to increase or decrease backlight brightness of the keyboard.
3. There are 18 backlighting effects. Press the combination keys repeatedly to change the light effect:  
 [FN] + [Insert]: 1. The trial of light; 2. Breathing; 3. Normally on  
 [FN] + [Home]: 1. Ripple Graff; 2. Pass without Trace; 3. Coastal  
 [FN] + [Page Up]: 1. Hurricane; 2. Accumulate; 3. Digital Times  
 [FN] + [Del]: 1. Go with the stream; 2. Clouds fly; 3. Winding Paths  
 [FN] + [End]: 1. Flowers blooming; 2. Snow winter jasmine; 3. Swift action  
 [FN] + [Page Win]: 1. Both ways; 2. Surmount; 3. Fast and the furious
4. Press [FN] + [WIN] to Disable or enable the [WIN] and right menu key so as to avoid misoperation in game.
5. Alterable backlight changing direction: Press [FN] + [+/-] to alter backlight changing direction.
6. Changeable backlight colors: Press [FN] + [-] to change backlight colors (9 color selections).
7. Adjustable lighting speed: Press [FN] + [-] or [FN] + [+] to decrease or increase backlight moving speed.
8. Switch side light pattern: [FN] + [PAUSE]
9. Adjust side light speed: [FN] + [ScrIk] total 5 level.
10. Wireless keyboard pairing: [FN] + [P].
11. Reset to default setting: FN + [PRTSC].

3

#### FAQ

1. If the keyboard doesn't respond, please check if the keyboard's USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboard's USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



5