

05/01

\* 2001 ECHO TOYS LTD.

All Rights Reserved.

8A & B, Block 1, Tai Ping Industrial Centre, 57 Ting Kok Road, Tai Po, NT, Hong Kong.

Web Site: <http://www.echotoys.com.hk>

Cat. No. 90345

RC School Bus

Your ECHO TOYS LTD. RC School Bus is your own personal School Bus. You can charge forward, turn around, then charge off in another direction.

**Note:**

You need four AA batteries (not supplied) to power the School Bus, and one 9V battery (not supplied) for its transmitter.

## INSTALLING BATTERIES

Cautions:

- \* Use only fresh batteries of the required size and recommended type.
- \* Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- \* Never leave dead or weak batteries in the School Bus or the transmitter.
- \* Dispose of batteries promptly and properly; do not bury or burn them.

If you do not plan to use the School Bus for several days, remove the batteries.

Installing the School Bus's Batteries

You need four AA batteries (not supplied) to power your School Bus. We recommend alkaline batteries.

Follow these steps to install the batteries.

1. Set ON/OFF on the bottom of the School Bus to OFF.
2. Use a coin to twist the slot on the battery compartment cover, then lift the cover to open it.

Caution: The battery compartment cover is hinged. Do not try to remove it.

3. Install the batteries as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the cover. Be sure it snaps in.

If the School Bus moves slowly or does not move at all, replace the batteries with fresh ones.

## Installing the Transmitter's Battery

The transmitter requires one 9V battery (not supplied). We recommend alkaline battery.

1. Press and slide the battery compartment cover off the transmitter.
2. Put the battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover. Be sure it snaps in.

When the transmitter's range decreases, replace its battery.

## OPERATION

Warning: Never play with your School Bus in the street.

1. Set ON/OFF on the bottom of the School Bus to ON.
2. To have the siren sound, music & realistic human voice when your are playing the School Bus, slide ON/OFF of sound switch to ON.
3. The School Bus's transmitter has two control buttons. Press and hold down the forward button to move forward with music, headlight & flashing emergency light.
4. Release the button to stop the School Bus with flashing emergency light & realistic human voice.
5. Press and hold down the backward button to make it reverse in circle with music, headlight & flashing emergency light.

## HELPFUL HINTS

These hints can help you get the most enjoyment from your School Bus.

\* Running your School Bus continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your School Bus's batteries run down, let the School Bus cool at least 10 minutes before installing new batteries.

\* If the School Bus's motor runs but the School Bus does not respond to the transmitter, move the transmitter closer to the School Bus and try again.

\* If someone uses a CB nearby, it might interfere with control of the School Bus. If this happens, move the School Bus away from the CB.

\* You cannot operate your School Bus near devices with transmitters that use the same frequency (27 MHz).

## CARE AND MAINTENANCE

The following suggestions will help you to take care of your ECHO TOYS LTD RC School Bus so you can enjoy it for years.

- \* Do not expose the School Bus and its transmitter to temperature extremes.

- \* Wipe the School Bus with a damp cloth occasionally to keep it look new.

- \* Do not use the School Bus on a wet floor, on sand, or in mud, rain or snow. These may damage it.

- \* If the School Bus moves slowly, and you have installed fresh batteries, check the wheel mechanisms and remove any lint, thread, hair or dust you see.

Modifying or tampering with the School Bus's or the transmitter's components can cause a malfunction and might invalidate the warranty and void your FCC authorization to operate them.

## THE FCC WANTS YOU TO KNOW

Your School Bus or its transmitter might cause TV or radio interference even when they are operating properly. To determine whether your School Bus or its transmitter is causing the interference, release the transmitter's control button and turn off your School Bus. If the interference goes away, your School Bus or transmitter is causing it. Try to eliminate the interference by:

- \* Moving your School Bus away from the TV or radio

If you cannot eliminate the interference, the FCC requires that you stop using your School Bus and transmitter.