



2 IN 1 TRUCK

OPERATING INSTRUCTIONS

Please read carefully before starting to operate. It is recommended to operate the vehicle under adult supervision.

FEATURES -3 functions - forward, reverse turn and stop. The vehicle transforms from digger mode to digger mode and vice versa. Virtual Video in the transmitter moves with engine sound.

BATTERY REQUIREMENT

Four "1.5V" AA batteries for transmitter.
Four "1.5V" AA batteries for vehicle.
Batteries are not included in this package.

I) TRANSMITTER

- Slide ON/OFF to OFF
- Press and slide the battery compartment cover in the direction of the arrow to remove it.
- Put the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- Replace the cover. Be sure it snaps in.

II) VEHICLE

- Slide ON/OFF switch to OFF
- Use a Coin to turn the battery compartment's two latches clockwise they stop, then lift up the

cover.

- Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- Close the battery compartment cover and turn the latches to secure the battery compartment.

III) HOW TO OPERATE:

- Slide ON/OFF on the transmitter to ON.
- Slide ON/OFF on the bottom of the vehicle to ON.
- Use the transmitter's helices to control the movement and direction of the vehicle.

Right Control Button

- Press [ⓐ] to change digger mode to digger mode
- Press [ⓑ] to change digger mode to digger mode
- Release to stop.

Left Control Button (in digger mode)

- Press [ⓐ] to move forward.
- Press [ⓑ] to move reverse turn.
- Release to stop.

Top left and Right Virtual Video Button

- Press either top left or top right button to make the Virtual Video image move with engine sound.

Note:

- When the transmitter's range decreases, replace its battery.
- If the vehicle moves slowly or not at all, replace the vehicle's batteries.
- Remove batteries after you have using your 2 IN 1 TRUCK.

CAUTION

- Avoid combined use of charged rechargeable batteries and discharge nonrechargeable batteries.
- Do not mix old batteries with new batteries
- Avoid using alkaline batteries and nonrechargeable batteries together.

NOTE:

The manufacturer is not responsible for any malin or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

