



國際電器認證中心有限公司 International Electrical Certification Centre Ltd.

提供電器產品測試國際認證及諮詢服務 Technical Services in Electrical Product Testing, International Certification & Information

Agent of 
Accredited Laboratory

FCC ID: HAP602751R

Exhibit 6 - User's Manual

Head Office

Unit 602-605, 6/F., 31 Lok Yip Road, On Lok Tsuen, Fanling, NT, Hong Kong Tel (852) 2305 2570 Fax (852) 2756 4480

香港新界粉嶺安樂村業路31號6樓602-605室 電話 (852) 2305 2570 傳真 (852) 2756 4480

Sports Truck

Your RadioShack Sports Truck is your own personal Truck. You can charge forward, turn around, then charge off in another direction.

Note: You need two AA batteries to power the Sports Truck, and one 9-volt battery to power the controller.

INSTALLING BATTERIES

Cautions:

 
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the Sports Truck.
- If you do not plan to use the Sports Truck for several days, remove the batteries.
- Dispose of batteries properly; do not bury or burn them.

Installing the Sports Truck's Batteries


You need two AA batteries (not supplied) to power the Police Car. We

recommend alkaline batteries, such as RadioShack Cat. No. 23-552. Follow these steps to install the batteries.

1. Set ON/OFF on the back of the Sports Truck to OFF.

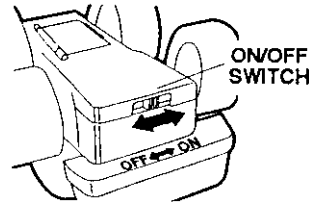

 2. Use a coin to twist the slot beside the battery compartment cover on the bottom of the Sports Truck. Then lift up the cover to open it.

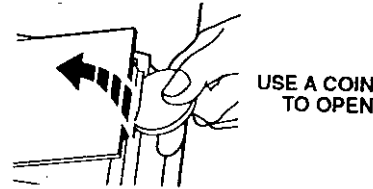


Caution: The battery compartment cover is hinged. Do not try to remove it.

3. Install the batteries on top of the ribbon, as indicated by the polarity symbols (+ and -) marked inside.
4. Close the cover and make sure it snaps shut.

If the Sports Truck moves slowly or does not move at all, gently pull the ribbon to remove the batteries, then replace them with fresh ones.

Installing the Controller's Battery

 You need one 9-volt battery (not supplied) to power the controller. We recommend an alkaline battery, such as RadioShack Cat. No. 23-553.

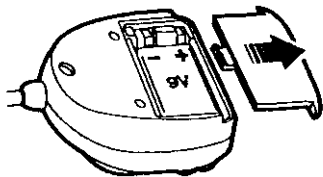


1. While pressing down on the battery compartment cover, slide it off to remove it.
2. Install the battery as indicated by the polarity symbols (+ and -) marked inside the compartment.
3. Replace the cover. Be sure it snaps into place.

If the motor runs, but the Sport Truck does not respond to the controller, replace the controller's 9-volt battery.

OPERATION


Warning: Never play with your Sport Truck in the street.

 Set ON/OFF on the back of the Sport Truck to ON, then place the Sport Truck on the floor. Press and hold down the button on the controller. The Sport Truck goes forward in a straight line.

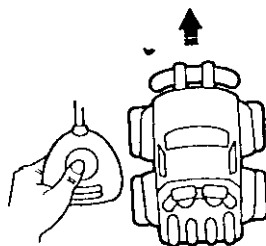

Release the button to stop the Sports Truck

 Press and hold down the button again. The Sport Truck goes backward, slightly turning to the left.

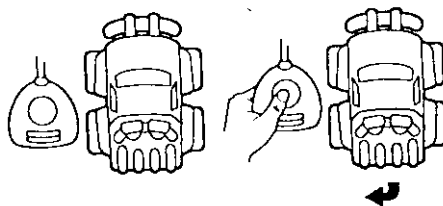

Notes:

- The Sports Truck works best on a clean, flat surface.
- The Sports Truck stops when it runs into something, but the motor keeps running. When this happens, release the controller's button so the Sports Truck stops. Then press and hold down the button again to turn the Sports Truck around.

When you finish playing with the Sports Truck, always set ON/OFF to OFF.

MAINTENANCE

- Do not use the Sports Truck on a wet floor or in mud or sand.
- Clean it with a damp cloth to keep it looking new.
- If someone is operating a CB transceiver nearby, it might interfere with your control of the Sports Truck. If this happens, move your Sports Truck to a new location or wait until the CB stops transmitting.

Modifying or tampering with the Sports Truck's internal components can cause a malfunction and invalidate your Sports Truck's warranty and void your FCC authorization to operate it. If your Sports Truck is not performing as it should, take it to your local RadioShack store for assistance.

THE FCC WANTS YOU TO KNOW

Your Sports Truck might cause TV or radio interference even when it is operating properly. To determine whether your Sports Truck is causing the interference, turn off your Sports Truck. If the interference goes away, your Sports Truck is causing it. Try to eliminate the interference by:

- Moving your Sports Truck away from the receiver
- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Sports Truck.