



國際電器認證中心有限公司 International Electrical Certification Centre Ltd.

提供電器產品測試國際認證及諮詢服務 Technical Services in Electrical Product Testing, International Certification & Information

FCC ID: HAP604197

Agent of 
Accredited Laboratory

Exhibit 5 - User's Manual

Head Office

Unit 602-605, 6/F, 31 Lok Yip Road, On Lok Tsuen, Fanling, NT, Hong Kong Tel (852) 2305 2570 Fax (852) 2756 4480
香港新界粉嶺安樂村樂業路31號6樓602-605室 電話 (852) 2305 2570 傳真 (852) 2756 4480

Survivor

Your RadioShack Survivor is built to handle the road with style, whether the road is the hallway in your house or the sidewalk outside.

You need two AA batteries (not supplied) to power your car, and one 9-volt battery (not supplied) for its transmitter.

INSTALLING BATTERIES

 
Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the Survivor or the transmitter.
- Dispose of batteries promptly and properly; do not bury or burn them.
- If you will not be using the Survivor for a week or more, remove the batteries from both the transmitter and the Survivor. Batteries can leak chemicals that can damage electronic parts.

In the Transmitter

The transmitter requires one 9-volt battery. For the best performance and longest life, we recommend an alkaline battery, such as RadioShack Cat. No. 23-553.

Follow these steps to install the transmitter's battery.

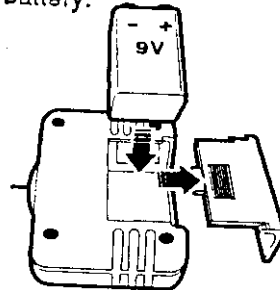

1. Press **OPEN** on the side of the transmitter and slide the battery compartment cover down to remove it.
2. Put a battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover and snap it shut.

When the transmitter's range decreases, replace its battery.

 
© 1998 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

In the Survivor

The Survivor requires two AA batteries. For the best performance and longest life, we recommend alkaline batteries, such as Cal. No. 23-557.

Follow these steps to install the Survivor batteries.

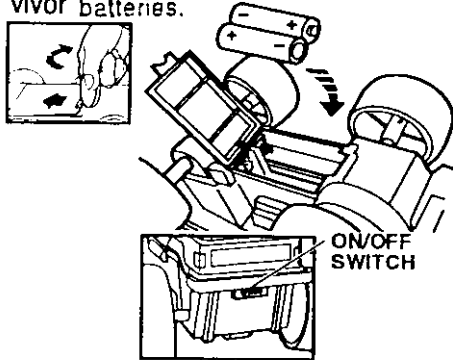

1. Slide the Survivor's ON/OFF switch, on the bottom of the Phantasm, to OFF.
2. Use a coin to twist the Slot beside on the battery compartment cover on the bottom. Then pull up on the cover to open it.

Caution: The battery compartment's cover is attached to the Survivor on hinges. Do not try to remove it.

 
3. Put the batteries in the compartment according to the polarity symbols (+ and -) marked inside.
4. Close the cover and make sure it snaps shut.

DRIVING THE SURVIVOR


Warning: Never play with your Survivor in the street.

Follow these steps to drive the Survivor.

1. Pick up the Survivor and slide the ON/OFF switch to ON. The back tires spin in reverse. When you set the Survivor down, it circles backward.
2. To drive the Survivor forward and in a straight line, press and hold down the button on the transmitter.

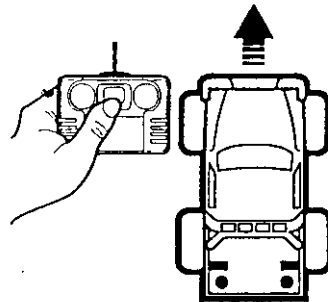

 Release the button to circle backward again.

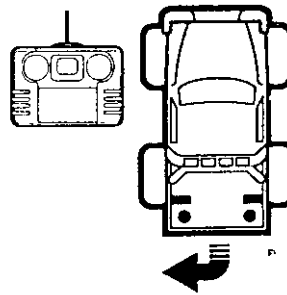

Note: Your Survivor stops when it runs into anything, but the motor keeps running. When this happens, release the button on the transmitter to circle backward, or move the Phantasm by hand.

3. When you finish driving the Survivor, slide the ON/OFF switch to OFF.

HELPFUL HINTS

These hints can help you get the most enjoyment from your Survivor.

- Running your Survivor continuously for long periods generates high heat levels. Heat causes the most wear and tear on the motor. To help keep heat levels down, when your Survivor's battery power dies, let the Survivor cool at least 10 minutes before installing new batteries.
- If the Survivor's motor runs but the Survivor does not respond to the transmitter, move closer to the Survivor and try again.
- If someone uses a CB nearby, it might interfere with control of the Survivor. If this happens, move the Survivor away from the CB.

- You cannot operate your Survivor near devices with transmitters that use the same frequency as the Survivor (49 MHz).
- If the Survivor moves slowly, and you have installed fresh batteries, check the wheel mechanisms for any lint, thread, hair, or dust.

CARE

To care for your RadioShack Survivor so you can enjoy it for years:

- Do not use the Survivor on a wet floor, on sand, or in mud, rain, or snow. These can damage it.
- Do not expose the Survivor to temperature extremes.
- Wipe the Survivor with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals to clean the Survivor.

Modifying or tampering with the Survivor's or the transmitter's components can cause a malfunction and might invalidate the warranty and void your FCC authorization to operate them. If the Survivor does not work properly, take it to your local RadioShack store for assistance.