

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

03/00

© 2000 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Cat. No. 60-4247

Commander

Your RadioShack Commander is built to handle the road in style, whether the road is the hallway in your house or the sidewalk outside.

Built to 1/20 scale, it can reach speeds up to 200 feet per minute.

INSTALLING BATTERIES

You need four AA batteries (not supplied) to power the Commander, and one 9V battery (not supplied) for its transmitter.

Cautions:

Use only fresh batteries of the required size and recommended type.

Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Never leave dead or weak batteries in the Commander or the transmitter. Where they can corrode and damage the units.

WARNING

Dispose of old batteries promptly and properly; do not burn or bury them.

Installing the Commander's Batteries

You need four AA batteries (not supplied) to power your Commander. We recommend RadioShack alkaline batteries.

Follow these steps to install the Commander's batteries.

1. Set ON/OFF on the bottom of the Commander to OFF.
2. Use a coin to twist the battery compartment cover's latch clockwise until it stops, then hold the small wheel on the cover to open.
3. Install the batteries in the compartment as indicated by the polarity symbols (+and-) marked inside.
4. Replace the cover, then turn the latch counterclockwise until it stops.

If the Commander moves slowly or does not move at all, replace the Commander's batteries.

Note: If you will not be using the Commander for several days, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

Note:

Before playign the Commander, you need to put the driver back on the seat. Follow these steps to install the driver.

1. Put the driver's hands to slot in the motor bike handlebars.
2. Put the driver's feet on the pedal & be sure the feet's rings be slotted into the axle, then use a coin to twist the engine's latch clockwise until it stops.

Installing the Transmitter's Battery

The transmitter requires one 9V battery (not supplied).

Follow these steps to install the transmitter's battery.

1. Press and slide the battery compartment cover off the transmitter.
2. Put the battery in the compartment according to the polarity symbols (+and-) marked inside.
3. Slide the cover back into place. Be sure it snaps in.

When the transmitter's range decreases, replace its battery.

OPERATION

Driving the Commander

1. Set ON/OFF on the bottom of the Commander to ON.
2. Press and hold down the button to drive the Commander move forward with wheelie action.
3. Release the button to stop the Commander.
4. Press and hold down the button again to make it reverse in circle.
5. When you finish driving the Commander, set ON/OFF on the bottom of Commander to OFF.

HELPFUL HINTS

These hints can help you get the most enjoyment from your Commander.

Running your bike continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your bike's battery power run down, let the bike cool at least 10 minutes before installing new batteries.

If the Commander's motor runs but the Commander does not respond to the transmitter, move the transmitter closer to the Commander and try again.

If someone uses a CB nearby, it might interfere with control of the Commander. If this happens, move the Commander away from the CB.

You cannot operate your Commander near devices with transmitters that use the same frequency (49 MHz).

CARE AND MAINTENANCE

The following suggestions will help you take care of your RadioShack Commander so you can enjoy it for years.

Do not expose the Commander or its transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.

Wipe the Commander and transmitter with a damp cloth occasionally to keep them look new.

Do not use harsh chemicals to clean them.

Do not drive the Commander through puddles or mud, on a wet floor, or in sand, rain or snow. These may damage it.

Do not leave the Commander or its transmitter outside overnight. Night dampness can damage their electronic circuits.

To protect the Commander's mechanisms from lint and hair, do not drive the Commander on carpet.

Modifying or tampering with the Commander's or the transmitter's components can cause a malfunction and might invalidate the car's warranty and void your FCC authorization to operate them. If the Commander does not work properly as it should, take it to your local RadioShack store for assistance.

THE FCC WANTS YOU TO KNOW

Your Commander or its transmitter might cause TV or radio interference even when it is operating properly. To determine whether your Commander or transmitter is causing the interference, release the transmitter's control button and turn off your Commander. If the interference goes away, your Commander or transmitter is causing it. Try to eliminate the interference by:

- Moving your Commander away from the TV or radio

- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Commander and transmitter.

USER-REPLACEABLE PARTS

You can order these parts through your local RadioShack store.

Description

RSU #

NP Part #