

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

03/00

2000 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Cat. No. 60-4249

Chaos

Your RadioShack Chaos's unique design is built to handle all sorts of indoor areas. The Chaos is perfect

for children ages 4 & up.

The Chaos operates in only one frequency (27 MHz). You cannot play with more than one radio control toy at the same time that uses the same frequency.

Note:

Your Chaos requires four AA batteries (not supplied) for power, and one 9V battery (not supplied) for its transmitter. For the best performance and longest playing life, we recommend RadioShack alkaline batteries.

INSTALLING BATTERIES

Warning : Dispose of batteries promptly and properly; do not bury or burn them.

Cautions:

Use only fresh batteries of the required size and recommended type.

Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Never leave dead or weak batteries in the Chaos or the transmitter.

If you will not be using the Chaos for a week or more, remove the batteries from both the transmitter and the Chaos. Batteries can leak chemicals that can damage electronic parts.

In the Transmitter

The transmitter requires one 9V battery (not supplied). For the best performance and longest playing life, we recommend RadioShack alkaline battery.

Follow these steps to install the transmitter's battery.

1. Press OPEN on the side of the transmitter and slide the battery compartment cover down to remove it.
2. Put the battery in the compartment according to the polarity symbols (+ and -)marked inside.
3. Replace the cover and be sure it snaps in .

When the transmitter's range decreases, replace its battery.

In the Chaos

The Chaos requires four AA batteries (not supplied) . For the best performance and longest playing life, we recommend RadioShack alkaline batteries.

Follow these steps to install the Chaos's batteries.

1. Set ON/OFF on the bottom of the Chaos to OFF.
2. Push back the latch on the battery compartment cover until the battery compartment box jumps out, then grasp the box to remove it.
3. Put the batteries in the compartment according to the polarity symbols (+ and -) marked inside.
4. Replace the battery box and be sure it snaps in.

DRIVING THE CHAOS

Warning : Never play with your Chaos in the street.

Follow these steps to drive the Chaos.

1. Set ON/OFF on the bottom of the Chaos to ON.
2. Hold down the trigger of the transmitter to let the Chaos move forward for a distance with LED light inside the cabin, and release & hold down the trigger again immediate, then it will stand upright to spin with rear wheels revolving in the same direction & with LED light inside the cabin.
3. Release the trigger to stop the Chaos.
4. Hold down the trigger to let the Chaos move forward for a distance with LED light inside the cabin, and release & hold down the trigger again immediate to make it backward with LED light inside the cabin.

Note: Your Chaos stops when it runs into obstacles, but the motor keeps running. When this happens, hold down the trigger on the transmitter to let it reverse in circle, or move the Chaos by hand.

5. When you finish driving the Chaos, set OFF/ON on the bottom of Chaos to OFF.

HELPFUL HINTS

These hints can help you get the most enjoyment from your Chaos.

Running your Chaos continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your Chaos's battery run down, let the Chaos cool at least 10 minutes before installing new batteries.

If the Chaos's motor runs but the Chaos does not respond to the transmitter, move the transmitter closer to the Chaos and try again.

If someone uses a CB nearby, it might interfere with control of the Chaos. If this happens, move the Chaos away from the CB.

You cannot operate your Chaos near devices with transmitters that use the same frequency as the Chaos (27 MHz).

If the Chaos moves slowly, and you have installed fresh batteries, check the wheel mechanisms for any lint, thread, hair, or dust.

CARE AND MAINTENANCE

To care for your RadioShack Chaos so you can enjoy it for years.

Do not expose the Chaos or its transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.

Wipe the Chaos and its transmitter with a damp cloth occasionally to keep them looking new.

Do not drive the Chaos through puddles or mud, on a wet floor, or in sand, rain or snow. These may damage it.

Do not leave the car or its transmitter outside overnight. Night dampness can damage their electronic circuits.

To protect the car's mechanisms from lint and hair, do not drive the car on carpet.

Modifying or tampering with the Chaos's or the transmitter's internal components can cause a malfunction and might invalidate the car's warranty and void your FCC authorization to operate them. If the Chaos does not work properly, take it to your local RadioShack store for assistance.

THE FCC WANTS YOU TO KNOW

Your Chaos or its transmitter might cause TV or radio interference even when they are operating properly. To determine whether your Chaos or its transmitter is causing the interference, release the transmitter's control trigger and turn off your Chaos. If the interference goes away, your Chaos or its transmitter is causing it. Try to eliminate the interference by:

Moving your Chaos and its transmitter away from the TV or radio

Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Chaos and its transmitter.