


# Ramble

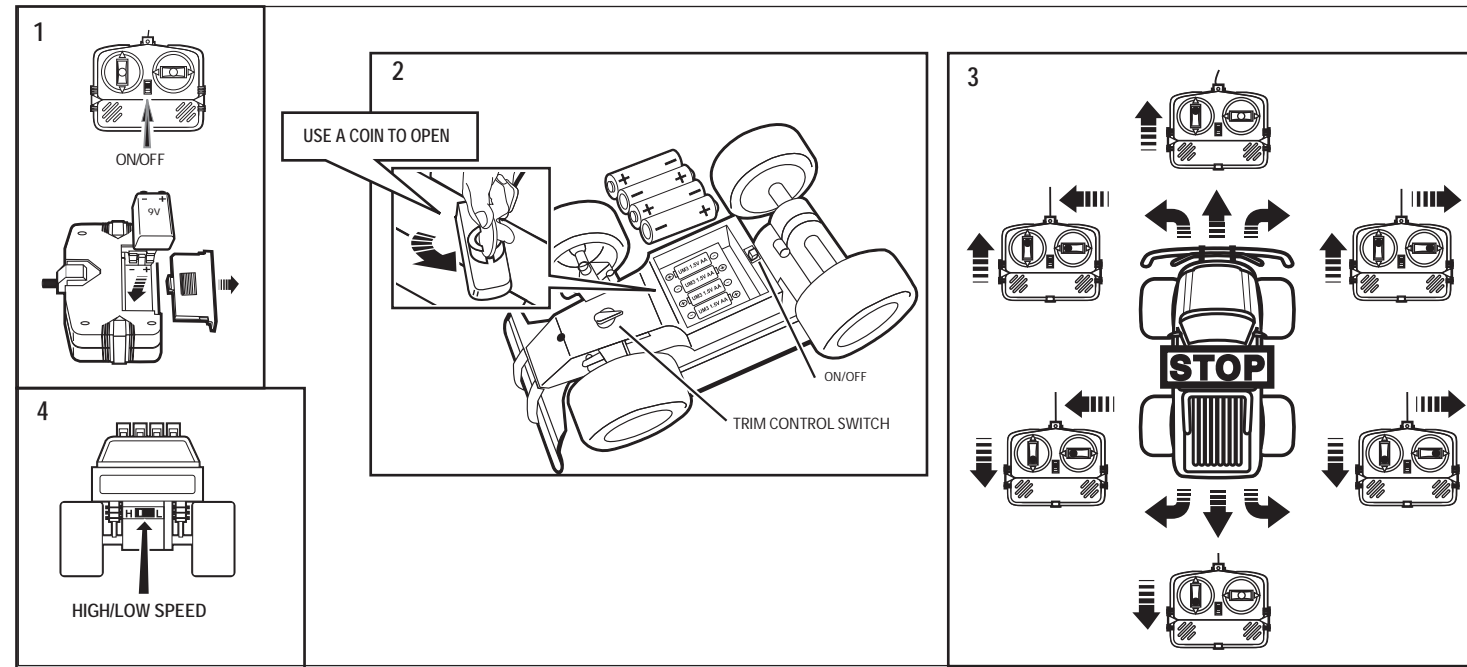

SCALE 1:18

## OPERATING INSTRUCTIONS

Please read carefully before starting to operate. It is recommended to operate the vehicle under adult supervision.

## CAUTION-ELECTRIC TOY

Not recommended for children under 3 years of age.

As with all electrical products, precautions should be observed during handling and use to prevent electric shock.

## FEATURES

7 Functions - runs forward, backward, turns left and right, stop.

## BATTERY REQUIREMENT

One "9V" battery for transmitter.  
Four "AA" batteries for vehicle

## TRANSMITTER

- 1) Slide ON/OFF to OFF.
- 2) Press and pull the battery compartment cover in the direction of the arrow to remove it.
- 3) Put the "9V" battery in the compartment according to the polarity symbols (+ and -) marked inside.
- 4) Replace the battery compartment cover.

## VEHICLE

- 1) Slide ON/OFF to OFF.
- 2) Use a coin to turn the battery door stoppers and remove the battery door.
- 3) Insert 4 x 1.5V "AA" batteries according to the polarity symbols (+ and -) marked inside.

- 4) Replace the battery door and a coin to turn the stoppers back.

## HOW TO OPERATE:

- 1) Slide ON/OFF on the bottom of the vehicle to ON.
- 2) Slide ON/OFF on the transmitter to ON.
- 3) Use the transmitter's levers to control the movement and direction of the vehicle.

## Left Control Lever

- \* Push forward to move forward.
- \* Pull backward to move backward.
- \* Release to stop.

## Right Control Lever

- \* Push left to turn left.
- \* Push right to turn right.
- \* Release to go straight.

## TRIM CONTROL SWITCH

Trim switch is located on underside of vehicle between the front tires. It is used to align your vehicle for consistent turning and drive. Move switch left or right until desired alignment is reached.

## HI-SPEED AND NORMAL DRIVE SETTINGS "H" MODE (HI-SPEED DRIVE)

Best for high speed on flat surfaces. Setting the speed level to "H" gives the vehicle a higher running speed than the "L" mode but a shorter running time because the battery power will be used in faster rate.

## "L" MODE (NORMAL DRIVE)

Setting the lever to "L" gives good power and a longer running time.

## CAUTION:

1. Do not dispose the battery in fire.
2. Use only fresh batteries of the required size and recommended type.
3. Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
4. If you do not plan to use the vehicle for several days, remove the batteries since batteries can leak chemicals that can damage electronic parts.
5. If the vehicle moves slowly and you have installed fresh batteries, check the wheel mechanism for lint, thread, hair, and dust.

## FCC WANTS YOU TO KNOW

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.



© 2003 ECHO TOYS LTD. ALL RIGHTS RESERVED.  
ROOM 1108, PENINSULA CENTRE, 67 MODY ROAD,  
TSIM SHA TSUI EAST, KOWLOON, HONG KONG.  
WEB SITE: <http://www.echotoys.com.hk>

ITEM . 91138  
PRINTED IN CHINA