

OWNER'S MANUAL

RADIO CONTROLLED

OPERATING INSTRUCTIONS

READ THIS MANUAL CAREFULLY BEFORE OPERATING YOUR VEHICLE.

- FEATURES:**
- ▲ Full Function
 - ▲ Four wheels drive system
 - ▲ Radio controlled boom arms
 - ▲ Realistic bucket action
 - ▲ Heavy duty authentic tires

BATTERIES REQUIRED:
 One 6V battery pack for vehicle
 One 9V battery for controller


CAUTION:

- Observe correct polarity.
- Remove batteries when not in use.

BATTERY INSTALLATION

(A) CONTROLLER

1. Press and slide the battery compartment cover in the direction of the arrow to open.
2. Insert one "9V" battery (included) as shown in diagram.
3. Be sure to observe correct polarity ("+" and "-").
4. Replace cover.

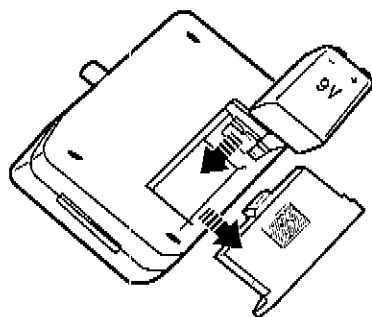

(B) VEHICLE

Battery compartment is at the bottom of vehicle.

Set the ON/OFF switch to OFF.


1. Use a coin to unlock the battery compartment cover.
2. Lift the cover to open.
3. Insert a 6V battery pack as marked on the battery compartment.
4. Replace cover.

OPERATING THE VEHICLE

Be sure that the frequency of controller matches that of the vehicle.

1. Push the ON/OFF switch of controller up to the "ON" position.
2. Turn the ON/OFF switch on vehicle to "ON" position.

Now the vehicle is ready for operation.

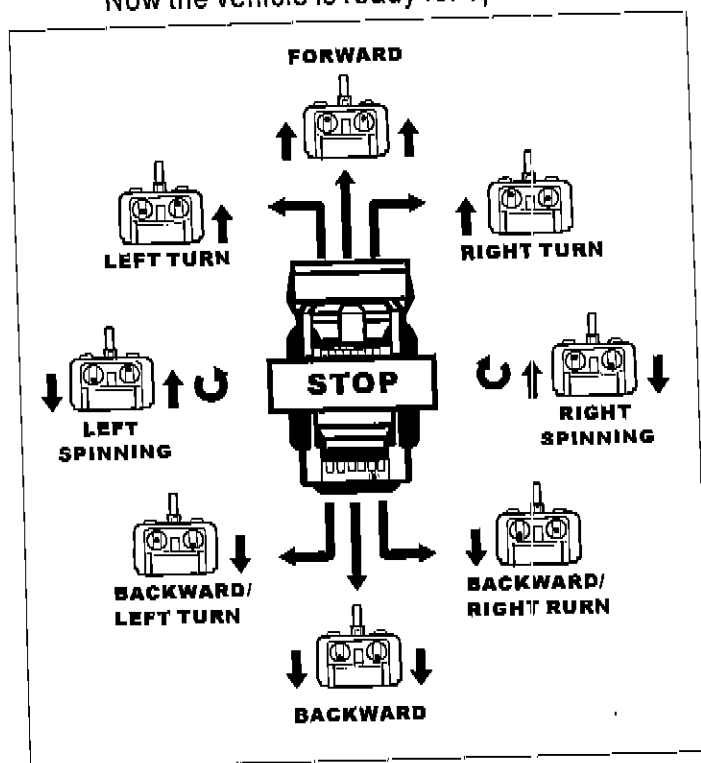

CARE AND MAINTENANCE

- 1) The vehicle works best on a clean flat surface. Do not use it on a wet floor, or in mud or sand.
- 2) When you have finished using the vehicle, be sure to put the ON/OFF switch of the vehicle and the controller to "OFF". This saves battery power.
- 3) If you are not planning to use the vehicle for a few days, remove the battery pack from the vehicle and "9V" battery from the controller. Never leave weak or dead batteries in either unit. They might leak corrosive chemicals that can cause damage.
- 4) For better performance, hold transmitter antenna up-right and not pointing at the vehicle.
- 5) If the vehicle moves slowly, or doesn't move at all, use the provided charger to recharge the 7.2V battery pack. Maximum recharge time is 4 hours.
- 6) If the vehicle with new batteries does not response to th controller, replace the "9V" battery with a new one.
- 7) If electrical devices or other sources of radio waves are operating nearby, they may interfere with your control of the vehicle. IF this happens, move to a new location.
- 8) Do not use the vehicle in the street.
- 9) Internal components not designed for customer repair. Do not attempt to open and/or service internal components of this vehicle. Any attempts to adjust internal components will void warranty.