 
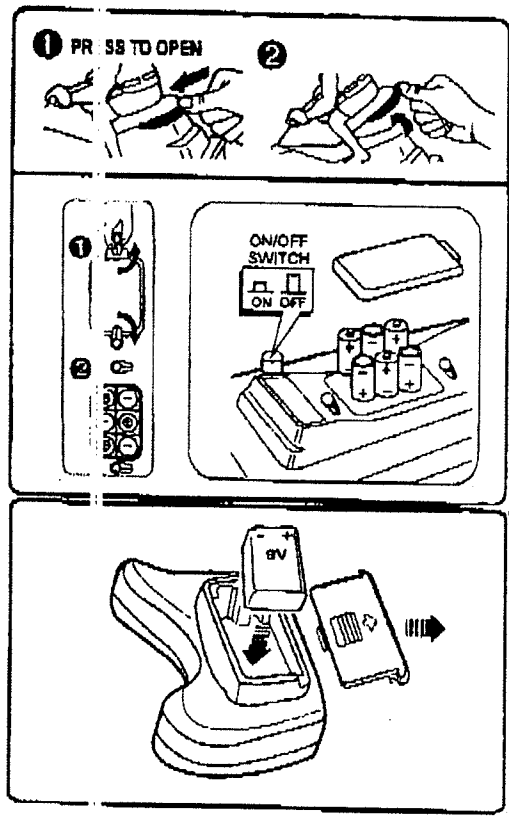 


OPERATING INSTRUCTION

To: Rebecca Wong

- ▲ FULL FUNCTION
- ▲ POWERFUL TWIN ENGINES
- ▲ UP TO 35 MPH SCALE SPEED

 
USE 6"AA" SIZE BATTERIES FOR BOAT BODY
 USE 1"9V" BATTERY FOR CONTROLLER
 (BATTERIES NOT INCLUDED)

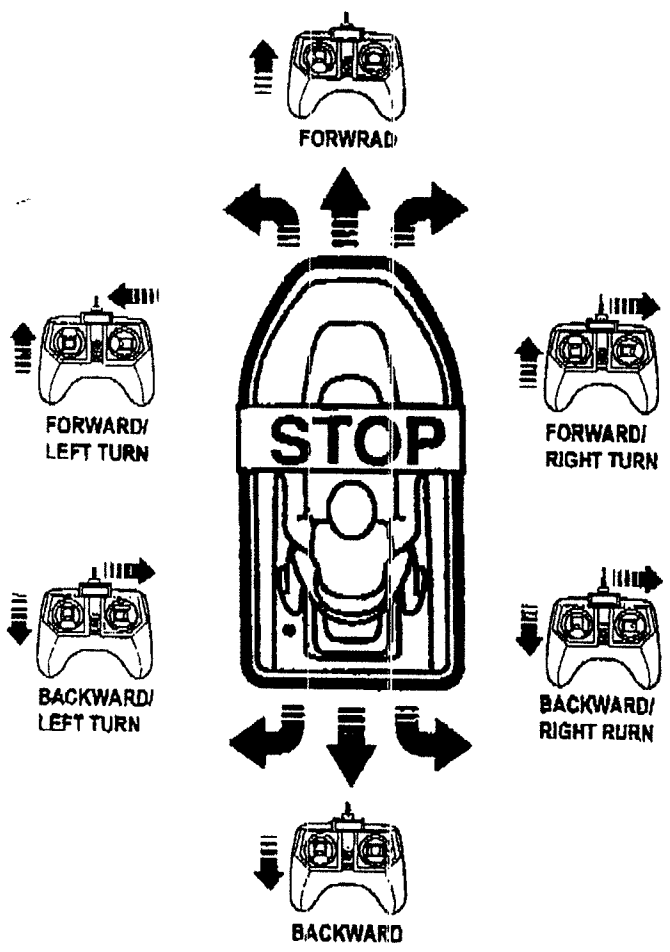

DON'T THROW THE BOX AWAY, IF YOU DO NOT FIND AN INSTRUCTION SHEET INCLUDED, YOU MAY FIND THE INFORMATION ON THE BOX.

Carefully read your operating instruction every time before you play with your **SKI TIGER II**.
 Check all batteries before installation. Replace all batteries if any battery is damaged.
 Observe correct polarity marking in battery compartment during installation.
 When you finish operating your **SKI TIGER II**, set the **ON/OFF** switch to **OFF**.
 This saves battery power.
 If your **SKI TIGER II** moves slowly, or does not move at all, replace the batteries with fresh ones.
 For better performance, hold transmitter antenna up-right and not pointing at the **SKI TIGER II**.
 If the motor runs, but the **SKI TIGER II** does not respond to the controller, replace the controller's 9-volt battery.
 When you're not planning to play with the **SKI TIGER II** for a few days, remove the batteries from the **SKI TIGER II** and the controller. Never leave weak or dead batteries in either unit. The batteries might leak damaging chemicals.
 If a CB transceiver is being operated nearby, it might interfere with your control of the **SKI TIGER II**. If this happens, move your **SKI TIGER II** to a new location or wait until the CB unit stops transmitting.

CAUTION: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

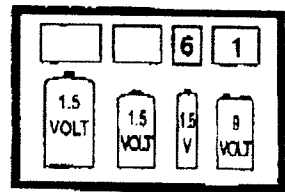

ALKALINE BATTERIES RECOMMENDED

CAUTION:
 DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.
 DO NOT MIX OLD AND NEW BATTERIES.
 OBSERVE CORRECT POLARITY.
 REMOVE BATTERIES WHEN NOT IN USE.