

 
## OPERATING INSTRUCTIONS

Please read carefully before starting to operate.

It is recommended to operate the WING RACER under the adult supervision.

### FEATURES

**7 Functions**- runs forward, backward, turns left and right, stop. Driver has realistic steering action when turning.



### BATTERY REQUIREMENT

One "9V" battery for transmitter.

- 4 "AA" alkaline (1.5V) or Ni-Cd (1.2V) for WING RACER.


### BATTERY INSTALLATION

#### (A) TRANSMITTER

- 1) Slide ON/OFF to OFF.
- 2) Press and pull the battery compartment cover in the direction of the arrow to remove it.
- 3) Put the "9V" battery in the compartment according to the polarity symbols (+ and -) marked inside.
- 4) Replace the battery door.

#### (B) WING RACER

- 1) Slide ON/OFF to OFF.
- 2) Use a coin to twist the slot on the battery compartment cover, then lift open the cover.
- 3) Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- 4) Close the battery door and slide the battery compartment's latch to lock it.

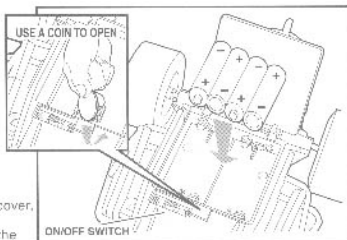

### HOW TO OPERATE:

- 1) Slide ON/OFF on the bottom of the WING RACER to ON.
- 2) Slide ON/OFF on the transmitter to ON
- 3) Use the transmitter's levers to control the movement and direction of the WING RACER.

#### Left Control Lever

- Push forward to move forward.
- Pull backward to move backward.
- Release to stop.

#### Right Control Lever

- Push left to turn left.
- Push right to turn right.
- Release to go straight.

### TRIM CONTROL SWITCH

Trim switch is located on underside of WING RACER between front tires. It is used to align the wheels of your WING RACER for constant turning and drive. Move switch left or right until desire alignment is reached.

#### CAUTION

- Avoid combined use of charged Ni-Cd batteries and discharge Ni-Cd batteries.
- Do not make old batteries with new batteries.
- Avoid using alkaline batteries and Ni-Cd batteries together.
- Remove batteries after you have finished using your WING RACER.

