

OPERATING INSTRUCTIONS

Please read carefully before starting to operate. It is recommended to operate the vehicle under adult supervision. Not recommended for children under 4 years of age.

Note: Can not play 2 vehicles together in the same frequency.

FEATURES

Full Function- runs forward, backward, turns left and right, stops and turbo speed.

BATTERY REQUIREMENT

- One "9V" battery for transmitter.
 - 5 "AA" batteries for vehicle.
- Batteries are not included.

BATTERY INSTALLTION

(A) TRANSMITTER

- 1) Slide ON/OFF to OFF.
- 2) Press and pull the battery compartment cover in the direction of the arrow to remove it.
- 3) Put the "9V" battery in the compartment according to the polarity symbols (+ and -) marked inside.
- 4) Replace the battery compartment cover.

(B) VEHICLE

- 1) Slide ON/OFF on the bottom of the vehicle to OFF.
- 2) Use a coin to turn the battery door stopper until it stops and open the battery door.
- 3) Install the batteries in the compartment as

indicated by the polarity symbols (+ and -) marked inside.

- 4) Replace the battery door and use a coin to turn the stopper back.

HOW TO OPERATE:

- 1) Slide ON/OFF on the bottom of the vehicle to ON.
- 2) Slide ON/OFF on the transmitter to ON.
- 3) Use the transmitter's levers to control the movement and direction of the vehicle.

Note: If the vehicle moves slowly or does not move at all, replace the batteries with fresh ones.

Left Control Lever

- Push forward to move forward.
- Pull backward to move backward.
- Release to stop.
- Push forward and press upper key to move turbo speed.

Right Control Lever

- Push left to turn left.
- Push right to turn right.
- Release to go straight.

CAUTION

- Do not mix battery types.
- Do not mix old and new batteries.
- Replace all together.
- Observe correct polarity.
- Remove batteries when not in use.
- Non-rechargeable batteries are not to be recharged.

- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.

Note: Dispose of old batteries promptly and properly; do not burn or bury them.


TRIM CONTROL SWITCH

Trim switch is located on the underside of vehicle between the front tires. It is used to align the wheels of your vehicle for consistent turning and drive. Turn switch clockwise and anti-clockwise until desired alignment is reached.


THE FCC WANTS YOU TO KNOW:

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

STREET CUSTOMS INCLUDES

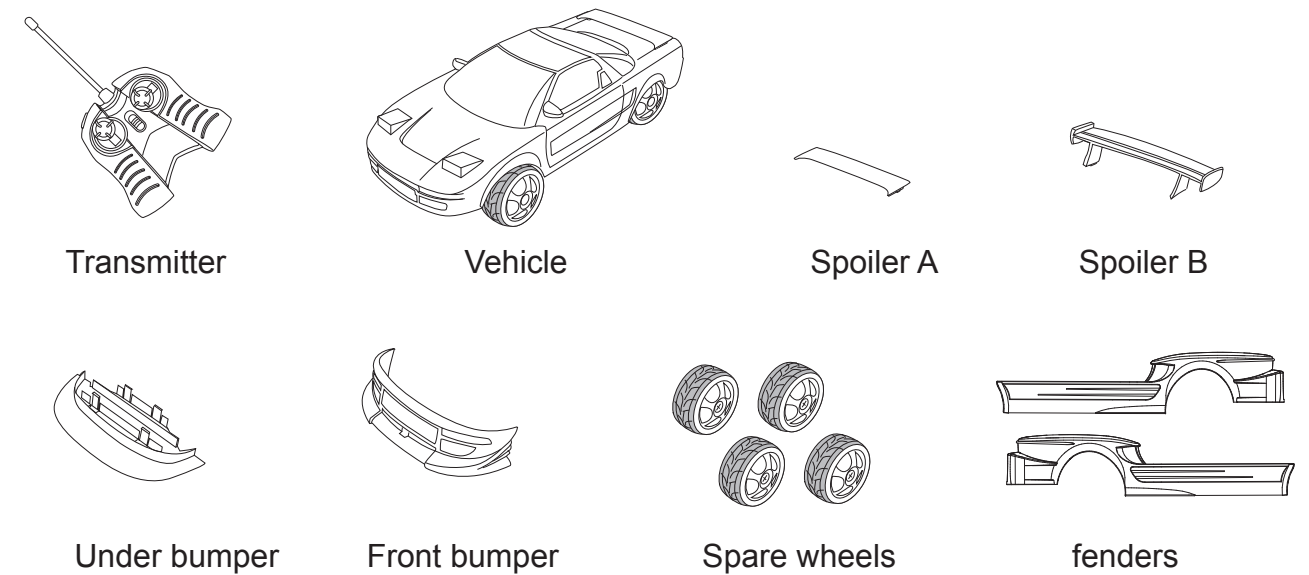

ATTACH THE TUNE-UP PARTS

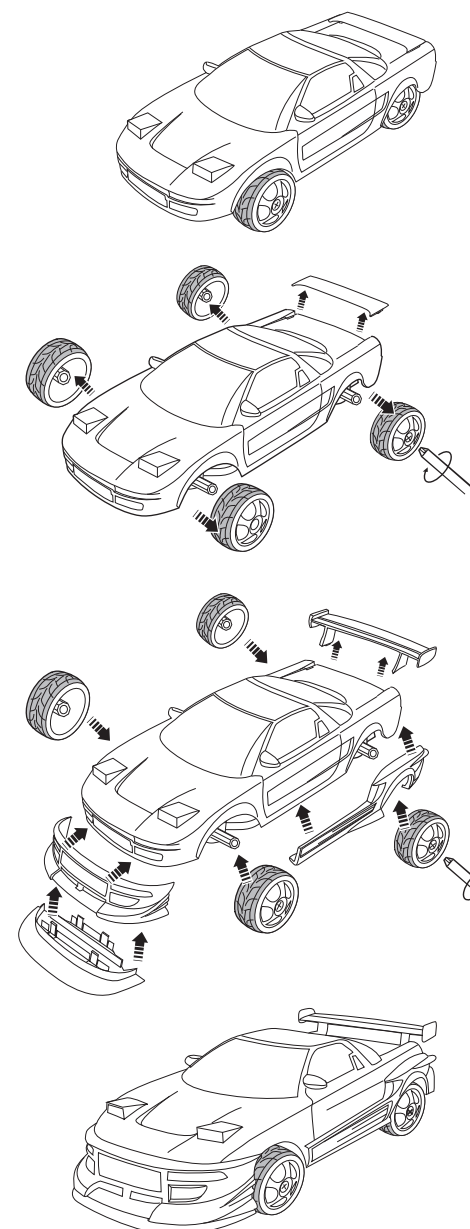

Before tuning

- 1) use a Philips screwdriver to loosen the four wheels.
- 2) Remove the spoiler A and the wheels.

TUNING

- 1) Use a Philips screwdriver to secure the four spare wheels to the car.
- 2) Snap on the front bumper, under bumper, two side fenders and spoiler B.

After tuning