
FORD - FOCUS FAST FIX

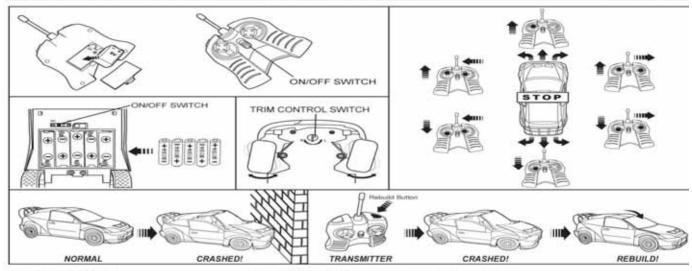

OPERATING INSTRUCTIONS

Please read carefully before starting to operate. It is recommended to operate the vehicle under adult supervision. Not recommended for children under 4 years of age. Keep the instruction manual for future reference. Note: Cannot play 2 vehicles together in the same

- Full Function-runs forward, backward, turns left and right,
- stops. The vehicle is also designed with impact responsive

BATTERY REQUIREMENT (Not Included)

- One "9V" battery for transmitter. 5 "AA"(1.5V) batteries for vehicle.
- Alkaline batt ries recommended.

Note: Batteries included are for "Try Me" function only Replace them with fresh ones before you operate the vehicle.

BATTERY INSTALLTION

(A) TRANSMITTER

- Slide ON/OFF to OFF
- 3) Put the "9V" battery in the compartment cover and lift the cover up.
- the polarity symbols (+ and -) marked inside
- 4) Replace the battery compartment cover.

(B) VEHICLE

- 1) Slide ON/OFF on the bottom of the vehicle to OFF.
- Use a coin to turn the battery door stopper until it stops and open the battery door.

- Remove the batteris included for "Try Me" purpose from the compartment and install five fresh "AA"(1.5V) batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- 4) Replace the battery door and use a coin to turn the stopper back

HOW TO OPERATE:

- 1) Side ON/OFF on the transmitter to ON.
 2) Side ON/OFF on the bottom of the vehicle to ON.
 3) Use the transmitter's levers to control the movement and direction of the vehicle. Always keep the vehicle. within the rang of control.

Note: If the vehicle moves slowly or does not move at all. e the batteries with fresh o

Left Control Lever

- Push forward to move forward. Pull backward to move backward. Release to stop.

Right Control Lever (Works together with Left Control

- Push right to turn right

Release to go straight.
 Rebuild Button (Top Right Button on the transmitter)

- When the vehicle collides with a wall or other large hard
- obstacles, the bumper, doors and windscreen are "Crashed". The vehicle can still be operated in its "Crashed" state. Press the "Rebuild Button", and the
- vehicle rebuilds itself to original normal shape.

CAUTION

The try me device is not a toy, unplug it from the chassis before you operate the vehicle and keep it away from

children.

- Do not mix battery types. Do not mix old and new batterie Replace all together.
- Observe correct polarity
- Remove batteries when not in use.

 Non-rechargeable batteries are not to be recharged.

 Rechargeable batteries are to be removed from
 the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision. Only batteries of the same or equivalent type as
- recommended are to be used.
- Exhausted batteries are to be removed from the toy.
 The supply terminals are not to be short circuited.
 Note: Dispose of old batteries promptly and properly; do not burn or burn the burn or burn to burn them.

TRIM CONTROL SWITCH

Trim switch is located on the chassis between the front tires. It is used to align the wheels of your vehicle for consistent turning and drive. Turn switch clockwise and anti-clockwise until desired alignment is reached.

THE FCC WANTS YOU TO KNOW:

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

To assure continued FCC compliance:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.