



## OPERATING INSTRUCTIONS

Please read carefully before starting to operate. It is recommended to operate the shark under adult supervision. Not recommended for children under 6 years of age. Keep the instruction manual for future reference.

**Note:** Cannot play 2 sharks together in the same frequency.

## FEATURES

Digital porportion with additional dive and float functions.

Your Black Tip is able to perform incredible actions:

- The fish body swims agility.
- The tail sways quickly or slowly up to the control.

## BATTERY REQUIREMENT (Not Included)

- 3 x AAA(1.5V) batteries for transmitter.
- 6 x C(1.5V) batteries for charger base.
- 1x4.8V battery package for Black Tip. (Included)

## BATTERY INSTALLATION

### (A) Transmitter

- 1) Loosen the screws, located on the bottom, lift and open the cover.
- 2) Install 3"AAA"(1.5V) batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- 3) Replace the battery compartment cover and tighten the screws.

### (B) Charger Base

- 1) Loosen the screws, located on the bottom, lift and open the cover.
- 2) Install 6"C"(1.5V) batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- 3) Replace the battery compartment cover and tighten the screws.

**NOTE:** Fifteen minutes are all that's required for fully charging battery

pack, then your BLACK TIP can be played eight minutes more or less. Charging the rechargeable pack for more than fifteen minutes will not give you longer operating time.

## HOW TO OPERATE:

- 1) Press ON/OFF, the indicator light turns red, the fish performs various kinds of actions by pressing its starter handle.
- 2) Use the transmitter's function buttons to control the movement and direction of the fish. Always keep the fish within the range of control.

**Note:** If the fish moves slowly or does not move at all, insert it onto the charger base for being charged.

### Speed-up and Slow-down button

- Press the Speed-up to Speed-up function.
- Press the Slow-down to Slow-down function.

### Float and Dive control button

- Press the top left button to float function.
- Press the bottom left button to sink function.

### Left-turn and Right-turn control button

- Press the left-turn or right-turn button on the right hand; the fish turns left or right.

## NOTE:

- 1) The fish is protected by low voltage when it is lack of electricity, the fish can be up to water automatically instead of deeping into the bottom. If you press the sink control button, the fish will refuse, but it can perform other swimming actions.
- 2) The transmitter is waterproof and the shark's speed can up to 7 levels by controlled.
- 3) Your BLACK TIP can dive to 0.5M deep in the water and swim 3M far.
- 4) When the fish is out of control, it can float on water automatically.

## CAUTION

- Do not mix battery types.
  - Do not mix old and new batteries.
  - Replace all together.
  - Observe correct polarity.
  - Remove batteries when not in use.
  - Non-rechargeable batteries are not to be recharged.
  - Rechargeable batteries are only to be charged under adult supervision.
  - Only batteries of the same or equivalent type as recommended are to be used.
  - Exhausted batteries are to be removed from the toy.
  - The supply terminals are not to be short circuited.
- Note:** Dispose of old batteries promptly and properly; do not burn or bury them.

## THE FCC WANTS YOU TO KNOW:

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.