

# OFF ROADER

 
60-4413

OWNER'S MANUAL - please read before using this equipment.

## What's Included:

Transmitter	Bumper
Vehicle	Reseau
Fog light	Winch
Emitter	Accumulator


Your Off Roader include attachments you see here:



Foglight



 
Accumulator

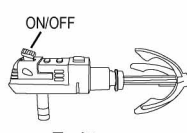

Emitter



 Pothook



Reseau

Thank you for purchasing Off Roader from RadioShack.


This truck is built on a 1:16 scale and can reach speed up to 350 feet per minute. The truck is available in two frequencies (27 and 49 MHz) so that you can race against other RC vehicles.

## OPERATING INSTRUCTIONS

 Please read carefully before starting to operate. It is recommended to operate the vehicle under the adult supervision. Not recommended for children under 4 years of age.

Keep the instruction manual for future reference.

**Note:** Cannot play 2 vehicles together in the same frequency.

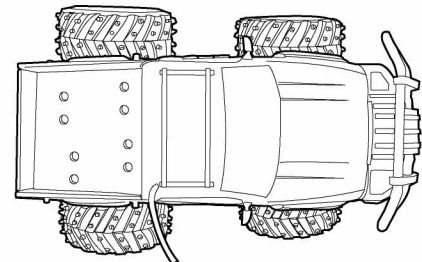


## Batteries Requirement

- One 9V battery for the transmitter. (Not included)
- Six 1.5V AA batteries for the vehicle. (Not included)
- Two LR44 button cell batteries for the fog light. (Included)
- Alkaline batteries recommended.

## BATTERY INSTALLATION

### ON THE TRANSMITTER

 - 1) Slide ON/OFF to OFF.
- 2) Open the battery compartment cover.
- 3) Insert one 9V battery in the back compartment according to the polarity symbols (+ and -) marked inside.
- 4) Replace the battery cover.

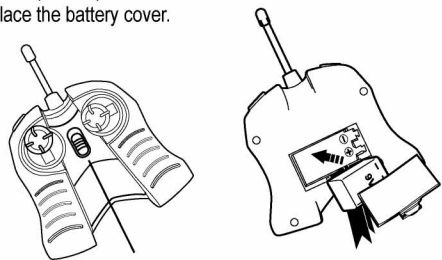

ON/OFF SWITCH


**Note:** Dispose of old batteries promptly and properly; do not burn or bury them.

## CAUTION

 
- Do not aim the bullet at eyes and face.
- Use missiles supplied by the manufacturer only.
- Do not mix battery types.
- Do not mix old and new batteries.
- Replace all together.
- Observe correct polarity.
- Remove batteries when not in use.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

## ON THE VEHICLE

- 1) Slide ON/OFF on the bottom to OFF.
- 2) Slide OPEN/LOCK on the bottom to OPEN, grasp the tab to slide downwards and flip it open.

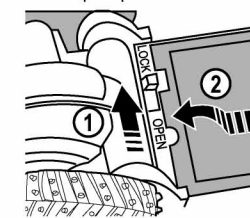


 - 3) Insert six AA batteries in the compartment according to the polarity symbols (+ and -) marked inside.
- 4) Replace the battery cover, slide OPEN/LOCK to LOCK.

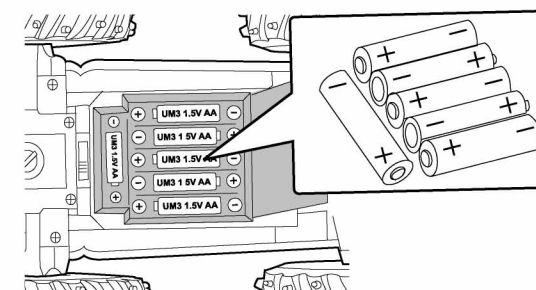

## REPLACING BATTERIES ON THE FOG LIGHT

 
1. Unscrew the screw on the back of the fog light and remove the cover carefully.
2. Replace with two button cell batteries according to the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure with the screw.

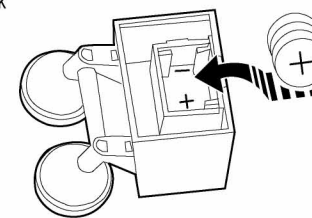

**NOTE:** if you don't plan to use the OFF ROADER several days, remove the batteries can leak chemicals that can damage electronic parts.

## Operation

 - 1) Slide on vehicle.
- 2) Slide on the transmitter.
- 3) Use the transmitter's levers to control the movement and direction of the vehicle.

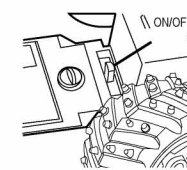

**R**  
**RadioShack**  
 www.radioshack.com™

©2005 RadioShack Corporation.  
 All Rights Reserved.  
 RadioShack and RadioShack .com are trademarks  
 used by RadioShack Corporation.

- 4) Slide ON/OFF switches on both vehicle and transmitter to OFF after play.
- 5) Debug the turn button of the front wheel and make it symmetry of left and right.
- 6) First move the "OFF ROADER" with the transmitter before using.

**Note:** If the vehicle moves slowly or does not move at all, replace the batteries with fresh ones.

## Left control lever

- Push forward to move forward.
- Pull backward to move backward.
- Release to stop.

## Right Control Lever

 
- Push left to turn left.
- Push right to turn right.
- Release to go straight.

## Attachment operation:

- Press the button to light the fog light, press again to turn the light off.
- Pull the rope out of the winch. If the switch is locked, the pulling rope can not turn back automatically; then press switch again, it can turn back automatically.
- Insert the bullet into the emitter, and then press the button to send out the bullet.
- Fix the bumper in front of the vehicle to protect you car.
- Put your attachments in the back compartment and protect them with the resseau.

## WHEEL ALIGNMENT

If the vehicle does not drive in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the vehicle. Turn the control toward L if the vehicle is pulling to the right or toward R if the vehicle is pulling to the left.

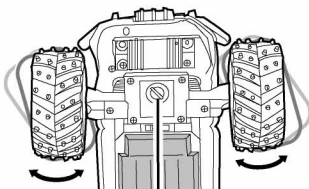

TRIM CONTROL SWITCH

## FCC CERTIFICATION

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**CE0700**

## Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102  
 12/99