



# MP3 HUMMER H1

**ATTENTION PARENTS:  
IT IS RECOMMENDED THAT THIS TOY  
AND ALL ACCESSORIES BE  
PERIODICALLY EXAMINED FOR  
POTENTIAL HAZARDS AND THAT ANY  
POTENTIALLY HAZARDOUS PARTS  
BE REPAIRED OR REPLACED.**

**Item # 913891A**  
FAST LANE is a mark of  
as una marca de Geoffrey, Inc.  
(C) Geoffrey, Inc.  
10000 Highway 101, Philadelphia, PA  
19154  
Toys'R'Us, Inc., Wayne, NJ 07070,  
Imported by/importado por:  
Toys'R'Us (Australia) PTY Ltd.,  
Regents Park NSW 2143, Australia.  
Made in China/Hecho en China  
[www.toysrus.com](http://www.toysrus.com)



**Operation instruction**  
Please read carefully before starting to operate.  
It is recommended to operate the vehicle under adult supervision.  
Not recommended for children under 8 years of ages.  
Keep the instruction manual for future reference.  
Note: Can not play 2 vehicles together in the same frequency.

**Features**

 
- Full function - runs forward & backward, turns left & right and stops.
- Radio control with the function of playing music, with USB cable to download music from PC.
- Runs with working headlights.

**Battery requirement**


- One 9V battery (included) for transmitter.
  - Five 1.5V AA batteries (included) for one 9V battery pack (not included) for vehicle.
- Alkaline batteries are recommended!

**Battery installation**

- (A) Transmitter
- 1) Slide ON/OFF to OFF.
  - 2) Press and pull the battery compartment cover in the direction of the arrow to remove it.
  - 3) Put the 9V battery in the compartment according to the polarity symbols (+ and -) marked inside.
  - 4) Replace the battery compartment cover.

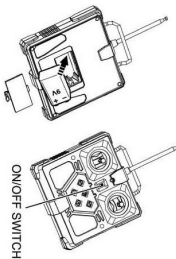

 - (B) Vehicle
- 1) Slide ON/OFF to OFF.
  - 2) Use a coin to turn the battery door and open the battery door.
  - 3) Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
  - 4) Replace the battery door and use a coin to turn the stopper back.

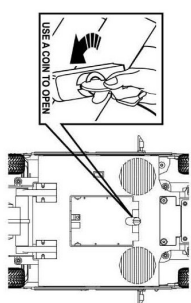

The vehicle can also be operated with a 9V Ni-Cd rechargeable battery pack (not included).


- 1) Make sure the battery pack has been fully charged!
- 2) Remove the battery case.
- 3) Put 9V battery pack in the battery compartment according to the polarity symbols (+ and -) marked inside.
- 4) Replace the battery door.

**How to operate**

 - 1) Slide ON/OFF on the bottom of the vehicle to ON.
  - 2) Slide ON/OFF on the transmitter to ON.
  - 3) Use the transmitter's levers to control the movement and direction of the vehicle.
- Note: If the vehicle moves slowly or does not move at all, replace the batteries with fresh ones.


**Left Control Lever**

- Push forward to move forward.
- Pull backward to move backward.
- Release to stop.

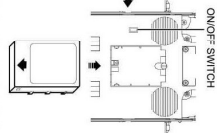


**Right Control Lever (Works together with Left Control Lever)**

 - Push left to turn left.
- Push right to turn right.
- Release to go straight.

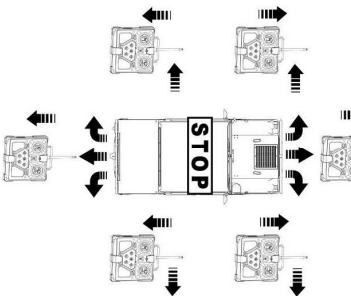


**Radio control with the function of playing music**

 - Press A & C to select the music.
- Press B to play or pause the music. Long press B for 2 second to stop the music.
- Press D & E to adjust the volume.
- MP3 POWER ON—Long press B for 2 second.
- MP3 POWER OFF—Long press B for 2 second.

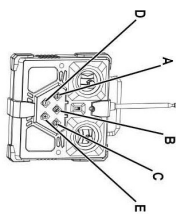

 **Download Music**  
Remove the trunk and connect the USB cable to the vehicle and computer to download music.

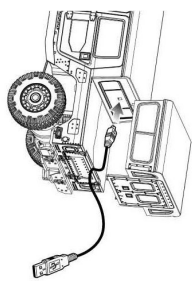

**System requirement**

- The processor's style should be up Pentium 133MHz.
- The hard disk's space is 15MB.
- USB connector.
- Windows 2000/XP or a similar one.
- Comment: The system of Windows 98 must be install USB connector drivers to make transshipment.
- The music supported style: MP3 / WMA / WAV.

- 4) Slide the ON/OFF switch on both vehicle and transmitter to OFF when you are not playing with it.

**HELPFUL HINTS**

- You cannot operate 2 vehicles in the same area when they both have the same operating frequency.
- When the vehicle moves slowly or does not move or flip as commanded, replace the batteries in the vehicle or the transmitter with new ones.
- Running your vehicle continuously for long periods generates high heat levels, which causes wear and tear on the motor. To keep heat levels down, let your vehicle cool at least 10 minutes before installing new batteries.
- If the vehicle's motor runs but does not respond to the transmitter, move closer to the vehicle and try again.
- For best performance, hold transmitter antenna upright and pointing at the vehicle.
- If you're not planning to play with the MP3 HUMMER H1 for a few days, remove the batteries. Never leave weak or dead batteries in the vehicle or/and transmitter, as they may leak damaging chemicals.
- Do not attempt to pick up the vehicle when in motion.
- Keep fingers, hair and loose clothing away from the tires and wheel hub when the vehicle is switched on.
- If a CE transmitter is being operated nearby, it might interfere with your control of the vehicle. If this happens, move the vehicle and transmitter to a new location or wait until the CE stops transmitting.

**CARE**

- Never drive the vehicle on a wet floor, on sand or in mud, rain, or snow. These conditions can damage it.
- Do not store vehicle or controller near sources of heat in direct sunlight for long periods.
- Do not leave outside overnight, as night dampness is harmful to interior mechanism.
- If there is any indication of thunder, do not play outside.
- Do not try to disassemble any part of the vehicle.
- Do not drop or attempt to crash the vehicle into walls or other obstacles.
- Occasionally wipe the vehicle with damp cloth to keep it looking new. Do not use harsh chemicals to clean the vehicle.

**BATTERY CAUTION**

- Do not mix old and new batteries.
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
  - Observe correct polarity.
  - Remove batteries when not in use.
  - Non-rechargeable batteries are not to be recharged.
  - Rechargeable batteries are to be removed from the toy before being charged.
  - Rechargeable batteries are only to be charged under adult supervision.
  - Only batteries of the same or equivalent type as recommended are to be used.
  - Exhausted batteries are to be removed from the toy.
  - The supply terminals are not to be short circuited.
- NOTE:** Dispose of old batteries promptly and properly; do not burn or bury them.

**THE FCC WANTS YOU TO KNOW:**

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio /TV technician for help.

**FCC NOTE:**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(1) This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.