

Bluetooth Speaker

BTSPK34



IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully.
2. Keep these instructions in a safe place.
3. Follow all instructions.
4. Do not use this product near water.
5. Cleaning: Do not use liquid cleaners or aerosol cleaners. Clean only with a dry damp cloth.
6. Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
7. Only use attachments/accessories specified by the manufacturer.
8. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.
9. This product shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on or near the product.
10. Object Entry: Never push objects of any kind into this product through the openings.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Warning

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.


Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Canadian ICES-003 and RSS-210

Thank you for your purchase.


Please visit our website at www.borne-lifestyle.com.

LOCATION OF CONTROLS

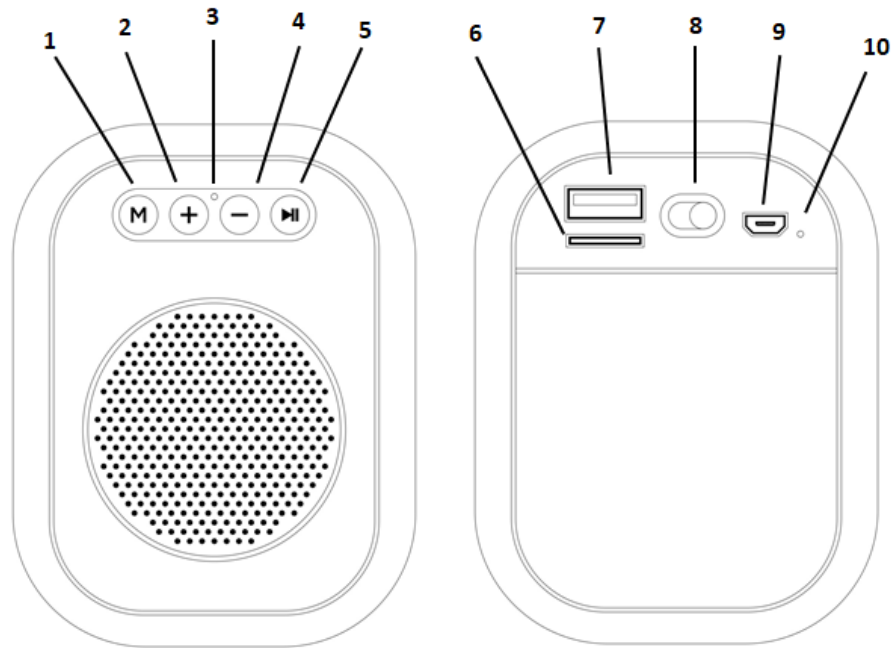

1. Mode Button	6. Micro SD Slot
2. Volume Up / Next Track	7. USB Jack
3. Microphone	8. ON/OFF Switch
4. Volume Down / Previous Track	9. Micro USB Charging Port
5. Play/Pause Control/ Call Answer/End	10. Charging Indicator

CHARGING THE SPEAKER

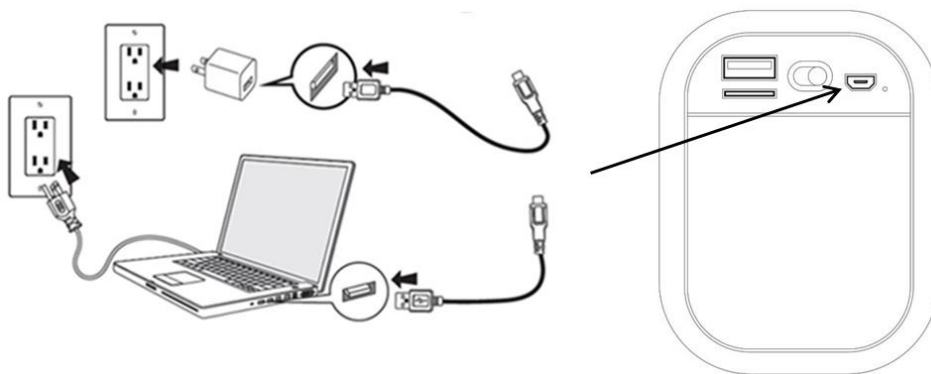

Using the Charging Cable provided, plug the Micro USB Tip into the Micro USB Charging Port and plug the other end (USB Tip) into a USB port on your computer or USB wall charger (not included). A red LED indicator light will illuminate while charging and turn off when completed.

A full charge will take approximately 4 to 5 hours.

Product and Battery Disposal

This product contains a built-in lithium battery and should not be disposed of in normal household waste. The battery in this device is not intended to be removed by the individual or end user. For disposal and recycling, please contact your local waste management authorities. The recycling and processing of electronic waste will make a significant contribution towards helping protect the environment.

Warning: To reduce the risk of fire and burns, do not disassemble, crush, puncture, short external contacts or dispose of in fire or water.

POWER ON/OFF

To turn on and off the speaker, slide the ON/OFF Switch to either position.

BLUETOOTH MODE

Pairing a Bluetooth Enabled Device for the First Time to your Bluetooth Speaker

NOTE: Refer to the user manual for your Bluetooth enabled device for instructions on pairing and connecting Bluetooth devices.

1. Keep the speaker and your Bluetooth enabled device within 1 metre at all times during the pairing process.
2. On the speaker, slide the ON/OFF Switch to the ON position. You will hear a voice prompt indicating what mode you are in. (If you are already in the Bluetooth pairing mode, skip to step 4.)
3. Press the **Mode (M)** button (Fig 1) on the speaker repeatedly until you are in the Bluetooth pairing mode.
4. Once you are in the Bluetooth pairing mode, you will hear "**BLUETOOTH MODE**" and the LED Bluetooth Indicator Light will start to flash rapidly.
5. Turn on the Bluetooth function on your Bluetooth enabled device and search for Bluetooth devices. When the search is complete, select "**BTSPK34**" from the Bluetooth device list. (If a password is required, use "0000" to finalize the pairing process.)
6. When the Bluetooth connection is successful, you will hear "**CONNECTED**" and the LED Bluetooth Indicator Light will start to flash slowly. This means you are connected and the speaker is ready for use.

NOTE:

- If pairing was unsuccessful, turn off the speaker first and repeat the steps above to re-pair again.
 - After successful pairing, paired devices will remember each other. Unless pairing information is deleted, re-pairing is not required after the first time.
 - If you want to pair the unit with other Bluetooth enabled devices, please disconnect/remove the existing device and pair with the new device according to the steps above.
7. Once you are successfully connected, you can use the controls on your Bluetooth enabled device to increase or decrease the volume.

HANDSFREE SPEAKERPHONE

While the speaker is in Bluetooth Mode and successfully paired to your smartphone, you can answer phone calls through this speaker and use it as a speakerphone.

Press the Call Answer or Call End (Fig. 5) Button and to pick up and hang up a phone call.

To increase or decrease the volume of the phone call, press and hold the Volume Up or Volume Down Button

USB & MICRO SD MEDIA MODE

This speaker allows you to play music from an USB thumb drive or a Micro SD memory card with MP3 formatted files.

1. After you turn on the unit, insert the USB thumb drive or Micro SD card containing your music. The unit will say “**MUSIC**” and the speaker will automatically start playing your MP3 formatted files.
2. To increase or decrease the volume, press and hold the Volume Up or Volume Down Buttons
3. To skip to the next or previous song, press the Next Track or Previous Track Buttons.
4. To pause and resume playback, press the Play/Pause button anytime during playback

Note:

- To insert the Micro SD card, use your fingernail to help push it in all the way until it clicks in. To remove the Micro SD card, push it in all the way and it will click out.
- The USB thumb drive or a micro SD memory card (not both) can be left in the speaker or taken out. It will not affect the function of the speaker as you cycle through the different modes.

FM MODE

1. On the speaker, slide the ON/OFF Switch to the ON position. You will hear a voice indicating what mode you are in.
2. Press the **Mode** button (Fig 1) on the speaker repeatedly until the unit says you are in the “**FM Mode**”
3. Press and hold the Play/Pause Button and it will start to auto scan all available FM stations from 87.5 to 108.0 MHz with strong signals and save them.
4. Press the **–** button (Fig 4) or **+** button (Fig 2) on the front of the speaker to tune the saved radio stations.

NOTE:

- You should use the charging cable supplied and connect it to the charging port. This acts as an antenna for the FM radio and will help with reception.
- Do not use the FM Mode while charging the speaker. This will cause radio interference.
- If the FM reception is weak, try repositioning the unit near a window until you get the best reception.

Need help? Please call us.

If you encounter any difficulties with this product, please call or email us and our representatives will be ready to help you.

Toll free: 1-800-593-6669 (Monday to Friday: 9am – 5pm EST)

UK toll free: 0800 954 1053 extension 165

Email: support@borne-lifestyle.com

Thank you for your purchase. We want you to start enjoying your product.

LIMITED WARRANTY

Warning: Some Products may contain components that are small enough to be swallowed. Keep out of the reach of children.

Before returning your Product for service under this Warranty, (i) please read the instruction manual carefully and visit our website at www.borne-lifestyle.com for product updates and extended support documentation (e.g., Frequently Asked Questions, Common Troubleshooting Guides); (ii) please contact Borne Electronics Support if you are still having trouble with your Product.

Subject to the terms and conditions herein, Borne Electronics warrants to the original purchaser of the Product (“Customer”) that the Product will be free from defects in material or workmanship under normal, noncommercial use (“Defects”) for a period of 1 year.

Warranty Period encompasses separate “Coverage Periods” for Parts and Labor, with each Coverage Period to begin from the original date of Customer purchase. Parts are covered for a period of 1yr. Labour is covered for 90 days. If Customer returns a defective Product during the applicable Warranty Period, Borne Electronics will, at its option during the specified Coverage Periods for Parts and Labor (as applicable), either: (i) repair the Product or (ii) replace the Product with a new or refurbished Product, in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges for which the Customer is responsible. The foregoing states the Customer’s exclusive remedy and Borne Electronics’ sole liability for breach of the limited warranty contained herein.

This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product by any party other than Borne Electronics or a party authorized in writing by Borne Electronics; (c) any damage to Product due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product; (d) cosmetic damage to the Product caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions; or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer’s commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or

otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. Borne Electronics expressly disclaims any warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify Borne Electronics for any damages claimed against Borne Electronics for such uses.

This Warranty specifically and expressly excludes any Product that is purchased by Customer as a “floor” or “display” model. Any such Product is purchased by Customer “AS IS” and Borne Electronics disclaims any Warranties, express or implied, in relation thereto.

EXCEPT FOR THE EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCT IS PROVIDED “AS IS”, AND BORNE ELECTRONICS DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF (I) MERCHANTABILITY, (II) FITNESS FOR A PARTICULAR PURPOSE, OR (III) NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL BORNE ELECTRONICS BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE). ADDITIONALLY, EVEN IF BORNE ELECTRONICS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, BORNE ELECTRONICS’ AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT COSTS PAID BY THAT CUSTOMER FOR THE PRODUCT CAUSING SUCH DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction.

To obtain Warranty service, Customer must call Borne Electronics Support prior to making a Product Return. Customer must include with Product Return the following items: (i) a dated sales receipt that indicates the place of purchase, model number of Product, and amount paid; (ii) a detailed description of Customer’s problem with Product; (iii) Customer’s full name, phone number, and return address, and; (iv) a money order for any applicable shipping costs made out to Edco Electronics Inc. to cover return shipping charges to US and Canadian destinations only. Borne Electronics will not make return shipments to a P.O. Box. For shipping to international addresses, actual freight will be charged to Customer. Failure to enclose any of these items may delay the processing of your Warranty claim. Return your Product freight-prepaid in its original packaging, or packaging that affords an equal measure of protection. Please allow 4 to 6 weeks for the processing of your claim.

Edco Electronics Inc.
8484 Esplanade
Montreal, Quebec H2P 2R7
Canada
Toll Free: 1-800-593-6669 (Monday to Friday: 9am to 5pm EST)
Email: support@borne-lifestyle.com

ISED Canada Statement:

This device complies with RSS Gen of the Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure: This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.