




Bluetooth Tower Speaker BTSPKT01



PLEASE READ THIS USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR
FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully.
 2. Keep these instructions in a safe place.
 3. Heed all warnings.
 4. Follow all instructions.
 5. Do not use this product near water.
 6. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8. Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care—quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
- 
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
 10. If the provided plug does not fit into your outlet, consult an electrician for replacement of the outlet.
 11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
 12. Only use attachments/accessories specified by the manufacturer.
 13. Unplug this product during lightning storms or when unused for a long periods of time.
 14. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as the power-supply cord or the plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.
 15. This product shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the product.
 16. Do not overload the wall outlet. Use power source only as indicated.
 17. Use replacement part as specified by the manufacturer.
 18. The product may be mounted to a wall only if recommended by the manufacturer.
 19. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
 20. Power Sources: This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
 21. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
 22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instructions concerning the use of the product by a person responsible for their safety.
 23. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC Warning

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Cet appareil est conforme aux CNR exemptes de licence d'Industrie Canada .

 
Son fonctionnement est soumis aux deux conditions suivantes :

- (1) Ce dispositif ne peut causer d'interférences ; et
- (2) Ce dispositif doit accepter toute interférence ,
y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

Thank you for your purchase.


Please visit our website at www.borne-lifestyle.com.

LOCATION OF CONTROLS

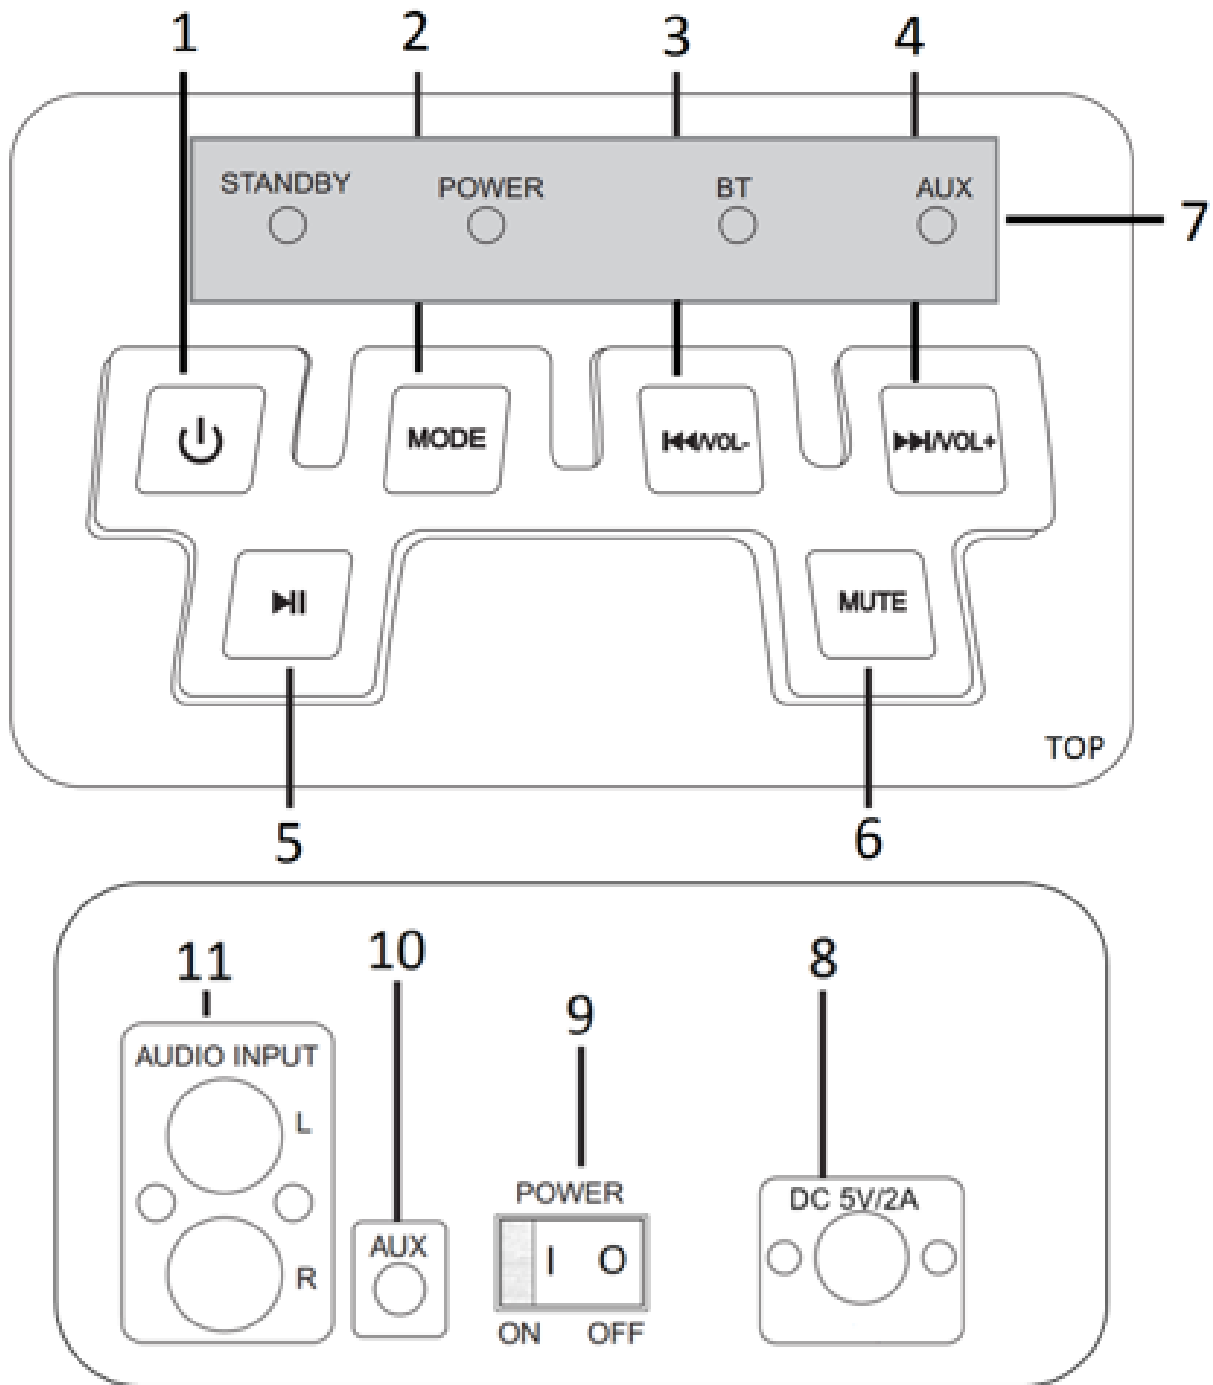


| | |
|----------------------------------|---|
| 1. Power Button | 7. Standby/Power/Bluetooth/Auxiliary Indicator Lights |
| 2. Mode Button | 8. 12V / 1.5A DC Input Jack |
| 3. Previous / Volume Down Button | 9. Power Switch (ON/OFF) |
| 4. Next / Volume Up Button | 10. Auxiliary Jack |
| 5. Play/Pause Button | 11. RCA Audio Input Jacks |
| 6. Mute Button | |

 REMOTE CONTROL DESCRIPTION

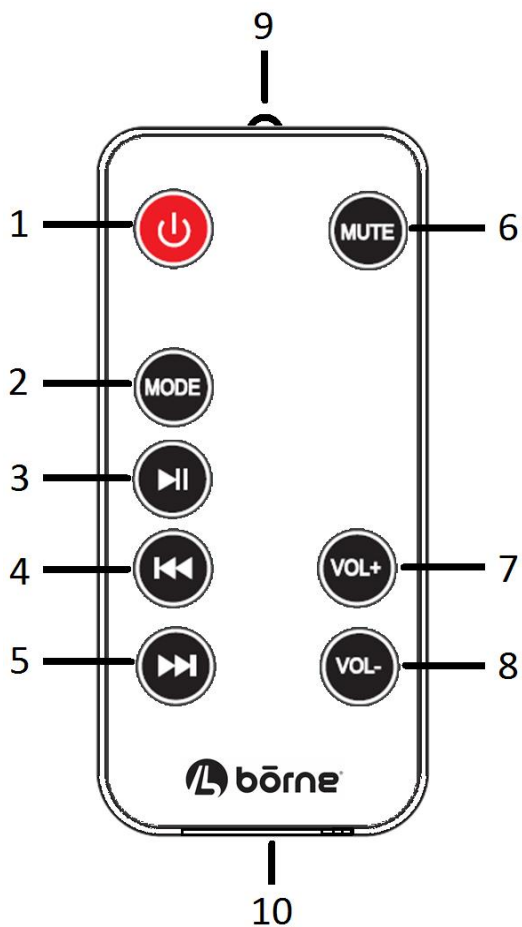


| |
|-----------------------|
| 1. Power Button |
| 2. Mode Button |
| 3. Play/Pause Button |
| 4. Previous Button |
| 5. Next Button |
| 6. Mute Button |
| 7. Volume Up Button |
| 8. Volume Down Button |
| 9. Transmitter |
| 10. Battery Bay |

 CONNECTING TO THE TOWER SPEAKER

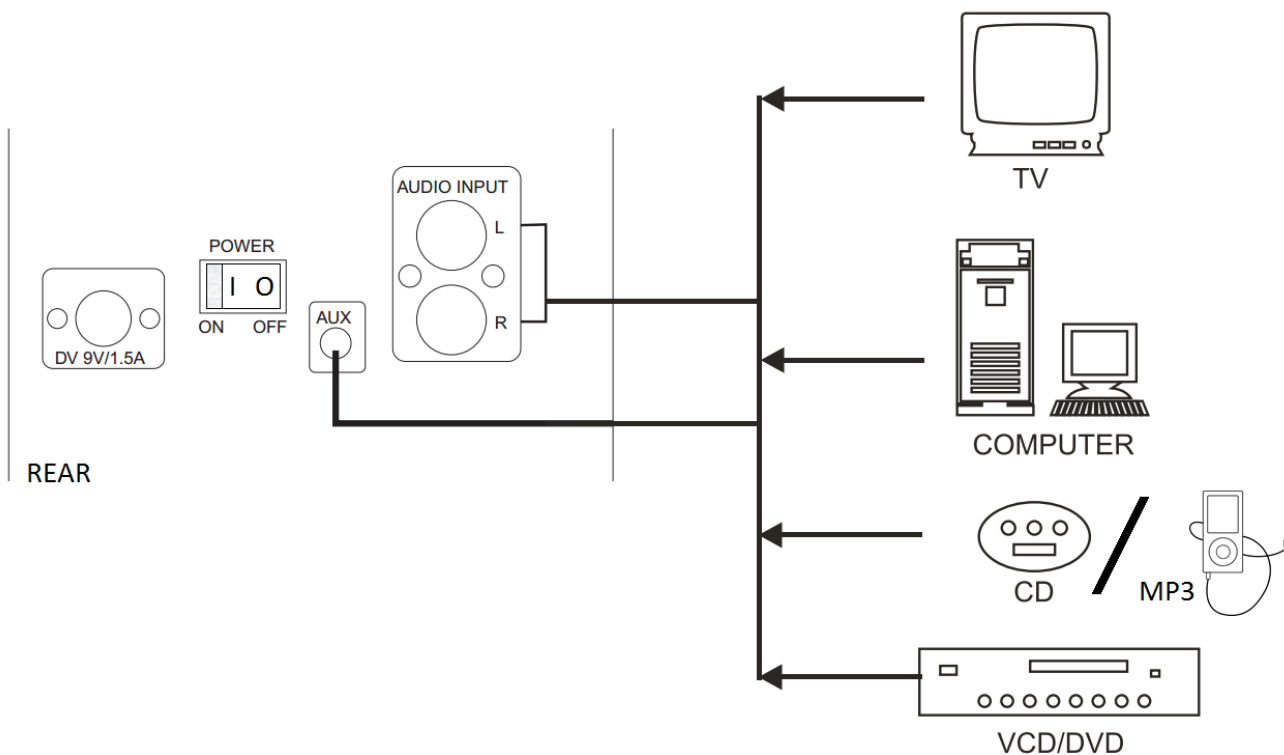

REMOTE CONTROL – BATTERY INSTALLATION

 
A battery will already be included inside your remote control. For first time use, please pull out the plastic insulation tab to activate the battery connection with the remote. Your remote is now ready to use. See illustration below.

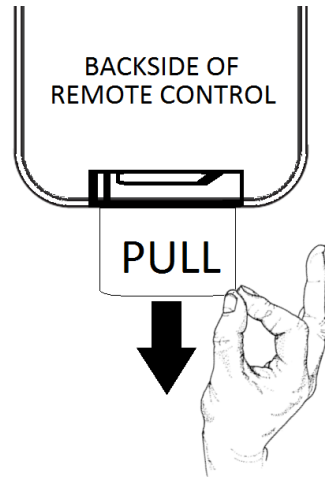


To install or replace the battery in the remote control, follow the below steps:

2. Turn the remote over on its backside and locate the Battery Bay.
3. Slide the plastic tab on the Battery Bay to the right with your right thumb and hold (1).
4. Simultaneously, use your right index finger to pull out the battery tray (2).
5. A CR2032 battery (3V) may only be used.
6. Once battery has been replaced, slide the battery tray back into the remote.

 NOTE: Positive (+) side of the battery must face up. See illustration below.

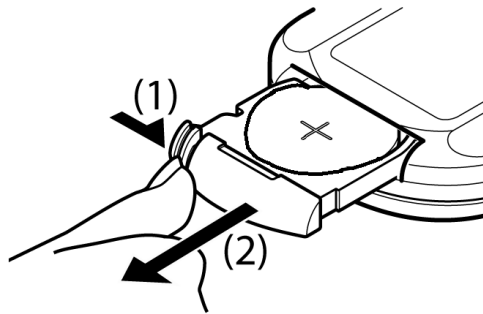

 The operating range of the Remote Control to the Bluetooth Tower Speaker is approximately 6 meters and at a 30° angle on either side of the Bluetooth Tower Speaker. See illustration below.

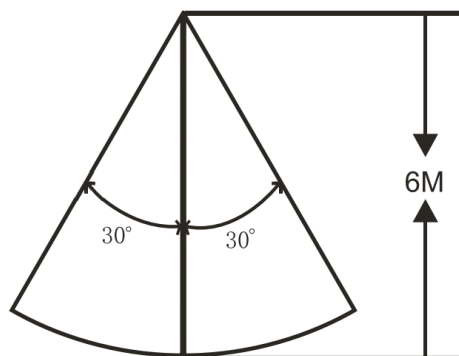

GENERAL OPERATION

This speaker has multiple functions:

- Bluetooth Mode
 - Audio Line In Mode (Auxiliary)
 - Audio Line In Mode (RCA)
1. Plug-in the included AC adapter into a wall outlet providing 120V, and the other end to the Bluetooth Tower Speaker 12V / 1.5A DC Input Jack on the rear side.
 2. Turn the Power Switch on the back of the Bluetooth Tower Speaker to the ON position. A Blue indicator light will illuminate under the `Power` logo at the top of the Speaker.
 3. The Bluetooth Tower Speaker is now powered on and ready to use.
 4. To put the Speaker into Standby Mode, press the Power Button on the Speaker or the Remote Control. A Red indicator light will illuminate beside the `Standby` logo confirming the Speaker is in Standby Mode.
 5. To increase or decrease the volume on the Speaker, press and hold the Volume Up or Volume Down Button on either the Speaker or Remote Control.
 6. To skip songs forward or backward, press the Next or Previous Buttons on either the Speaker or Remote Control.
 7. To pause and resume playback, press the Play/Pause Button on either the Speaker or Remote Control.
 8. To mute the sound at any time, press the Mute Button on the Remote Control or the Speaker.

BLUETOOTH MODE

1. By default, the Bluetooth Tower Speaker powers on into Bluetooth Mode. (If you have switched to another mode, use the Mode Button either on the Remote Control or on the Bluetooth Tower Speaker to switch back to Bluetooth Mode. A Blue indicator light will illuminate beside the `BT` logo.
2. Once the Bluetooth Tower Speaker is in Bluetooth Mode, you will hear an audible tone indicating the Speaker is in pairing mode. On your device, navigate to its Bluetooth settings and turn ON Bluetooth. Then allow for your device to discover other Bluetooth devices. When you see `BTSPKT01` appear on your device, pair with it. Another audible sound will be heard confirming the Speaker has been paired with your Bluetooth device successfully.

NOTE: Please refer to your Bluetooth devices user manual on Bluetooth pairing.

NOTE: Paired devices will remember each other. Unless pairing information is deleted, re-pairing is not required after the first time.

NOTE: If you want to pair the unit with other Bluetooth enabled devices, please disconnect the existing device and pair with the new device according to the steps above.

3. Once paired, play any audio from your Bluetooth device as usual and the sound will be heard from the Bluetooth Tower Speaker.

NOTE: If sound cannot be heard, make sure to raise the volume both on your Bluetooth device, and on the Bluetooth Tower Speaker.

AUDIO LINE MODE (AUXILIARY / RCA)

1. Once the Bluetooth Tower Speaker has been powered on, press the Mode Button either on the Speaker or Remote Control to change the source to Auxiliary. A Blue Indicator light will illuminate beside the `AUX` logo.
2. Insert either a 3.5mm Auxiliary or RCA audio (red/white) cable into the backside of the Speaker and the other end of the cable to your audio device.
3. Play any audio from your audio device and the sound will be heard from the Bluetooth Tower Speaker.

NOTE: If sound cannot be heard, make sure to raise the volume both on your Bluetooth device, and on the Bluetooth Tower Speaker.

Need help? Please call us.

If you encounter any difficulties with this product, please call or email us and our representatives will be ready to help you.

Toll free: 1-800-593-6669 (Monday to Friday: 9am – 5pm EST)

Email: support@borne-lifestyle.com

Thank you for your purchase. We want you to start enjoying your product.



LIMITED WARRANTY

Warning: Some Products may contain components that are small enough to be swallowed. Keep out of the reach of children.

Before returning your Product for service under this Warranty, (i) please read the instruction manual carefully and visit our website at www.borne-lifestyle.com for product updates and extended support documentation (e.g., Frequently Asked Questions, Common Troubleshooting Guides); (ii) please contact Borne Electronics Support if you are still having trouble with your Product.

Subject to the terms and conditions herein, Borne Electronics warrants to the original purchaser of the Product ("Customer") that the Product will be free from defects in material or workmanship under normal, noncommercial use ("Defects") for a period of 1 year.

Warranty Period encompasses separate "Coverage Periods" for Parts and Labor, with each Coverage Period to begin from the original date of Customer purchase. Parts are covered for a period of 1yr. Labour is covered for 90 days. If Customer returns a defective Product during the applicable Warranty Period, Borne Electronics will, at its option during the specified Coverage Periods for Parts and Labor (as applicable), either: (i) repair the Product or (ii) replace the Product with a new or refurbished Product, in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and Borne Electronics' sole liability for breach of the limited warranty contained herein.

This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product by any party other than Borne Electronics or a party authorized in writing by Borne Electronics; (c) any damage to Product due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product; (d) cosmetic damage to the Product caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions; or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. Borne Electronics expressly disclaims any warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify Borne Electronics for any damages claimed against Borne Electronics for such uses.

This Warranty specifically and expressly excludes any Product that is purchased by Customer as a "floor" or "display" model. Any such Product is purchased by Customer "AS IS" and Borne Electronics disclaims any Warranties, express or implied, in relation thereto.

EXCEPT FOR THE EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCT IS PROVIDED "AS IS", AND BORNE ELECTRONICS DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF (I) MERCHANTABILITY, (II) FITNESS FOR A PARTICULAR PURPOSE, OR (III) NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY

APPLICABLE LAW, IN NO EVENT WILL BORNE ELECTRONICS BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE). ADDITIONALLY, EVEN IF BORNE ELECTRONICS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, BORNE ELECTRONICS' AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT COSTS PAID BY THAT CUSTOMER FOR THE PRODUCT CAUSING SUCH DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction.

To obtain Warranty service, Customer must call Borne Electronics Support prior to making a Product Return.

Customer must include with Product Return the following items: (i) a dated sales receipt that indicates the place of purchase, model number of Product, and amount paid; (ii) a detailed description of Customer's problem with Product; (iii) Customer's full name, phone number, and return address, and; (iv) a money order for any applicable shipping costs made out to Edco Electronics Inc. to cover return shipping charges to US and Canadian destinations only. Borne Electronics will not make return shipments to a P.O. Box. For shipping to international addresses, actual freight will be charged to Customer. Failure to enclose any of these items may delay the processing of your Warranty claim. Return your Product freight-prepaid in its original packaging, or packaging that affords an equal measure of protection. Please allow 4 to 6 weeks for the processing of your claim.

Edco Electronics Inc.

8484 Esplanade

Montreal, Quebec H2P 2R7

Canada

Toll Free: 1-800-593-6669 (Monday to Friday: 9am to 5pm EST)

Email: support@borne-lifestyle.com