




## REMOTE CONTROL ELECTRONIC DEADBOLT PROGRAMMING & OPERATIONS MANUAL

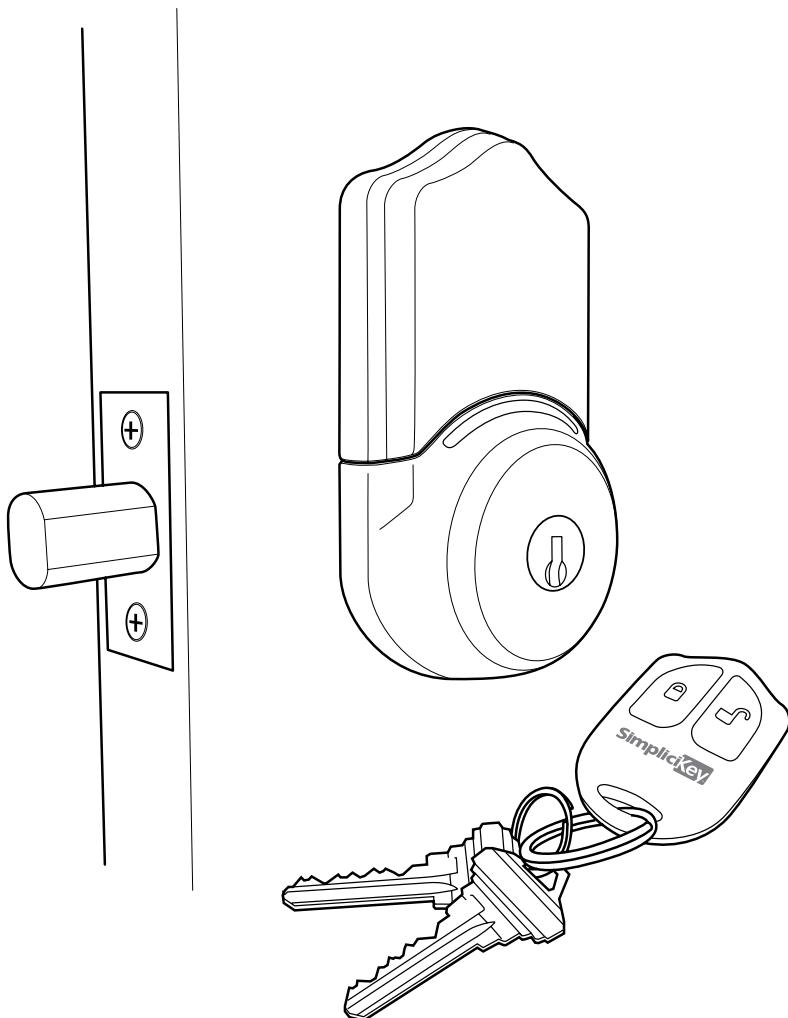


**DO NOT THROW AWAY UNTIL YOU HAVE  
SAFELY STORED YOUR ADMIN CODE**




## Parts List

First things first -- make sure have all of the necessary components in your SimpliciKey package.

1 interior lock

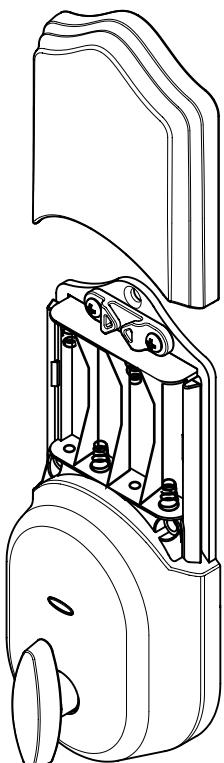

1 interior plate

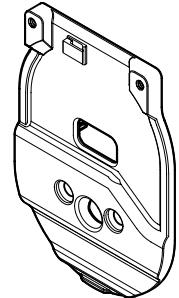

2 short bolts



2 long bolts



2 long wood screws




2 strike wood screws



2 short wood screws




1 exterior lock

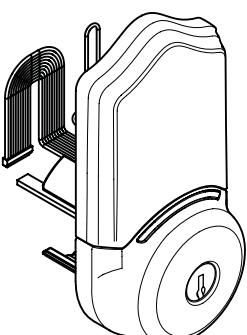

1 strike plate




1 deadbolt lock

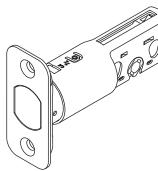

2 keys




2 remote control keyfobs

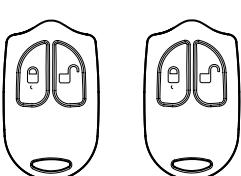

1 reinforcement plate



 1 strike box



## LOCK INSTALLATION INSTRUCTIONS




### 1. Remove Existing Deadbolt

First, remove the two interior screws securing the lock.

Next, remove the interior and exterior lock components.


Finally, take out the existing deadbolt slide assembly.

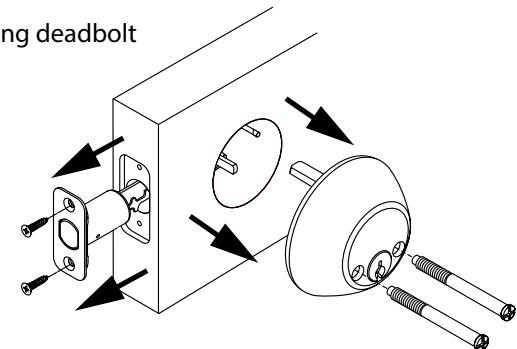

### 2. Check Cutout Size




Stop to measure the cutouts for the lock components. If the main cutout is 2-1/8 inches in diameter, and latch cutout is 1 inch, you're ready to go. If not, you may need to use the Advanced Guide to help you adjust your door.

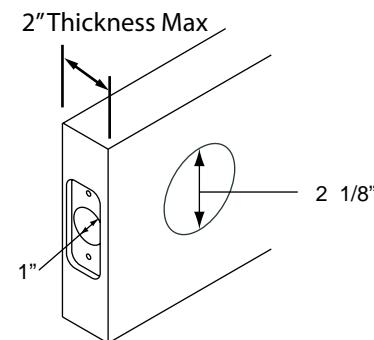

### 3. Remove Existing Strike Plate

First, remove the two existing strikeplate screws.

Remove the strike plate and any other hardware behind the plate.

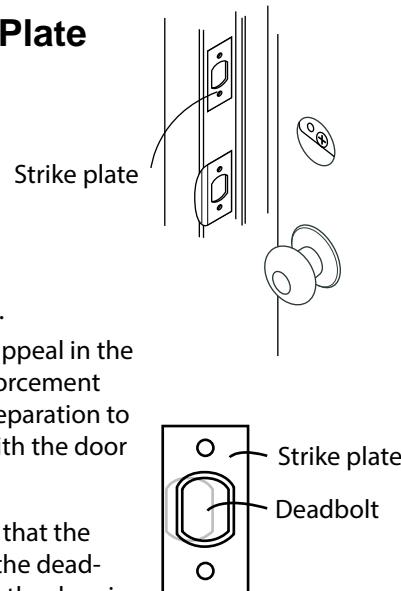

### 4. Install New Strike Plate

Install the strike plate, then tighten screws.


For added security, and greater aesthetic appeal in the door frame, install the strike box and reinforcement plate. This may require additional door preparation to make sure the strike plate remains flush with the door frame.

Place strike plate into door frame to check that the plate sits flush with the frame. Make sure the deadbolt freely slides into the strike plate when the door is closed by rotating the thumbturn.


Confirm that the deadbolt is aligned properly with the strike plate by pressing the lock button on a remote control keyfob with the door closed.

If the deadbolt is not properly aligned with the strike plate, refer to the Advanced Guide to help you adjust the strike plate position.

#### Standard Installation

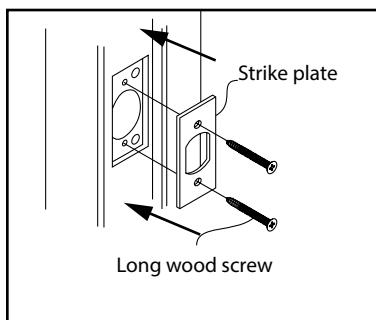

#### Enhanced Security Installation

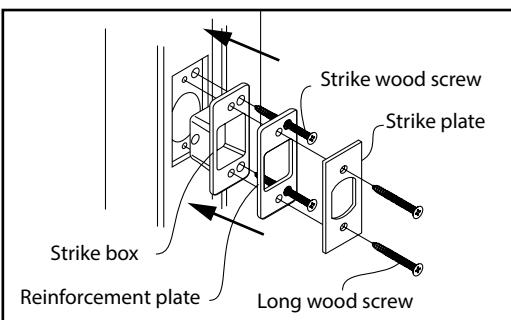

### 5. Install New Deadbolt


Place deadbolt into door, check to see if cross-hairs are centered.

To adjust the deadbolt length, twist the deadbolt slide assembly to extend and center in cutout.

Make sure cross-hairs are on the lower part of the assembly.


Check that the plate sits flush with the door.

Secure the deadbolt plate to the door with two short wood screws

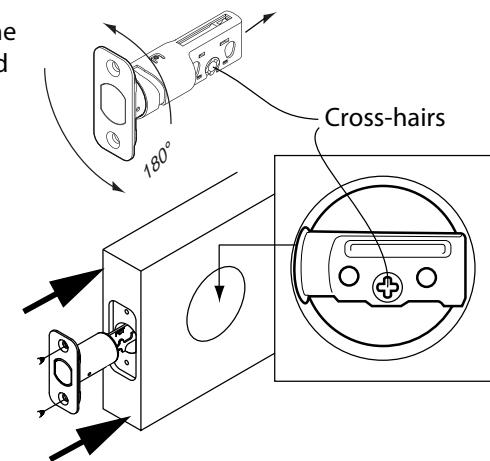

#### Critical Point

Insert the flat bar horizontally into the cross-hairs of the deadbolt slide assembly.

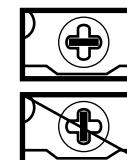


Correct



Incorrect

### 6. Install Exterior Lock


Slide the wires above the deadbolt slide assembly.

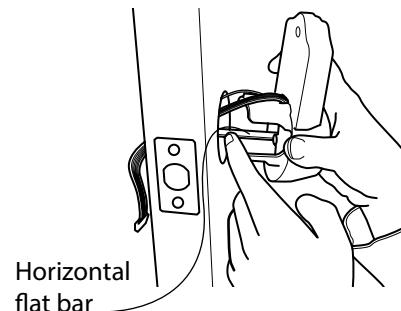



## 7. Install Interior Plate

Slide wires through wire hole of interior lock plate. Be sure to keep wires out of the way by sliding both wires into the plastic clip on the interior plate.

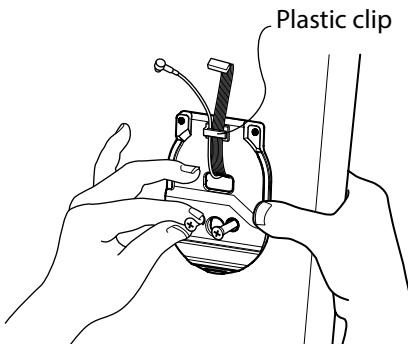


Insert two long bolts through plate, latch, and thread into external lock, securing all pieces snugly.





## 8. Attach Wires

Attach the black connector to the port on the green circuit board with the white rectangle around it labeled J4.

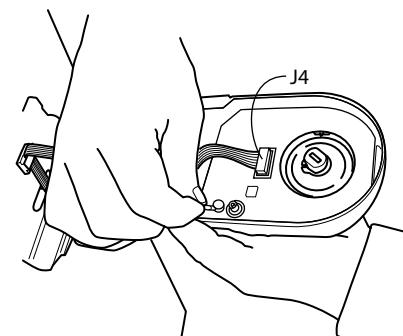

Attach other connector to the port on the green circuit board just below the top left screw. CONNECT ANTENNA is labeled (see picture ).

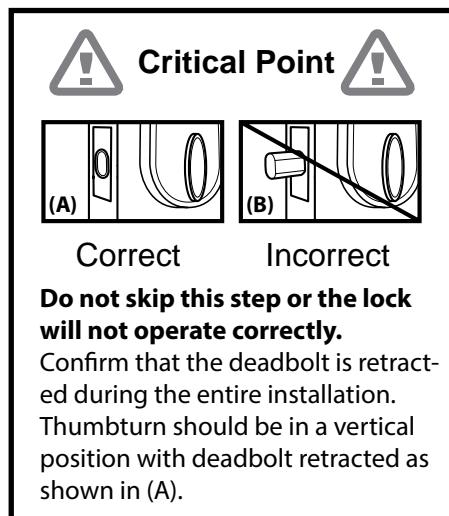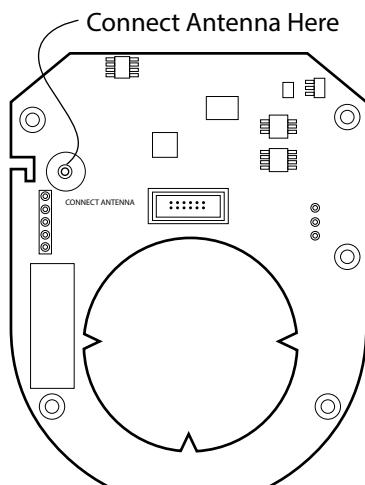

## 9. Install Interior Lock

Guide excess wiring into cavity above the green circuit board. Align thumbturn with flat bar to mount to interior plate. (Thumbturn must be in the vertical position and deadbolt must remain retracted). Attach interior lock to interior plate with the two short bolts through holes under battery case. Be careful not to pinch the wires as you install the lock.




## 10. Test the Manual Deadbolt

Insert key into cylinder and turn to extend deadbolt to locked position. If the deadbolt will not extend, or there is resistance when turning, double-check that all previous steps have been completed successfully. **Remove key.**

*If the deadbolt still will not extend, call Technical Support at 1-800-785-6595.*




Make sure the door is open and the deadbolt is free to auto-locate. Do not press any buttons until lock activity stops and confirmation tone sounds.

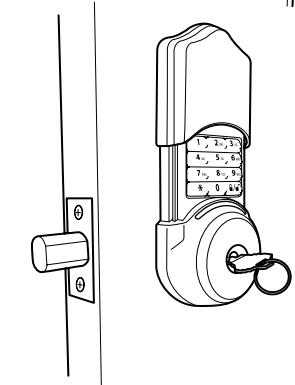

## 11. Install Batteries

Install four AA batteries in the compartment on interior lock.

Lock will automatically locate door position to determine right-hand / left hand orientation. Slide battery cover into place, concealing the battery compartment.

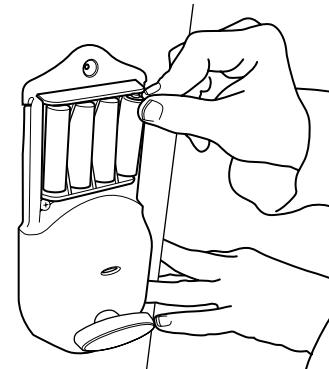

## DAILY USE INSTRUCTIONS



### 1. Remote Control Keyfob

**STOP!** Test your keyfobs now before attempting to program.

SimpliciKey comes factory programmed with the keyfobs included in the package. If the keyfobs are not registered with your lock, or to add additional keyfobs (up to the maximum limit of 8), please see the instructions on page 8.



Press to Lock



Press to Unlock



### 2. Keypad Key Codes

For your security, SimpliciKey requires that you enter your own Key Codes to activate this feature. Please see the instructions on page 9 to add up to 16 Key Codes.

#### When Unlocked:

Enter **your** Key Code and Lock/ Unlock button ( / ) to lock



**Key Code**

#### When Locked:

Enter **your** Key Code and **Lock/ Unlock** button ( / ) to unlock



**Key Code**



### 3. Keypad Settings

For your convenience, the keypad has options for quiet operation and faster locking, with instructions on page 10.

When simple lock is ON, pressing the Lock/Unlock button ( / ) will lock the door.

When simple lock is OFF, the user will have to enter the Key Code and press the Lock/Unlock button ( / ) to lock the door as shown above in Step 2.

When quiet lock is OFF, the keypad will emit softer tones during operation.



### 4. Manual Key Use

SimpliciKey offers a bump-resistant 6-pin keyway should you choose to use a metal key for entry.

## REMOTE CONTROL KEYFOB INSTRUCTIONS




**STOP!** Test your keyfobs now before attempting to program.





#### Critical Point



Your administration code (Admin Code) can be found on the back of this booklet. The Admin Code can be changed by following instructions on page 12.

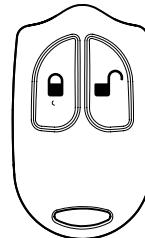

  The lock may time out if too much time passes between entering commands. If this happens, you will need to start over.

Command	Press
<b>Add Remote Control Keyfob</b>	
1. Enter your Admin Code, press *	
2. Enter "ADD FOB", press *	
3. The blue LED below the keypad will begin to flash. You will have nine seconds to register your keyfob.	
4. While the blue light is flashing, press both keyfob buttons for no more than 1 second. If you do not get the happy tone, press both buttons immediately again. If the tone is happy, then you're right, if it sounds like a chirp then start over.	
<b>Delete an Individual Remote Control Keyfob</b>	
1. Enter your Admin Code, press *	
2. Enter "DEL FOB", press *	
3. Press and hold either keyfob button	
4. Test the keyfob	
<b>Delete all Remote Control Keyfobs</b>	
1. Enter your Admin Code, press *	
2. Enter "DEL FOBS", press *	
3. Repeat "DEL FOBS", press *	
4. Test the keyfobs to confirm	

## KEYPAD INSTRUCTIONS



### Critical Point

Your administration code (Admin Code) can be found on the back of this booklet. The Admin Code can be changed by following instructions on page 12.

Command	Press
<b>Add Key Code</b>	<p>Enter Admin Code </p> <p>2. Enter "ADD CODE", press *</p> <p>3. Enter the new Key Code, press * NOTE: Code can be 4-7 digits</p> <p>4. Repeat the new Key Code, press * *If error tone, start over</p> <p>5. Test the new Key Code, press </p>
<b>Delete a Key Code</b>	<p>Enter Admin Code </p> <p>2. Enter "DEL CODE", press *</p> <p>3. Enter the Key Code to be deleted, press *</p> <p>4. Repeat the Key Code to be deleted, press *</p> <p>5. Test the deleted Key Code, press </p>
<b>Delete all Key Codes</b>	<p>Enter Admin Code </p> <p>2. Enter "DL CODES", press *</p> <p>3. Repeat "DL CODES", press *</p> <p>4. Test the deleted Key Codes, press </p>

## KEYPAD INSTRUCTIONS



### Critical Point

Your administration code (Admin Code) can be found on the back of this booklet. The Admin Code can be changed by following instructions on page 12.

Command	Press
<b>Simple Lock Feature</b>	<p>L / UL Button (used for locking only)</p> <p>Enter Admin Code </p> <p>2. Enter "LOCK" and press *</p> <p>To turn simple lock ON, press 1, * and repeat</p> <p>To turn simple lock OFF, press 2, * and repeat</p>
<b>Quiet Lock Feature</b>	<p>Enter Admin Code </p> <p>2. Enter "SOUND" and press *</p> <p>To turn sound ON, press 1, * and repeat</p> <p>To turn sound OFF, press 2, *</p>
<b>Master Reset Feature</b>	<p>Remove one battery</p> <p>Press and hold any button and re-insert the 4th battery. Continue holding button for about 5 seconds after battery has been inserted</p>


### Critical Point

If the keypad flashes and a multi-tone alert goes off at any point while in admin mode, you have taken too long and will have to start over from the first step.

## CHANGING YOUR USER ADMIN CODE



Enter your Default Admin Code (see below) or the existing User Admin Code and press the \* key to begin Admin mode.

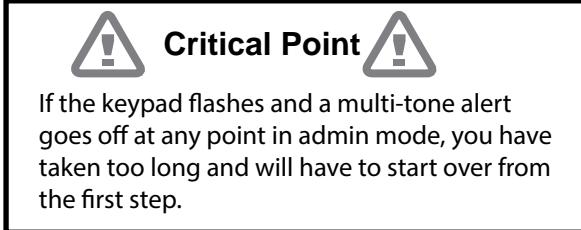

Next, enter ADMIN (23646) on the keypad and press the \* key.



Next, enter a new 4–6 digit Admin Code and then press the \* key.



Finally, repeat your entry of your new 4–6 digit Admin Code and then press the \* key.



You will then receive the final confirmation tone and the keypad will flash twice to let you know that the User Admin Code has been changed.

### New Admin Code

We recommend that you write down your new Admin Code here and keep this manual in a safe place.

\_\_\_\_\_


New Admin Code

**WARNING:** SimpliciKey submits that no lock, by itself, can provide complete security. As with other mechanical and electronic locking devices, the security of this lock has the potential to be compromised. We remind all our customers to exercise good safety procedures as part of your home security plan. SimpliciKey locks are manufactured to ANSI Grade 2 specifications. For added levels of security, consult a qualified locksmith or security expert.

## LOW BATTERY INDICATOR



When the 4 (AA) batteries get low, SimpliciKey will emit an alert tone and the low battery indicator LED and exterior LED will flash for approximately 15 seconds. Please be sure to replace your batteries at this time in order to ensure proper operation of SimpliciKey.

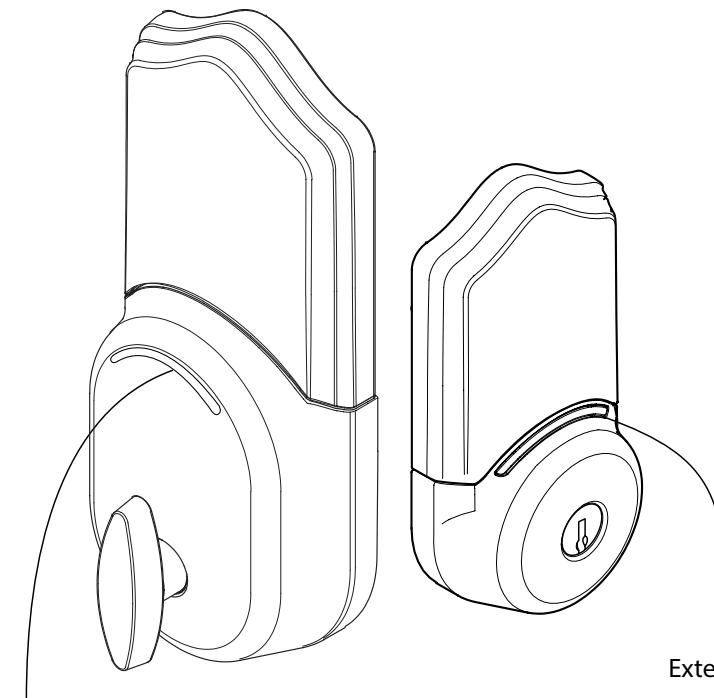

Low Battery Indicator LED

Exterior LED

**INSTRUCTIONS FOR USE:**

Always purchase the correct size and grade of battery most suitable for the intended use.

Clean the battery contacts and also those of the device prior to battery installation.

Ensure the batteries are installed correctly with regard to polarity (+ and -).

Remove batteries from equipment which is not to be used for an extended period of time.

Remove used batteries promptly.

**INSTRUCCIONES DE USO:**

Compre siempre el tamaño y grado correcto de la batería más adecuado para el uso previsto.

Limpie los contactos de la batería y también los del dispositivo antes de la instalación de la batería.

Asegúrese que las baterías están instaladas correctamente en relación con la polaridad (+ y -).

Retire las pilas del equipo que no va a ser utilizado durante un período prolongado de tiempo.

Retire las pilas usadas.

Changes or modifications not expressly approved by SimpliciKey could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Notes:

## Troubleshooting Tips:

Question	Solution
Why are the keyfob buttons reversed? (lock button unlocks, unlock button locks.)	Check to make sure the flat bar is horizontal through the cross-hairs during installation. (page 5)
Why doesn't the latch fully extend when I rotate the thumbturn?	Check to make sure the flat bar is horizontal through the cross-hairs during installation. (page 5)
Why doesn't the keypad respond when I press the buttons?	Check to make sure the batteries are charged and installed properly.
Why doesn't my pre-programmed keyfob get a response from the lock?	Check to make sure the wires are inside the clip and not pinched during installation. (page 6) 
Why doesn't the keypad respond when I press the buttons?	Check to make sure both wires are connected. (page 5) Check that the batteries are installed correctly.(page 6)
Why doesn't my pre-programmed keyfob get a response from the lock?	Check to make sure both wires are connected. (page 5) Check that the batteries are installed correctly.(page 6)
Why does the auto-locate feature keep giving me an error tone during installation?	Check that the deadbolt is retracted and the thumbturn is vertical during installation. (page 5)
Why does the lock give an error tone when the door is closed and lock button is pressed?	Manually check the deadbolt to make sure it is aligned with the strike plate. (pages 4, 6)

For additional tips and troubleshooting, please visit

[www.SimpliciKey.com](http://www.SimpliciKey.com)

1 (800) 785-6595



**Keep this code safe**  
**Mantén este código**  
**en un lugar seguro**

Place Label Here  
Coloca la Etiqueta Aquí

Default Admin Code/Código Predeterminado de Administrador

**LW**  
**+2**

Lifetime limited finish and mechanical warranty  
2-year electronic warranty

Garantía limitada de por vida para el acabado y el sistema mecánico

Garantía de 2 años para el sistema electrónico

Changes or modifications not expressly approved by SimpliciKey could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference  
(2) this device must accept any interference received, including interference that may cause undesired operations

© SimpliciKey 2013

**DO NOT THROW AWAY UNTIL YOU HAVE  
SAFELY STORED YOUR ADMIN CODE**

Revision 3-2