

# User`s Manual



- G56C Series ( G56C-1 / G56C-2 / G56C-3 / G56C-5 / G56C-6 )

This instruction is applied to below models:



G56C-1



G56C-5



G56C-2



G56C-6



G56C-3

## Table of Contents

Precautions and Notices.....	1
1 Getting Started.....	1
1.1 Understanding Hardware Features.....	1
Front and back components.....	1
Top components.....	2
Side components.....	3
1.2 Performing the Initial Start Up.....	4
1.3 Connecting to AC Power and Charging the Battery(Optional).....	5
1.4 Using Your Device in a Vehicle.....	6
Using the Car Holder.....	6
1.5 Connecting the Car Charger.....	7
2 Operating Basics.....	8
2.1 Turning On and Off.....	8
2.2 Operating the Device.....	8
2.3 Main Menu.....	9
2.4 Inserting a SD/MMC Card.....	10
3 Device Settings .....	11
3.1 Using Device Settings.....	11
3.2 Volume.....	11
3.3 Date/time.....	12
3.4 Backlight.....	13
3.5 Language.....	14
3.6 Adjust .....	14
4.1 GPS Receiver.....	15

## Table of Contents

5 MP3 Player.....	16
5.1 Starting and Exiting MP3 Player.....	16
5.2 Preparing the MP3 Files for You Device.....	17
5.3 MP3 playback control.....	17
6 MP4 Player.....	19
6.1 Starting and Exiting MP4 player.....	19
7 Photo Browsing.....	21
7.1 Viewing a photo file.....	21
8 Ebook Browsing.....	22
8.1 Viewing a ebook file.....	22
9 Trouble shooting and maintenance.....	23
9.1 Resetting Your System.....	23
9.2 Troubleshooting.....	24
Screen freezes .....	24
GPS Problems.....	25
9.3 Maintaining Your Device .....	26
10. Regulatory Information .....	27
10.1 Regulations Statements .....	27
Canada .....	28
11 Safety .....	29
11.1 Safety Precautions .....	29
About the Battery .....	30

## Precautions and Notices

- For your own safety, do not operate the controls of the product while driving.
- Use this product prudently. The product is intended to be used only as a navigation aid. It is not for precise measurement of direction, distance, location or topography.
- The calculated route is for reference only. It is the user's responsibility to follow the traffic signs and local regulations along the roads.
- When you get off the car, do not leave your device on the dashboard that is subject to direct sunlight. The overheating of the battery can cause malfunction and/or danger.
- GPS is operated by the United States government, which is solely responsible for the performance of GPS. Any change to the GPS system can affect the accuracy of all GPS equipments.
- GPS satellite signals cannot pass through solid materials (except glass). When you are inside a tunnel or building, GPS positioning is not available.
- A minimum of 4 GPS satellite signals is needed to determine current GPS position. Signal reception can be affected by situations such as bad weather or dense overhead obstacles (e.g. trees and tall buildings).
- Other wireless devices in the vehicle might interfere with the reception of satellite signals and cause the reception to be unstable.

## Precautions and Notices

- A car holder is needed when using the device in a car. Be sure to place the device in an appropriate place, so as not to obstruct the driver's view or deployment of air bags.

 


## Getting Started

### 1.1 Understanding Hardware Features

NOTE: Depending upon the specific model purchased, the colour of your device exactly match the device shown in this manual.

#### Front Components

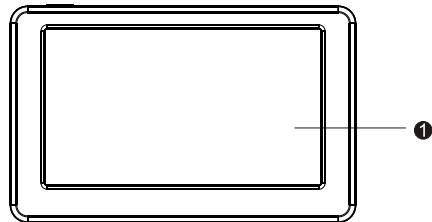


Ref	Component	Description
1	<b>Touch Screen</b>	Displays the output of your device. Tap the screen with your fingertip to select menu commands or enter information.

#### Back Components

 Ref	Component	Description
1	<b>Speaker</b>	Sends out music, sounds and voice.
2	<b>Reset Button</b>	Restart system.

## Getting Started

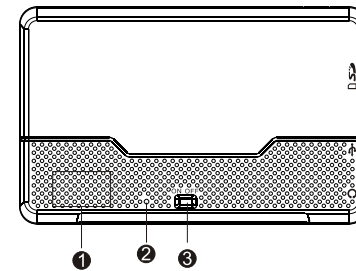

3 **ON/OFF Switch** The main power/battery cutoff switch.


#### Top Components



 Ref	Component	Description
1	<b>Power Button</b>	Turns on and off the device.
2	<b>Charge Indicator</b>	Glows bright amber to indicate that the battery is charging, and turns green when the battery is fully charged.

## Getting Started

### Side Components

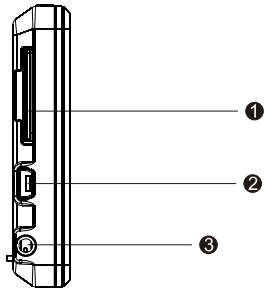


Ref	Component	Description
1	<b>SD/MMC Slot</b>	Accepts a SD(Secure Digital)or MMC ( MultiMedia Card)card for accessing data such as MP3 music.
2	<b>Mini-USB Connector</b>	Connects to the USB cable.
3	<b>Headphone Connector</b>	Connects to stereo headphones.

## Getting Started
 
### 1.2 Performing the Initial Start Up

1. Turn the ON/OFF switch to the ON position.

**CAUTION:** Always leave the ON/OFF switch in the ON position for normal operation.



2. Your device will automatically turn on. Connect the car charger as described in the next section.

3. The Opening screen appears.



4. The Main Menu appears as shown below. You can now use your device.




5. Fully charge the battery before using your device for the first time.

## Getting Started
 
### 1.3 Connecting to AC Power and Charging the Battery(Optional)

When charging the battery for the first time, you should charge it for at least 8 hours.

1. Slide and click the connector converter onto the AC adapter.
2. Connect the adapter cable to the bottom of your device.
3. Plug the AC adapter into a wall outlet.

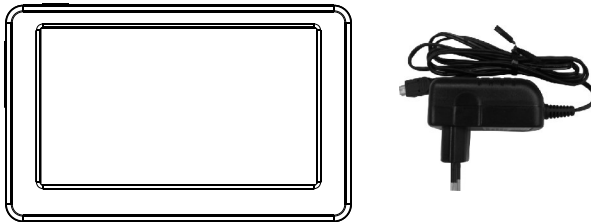

The charge indicator glows red when charging is in progress. Do not disconnect your device from AC power until the battery is fully charged, when the charge indicator turns amber. This will take a couple of hours.

**NOTE:**

- Do not immediately turn on your device after connecting the AC adapter to charge a power-depleted battery. If you need to turn on the device again, wait for at least one minute.
- Depending on your region of purchase, the connector converter may not look exactly the same as the picture shown.
- Your device can also be charged when it is connected to a desktop computer via the USB cable.

## Getting Started

**CAUTION:** For optimal performance of the lithium battery, take note of the following:

- Do not charge the battery where the temperature is high (e.g. in direct sunlight).
- There is no need to fully discharge the battery before charging. You can charge the battery before it is discharged.
- If you will not use the product for a long period of time, be sure to fully charge the battery at least once every two weeks. Over discharge of the battery can affect the charging performance.

### 1.4 Using Your Device in a Vehicle

A car holder and a car charger are supplied with your device.

#### Using the Car Holder

**CAUTION:**

- Select an appropriate location for the car holder. Never place the holder where the driver's field of vision is blocked.
- If the car's windshield is tinted with a reflective coating, an external antenna (optional) may be needed to route the antenna to the top of the car through a window. When closing the car window, be careful not to pinch the antenna cable. (Cars with an anti-jam window design may automatically leave adequate space as needed.)

The car holder consists of a bracket and a stand. Use the car holder to fix your device in a vehicle. Make sure that the GPS antenna has a clear view of the sky. (See the document supplied with the car holder for the installation instruction.)



For initial positioning, remain at the same spot with a clear view of the sky. The GPS may take a few minutes to find its current location initially.

**NOTE:** Depending upon the specific model purchased, the car holder supplied with your device may not look exactly the same as the picture shown.

 
## Getting Started

### 1.5 Connecting the Car Charger

The car charger supplies power to your device when you are using the device in a car.

**CAUTION:** To protect your device against sudden surges in current, connect the car charger only after the car engine has been started.

1. Connect one end of the car charger to the power connector of your device.
2. Connect the other end to the cigarette lighter in the car to power and charge your device. The indicator on the car charger lights in green to indicate that power is being supplied to your device.

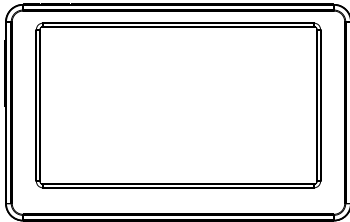


## Operating Basics

### 2.1 Turning On and Off

Use the power button to turn on and off your device.

 When you press the power button to turn off the unit, your device actually enters a suspend state and the system stops operating. Once you turn on the system again, it resumes.



### 2.2 Operating the Device

To communicate with your device, touch the screen with your fingertip. You can perform the following actions:

- . **Tap**  
Touch the screen once with your fingertip to open item or options.
- . **Drag**  
Hold your fingertip on the screen and drag up/down/left/right or across the screen.
- . **Tap and hold**  
Tap and hold your fingertip until an action is complete, or a result or menu is shown.



 
## Operating Basics

### 2.3 Main Menu

The first time you initialize your device, the Main Menu appears. The Main Menu is your starting place for various tasks. Tap a button to start a task or open another menu.



Press Menu, the second main menu will be displaying:

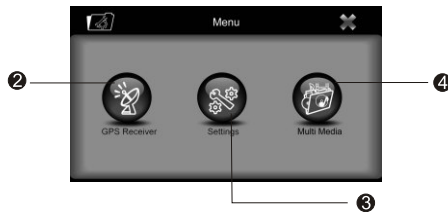

Ref	Button Name	Description	For Detailed Information
1	Navigation	Start navigation	
2	GPS Receiver	GPS Receiver testing	

## Operating Basics

 
3	Settings	Device Settings
4	Multi Media	MP3 and MP4 player and so on

### 2.4 Inserting a SD/MMC Card

Your device has a SD/MMC slot where you can insert an optional Secure Digital or Multi Media Card storage card.

To use a SD/MMC card, insert it into the slot, with the connector pointing to the slot and its label facing the front of the device.

To remove a card, first make sure that no application is accessing the card, then slightly push the top edge of the card to release it and pull it out of the slot.

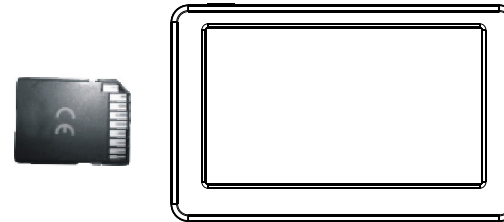

#### NOTE:

- . Make sure that no foreign objects enter the slot.
- . Keep a SD or MMC card in a well-protected box to avoid dust and humidity when you are not using it.

## Device Settings

### 3.1 Using Device Settings

To open the Device Settings menu, first tap the Settings button on the second main menu.

 


The Device Settings menu appears as shown above. The following sections describe these buttons and their functions.

You can customize the device settings such as backlight, volume, date and time. Once you change the settings, your new settings will remain until you change them again.

### 3.2 volume

1. Tap the Audio button on the Device Settings menu. The volume Function menu appears as shown below.

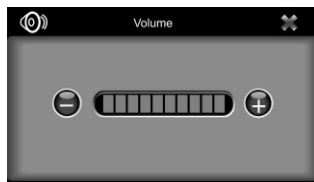

## Device Settings

2. Tap the knob and to adjust the volume. To decrease the volume, tap the knob . To increase the volume, tap the knob .
3. Tap the "" button to go back to the Device Settings screen.

### 3.3 Date/Time

1. Tap the Time button on the Device Settings menu. The Date/Time Function menu appears as shown below.



2. Tap the button to enter into the date adjustment menu.






3. Through clicking and on the calendar, you can accomplish easily to adjustment of year, month and day.

## Device Settings

 
4. Tap the  button to enter into the time adjustment menu.





5. Uniformly, clicking  and  on the calendar, you can accomplish easily to adjustment of hour, minute and second.
6. Tap the  button to save the changes and go back to the previous menu.

### 3.4 Backlight

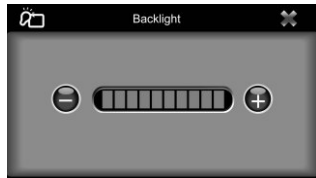1. Tap the Backlight button on the Device Settings menu. The backlight Function menu appears as shown below.






2. Tap the knob to adjust the volume. To decrease the volume, tap . To increase the volume, tap .

## Device Settings

### 3.5 Language

1. Tap the Language button on the Device Settings menu. The Language Function menu appears as shown below.

 
 


2. Tap the knob  and  to select language.
3. After accomplishing, tap the knob  to exit.

### 3.6 Adjust

You can calibrate the touch screen if it is not responding accurately to your Taps.

1. Tap the About button on the Device Settings menu. The About Function menu appears as shown left-below .

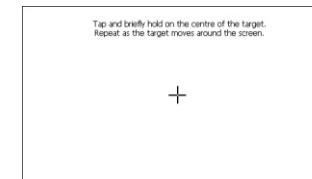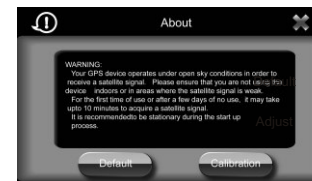

2. Tap the Calibration button on the About Function menu. The Calibration Function menu appears as shown right-top.
3. Tap and hold the centre of the target.

## Device Settings

- When the target moves to another position, tap and hold the centre of the new target. Repeat each time to complete the calibration process.

 
### 4.1 GPS Receiver

NOTE: This page is for information only. You can view the number of satellite signals the unit is receiving and also the strength of these signals.

- Tap the GPS Receiver button on the second main menu.



- The GPS Receiver Function menu appears as shown below.

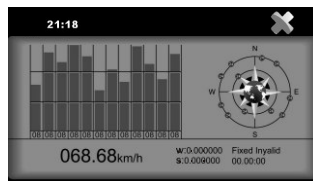

This page gives your current position in degrees longitude and latitude, your current speed and the status of your position, i.e. Fixed 3D or Fixed Invalid etc. The compass circle shows the satellites that the unit is receiving and the bar chart below shows the strength of the signal from each of these satellites.

## MP3 Player

This chapter tells you how to play MP3 files on your device.

### 5.1 Starting and Exiting MP3 Player

The MP3 Player Program turns your device into an MP3 Player.

 
It features:

- Playback of MP3 files
- Basic playback controls such as play, pause, stop, next and previous
- 17 preset equalizer audio profiles
- Playback includes single selection playback, repeat, single repeat, sampling playback, normal sequence and random sequence
- Play list support

- Tap the "Multi Media" button on the second main menu to display the submenu.



- Tap the "MP3" button to enter the file lists menu. All the MP3 files will be shown on the lists menu.

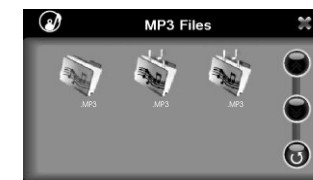

## MP3 Player

- Tap one of the MP3 files, the control panel of the MP3 player will appear on the screen where you can easily control the player by tapping the control buttons; and the selecting MP3 start playing.

 


### 5.2 Preparing the MP3 Files for You Device

Before you want play MP3 files, you need to have the files.

Operate:


- Use Active Sync to copy MP3 files from your computer to a storage SD card.
- Insert your SD card into the PND.

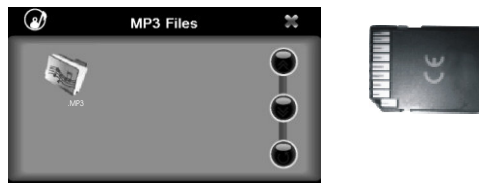

### 5.3 MP3 Playback Control

## MP3 Player

 You can control the MP3 Player via control buttons. See the table below for Details:

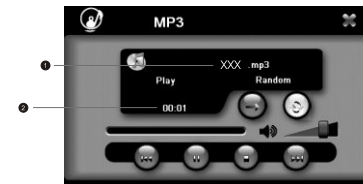

Control Button	Name	Description
	Play	Play the playback.
	Pause	Pause the playback.
	Previous/ Next	Play the previous or next file.
	Replay	Continuous play current song
	Random	Continuous play all songs
	Stop	Stop playing current song
	Volume	Increase or decrease the volume.
	Exit	Close the program and return to the map screen.
	Song name	Shows the file of the current MP3
	Play Time	

## Mp4 Player

This chapter tells you how to play MP4 files on your device.

 
### 6.1 Starting and Exiting MP4 Player

**caution:** This device supports .AVI file formats only

1. Tap the "Multi Media" button on the second main menu to display the submenu.



2. Tap the "MP4" button to enter the file lists menu. All the MP4 files will be shown on the lists menu.

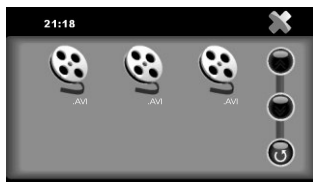







3. Tap one of the MP4 files, and the selected MP4 starts playing.

## Mp4 Player

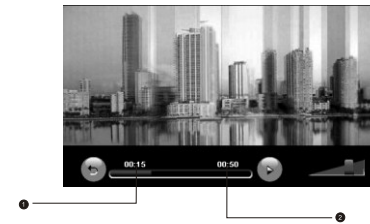 

4. Tap on the playing screen, the control panel will appear where you can easily control the player by tapping the control buttons.



Control Button	Name	Description
	Play	Play the playback.
	Exit	Close the program.
	Volume	Increase or decrease the volume.
	Play Time	
	Total Time	

## Photo Browsing

This chapter tells you how to view photo files on your device.

### 7.1 Viewing a photo file:

**cation:**This device supports .jpg and .bmp file formats

1. Tap the "Multi Media" button on the second main menu to display the submenu.
2. Tap the "Pic. Viewer" button to enter the file lists menu. All the photo files will shown on the lists menu.
3. Tap one of the photo files, the system opens photo menu and shows the selecting photo.



Control Button	Name	Description
	Exit	Back the file lists menu.
	Previous/Next	Play the previous or next file.
	Twist	Twist the photo screen
	Zoom in/out	Zoom in/zoomout the photo screen
	Full screen	

## Ebook Browsing

This chapter tells you how to view ebook files on your device.

 
### 8.1 Viewing a ebook file:

**cation:**This device supports .txt file formats only.

1. Tap the "Multi Media" button on the second main menu to display the submenu.
2. Tap the "Doc. Viewer" button to enter the file lists menu. All the .txt files will shown on the lists menu.



3. Tap one of the .txt files, the system opens ebook menu and shows the selecting book.

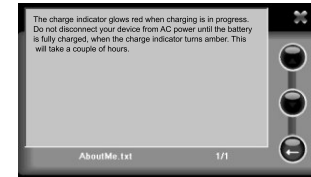

Control Button	Name	Description
	Exit	Close the program.
	Previous/Next	Play the previous or next page.


This chapter gives solutions to common problems you may encounter. It also provides guidelines on taking care of your device.

**NOTE:** if you encounter a problem you can not solve, contact an authorized service center for assistance.

### 9.1 Resetting Your System

 
Occasionally, you may need to reset your device. For example, you should reset your system when it stops responding; or appears to be "frozen" or "locked up."

Insert a small rod, such as a straightened paperclip, into the reset button on the bottom of your device. This is called a "soft reset." The Main Menu should appear after a soft reset.

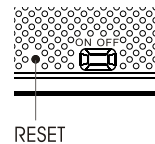

If your device still does not respond after a soft reset, you can use the following steps to perform a "hard reset."

 1. Disconnect all cables, including the AC adapter, from your device.
2. Use a pointed pen to slide the ON/OFF switch to the OFF position.
3. Wait for 1 minute and then slide the switch back to the ON position.



4. Your device turns on.

### 9.2 Troubleshooting

#### Power Problems

##### Power does not turn on when using battery power

The remaining battery power may be too low to run your device. Connect the AC adapter to your device and to AC power. Then, turn on your device.

#### Screen Problems

##### Screen is off

- If the screen does not respond even after you press the power button, try the following in order until the problem is solved.
- Connect the AC adapter to your device and to external AC power.
- Reset your system.

##### Screen responds slowly

- Make sure that your device is not running out of battery power. If the problem still exists, reset your system.

##### Screen freezes

- Reset your system.

##### Screen is hard to read

- Make sure that the backlight of the display is on.
- Move to a location with more light.

##### Inaccurate response to taps

- Recalibrate the touch screen. (See section 3.4 for instructions.)

#### Connection Problems

##### Cable Connection Problems

- Make sure that your device and your computer are both turned on before trying to establish a connection.
- Make sure that the cable is securely plugged into the USB port on your computer and on the device. Connect the USB cable directly to your computer do not run the cable through a USB hub.
- Reset your device before connecting the cable. Always disconnect your device before you restart your computer.



### GPS Problems

When there are no valid signals available, consider the following:

- Make sure that the GPS antenna has a clear view of the sky.
- Note that the GPS reception can be affected by:
  - ✓ Bad weather
  - ✓ Dense overhead obstacles (e.g. trees and tall buildings)
  - ✓ Other wireless device in the car
  - ✓ Reflective car window tint

### 9.3 Maintaining Your Device

Taking good care of your device will ensure trouble-free operation and reduce the risk of damage to your device.

- Keep your device away from excessive moisture and extreme temperatures.
- Avoid exposing your device to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of your device or drop objects on your device.
- Do not drop your device or subject it to severe shock.
- Do not subject your device to sudden and severe temperature changes. this could cause moisture condensation inside the unit, which could damage your device. In the event of moisture condensation, allow the device to dry out completely before use.
- Take care not to sit on the device. We advise not to carry the device in one's back pocket for that reason.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean your device with it powered on. Use a soft, lint-free cloth moistened with water to wipe the screen and the exterior of your device.
- Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to your device. Disassembly, modification or any attempt at repair could cause damage to your device and even bodily injury or property damage and will void any warranty.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your device, its parts or accessories.

## Regulatory Information

**NOTE:** Marking labels located on the exterior of your device indicate the regulations that your model complies with. Please check the marking labels on your device and refer to the corresponding statements in this chapter. Some notices apply to specific models only.

### 10.1 Regulations Statements

#### Class B Regulations

USA Federal Communications Commission Radio Frequency Interference Statement

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**Please note:**

The use of a non-shielded interface cable with this equipment is prohibited.

## Regulatory Information

### Canada

#### Canadian Department Of Communications

#### Radio Interference Regulations Class B Compliance Notice

This Class B digital apparatus meets all requirements of the Canada Interference-Causing equipment regulations.

Cet appareil numérique de Classe B respecte toutes les exigences du Règlement Canadien sur le matériel brouilleur.

#### European Notice

Products with the CE marking comply with Radio & Telecommunication Terminal Equipment Directive (R&TTE) (1999/5/EEC), the Electromagnetic Compatibility Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) as amended by Directive 93/68/ECC - issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Standards:

EN301489-1: Electronic compatibility and Radio spectrum Matters (ERM), ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

EN301489-3:

Electronic compatibility and Radio spectrum Matters (ERM), ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for Short-Range Devices (SRD) operating on frequencies between 9 kHz and 40 Ghz

EN55022: Radio disturbance characteristics

EN55024: Immunity characteristics

EN6100-3-2: Limits for harmonic current emissions

## Safety

EN6100-3-3: Limitation of voltage fluctuation and flicker in low-voltage supply system  
En60950 / IEC 60950: Product Safety  
The manufacturer cannot be held responsible for modifications made by the User and the consequences thereof, which may alter the conformity of the product with the CE Marking.

### 11.1 Safety Precautions

#### About Charging

- Use only the AC adapter supplied with your device. Use of another type of AC adapter will result in malfunction and/or danger.
- Use a specified battery in the equipment.

#### About the AC Adapter

- Do not use the adapter in a high moisture environment. Never touch the adapter when your hands or feet are wet.
- Allow adequate ventilation around the adapter when using it to operate the device or charge the battery. Do not cover the AC adapter with paper or other objects that will reduce cooling. Do not use the AC adapter while it is inside a carrying case.
- Connect the adapter to a proper power source. The voltage requirements are found on the product case and/or packaging.
- Do not use the adapter if the cord becomes damaged.
- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

## Safety

The manufacturer cannot be held responsible for modifications made by the user and the consequences thereof, which may alter the conformity of the product with the CE Marking.

#### About the Battery

- Use a specified charger approved by the manufacturer.
- CAUTION:** This unit contains a non-replaceable internal Lithium Ion battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush, puncture, or dispose of it in fire or water.
- Important instructions (for service personnel only)
  - Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
  - Replace only with the same or equivalent type recommended by the manufacturer.
  - The battery must be recycled or disposed of properly.
  - Use the battery only in the specified equipment.