Selecting the Alarm Week Mode

Your SmartSet® clock radio allows you to select from three different alarm week modes for each alarm. The Alarm Week Modes are:

- Everyday the alarm will turn on all 7 days
- Weekdays only the alarm will only turn on Monday
- Weekends only the alarm will only turn on Saturday and Sunday
- If all 7 indicators are 'On' the Everyday mode is selected. If only the MON (Monday) through FRI (Friday) indicators are 'On', the Weekdays only mode is selected.
- If only the SAT (Saturday) and SUN (Sunday) indicators are 'On', the Weekends only mode is selected

Checking the Wake Up Times and Alarm Week Mode

 
To check the wake up time or the alarm week mode settings, press either the AL1 or AL2 button. The display will change from current time to wake up time and the DAY OF WEEK indicators will show you the alarm week mode which is currently selected. It will return to the current time display in 3 seconds after showing the wake up time.

Activating and Deactivating the Alarm

- Press and release the AI 1 or AI 2 button continuously to turn On your desired Alarm Mode: Wake to Radio, Wake to Buzzer, or Off.
- When the '1 II/2 II' indicator glows, the wake up to Radio alarm will be On. • When the '1 > / 2 > 'Indicator glows, the wake up to Buzzer alarm will be On.
- To completely turn Off the alarm, press and release AL1 or AL2 button continuously until the Radio '1,1/2,1' indicator or the Buzzer '1 / 2 \

Snooze Alarm

When the alarm comes On, press the SNOOZE button to pause it for 9 minutes





TUNE +

Note: If not turned off, the Snooze Alarm will only be active for one hour

10 Listening to the Radio

- 1.) Press the ON/OFF button to turn the radio 'On'. The frequency of the tuningfrequency will show for a few seconds on the display
- 2.) Press the **M** (Mode) button repeatedly to select **AM** or **FM** as desired, the KHz or MHz indicator turns 'On', and the radio station frequency
- 3.) Set the VOLUME by pressing the VOL+ or VOL- button to a level that suits your needs.
- 4.) Select your desired station with the TUNE+ or TUNE- button
- 5.) When you finish listening to radio, press the ON/OFF button to turn the

Receive your desired station with the TUNING control:

- Press the TUNE+/TUNE- button briefly, the receiving
- frequency will increase / decrease by one step. Press and hold the TUNE+/TUNE- button for 3 seconds then release, Auto Station Seeking will be engaged, the

receiving frequency will increase / decrease automatically until a station with acceptable reception is found.

Storing and Recalling Radio Station Memory Manually When you have a few favorite radio stations to listen to, you may like to save them in specific memory locations and pick one of them in a few seconds without the need of searching it each time. Our digital tuning technology allows you to do this easily by following the steps listed below:

- Storing Station to the Memory
 Turn the unit On and select Radio mode (KHz or MHz indicator'On').
 Tune in the desired station by the TUNING control as described.
- Press and hold the MEM./STO. button (for 2 seconds)until 'PXX' blinks, indicating the memory location to store the station currently tuned in.
- While 'PXX' is blinking, press the
 or white 'PXX' is blinking, press the or white or can change the memory location from 1 through 20. For example, 'P 03' means the current listening station is about to be stored into the 3rd location of the memory.

 • After deciding the memory location, press the **MEM./STO**. button again,
- the currently listening station is then stored accordingly.

 The display will show the frequency of the station, and after a few seconds,
- it will restore the current time

Recalling Station from the Memory

- Turn the unit On and select Radio mode.
- Press the MEM./ STO. button, 'PXX' shows on the display, and the station according to the memory location will then be tuned in
- Repeatedly pressing the MEM./STO. button or the ► / I button will change change the memory location from 1 through 20, and the station stored in the location will then be tuned in once the memory location is selected and all buttons released.
- The display will show the frequency of the station, and then returns to the

11 Listening to Bluetooth Speaker

- · Press the ON/OFF button to turn the unit ON.
- Press the M(Mode) button to select Bluetooth(bt) mode (BT indicator
- Flashes' for pairing).

 Elashes' for pairing).

 Enable your Bluetooth device and select CKS8888 from its Available/Paired. device list. If pairing successful, the unit will prompt and BT indicator will become
- solid.

 Automatic connection with your Bluetooth devices is possible if they have been paired successfully with this unit before.
- of the partied, you can play your music through this Bluetooth Speaker.

 Press briefly the ▶II button can pause or resume playback streaming over
- your Bluetooth device



• If pairing unsuccessful, all previously paired Bluetooth devices around should be disconnected first by pressing and holding the ▶II button until it prompts, or turn Off their Bluetooth connection, in order to avoid making any auto reconnection between them. Then, set this unit to Bluetooth mode, and tap the Bluetooth switch on your phone/device Off and back On again to refresh/search any nearby

 When it connects to an iOS device via Bluetooth, the clock time will be automatically synchronized with the time of the connected device

Sleeping to Music Timer

Press the ON/OFF button to turn ON the unit, and press the M(Mode) button to select either Bluetooth or Radio mode to play music or listen to radio



- · Press the SLEEP button. The display will show the sleep timer.
- Press the SLEEP button repeatedly to choose your desired sleep timer (10-90 minutes or OFF). When sleep timer is counting down, the SLP ndicator turns On

Note: When you change the sleep timer from the 10-minute default timing to a different setting, this new setting becomes the default timing

- To display the sleep timer during count down process, press the **SLEEP**
- To cancel the sleep timer during count down process, press the **ON/OFF**

Multi-Color 2-Level LED Décor

Press the **LED** button to turn night LED on when needed.



· Press the LED button repeatedly to change the color of LED lights in the following cyclical manner:

 $\mathsf{Red} \to \mathsf{Orange} \to \mathsf{Yellow} \to \mathsf{Green} \to \mathsf{Cyan} \to \mathsf{Blue} \to \mathsf{Purple} \to \mathsf{Color}$ Auto Change→ Mixed Color

 
- Press the SNOOZE/DIMMER/SLEEP button within 3 seconds after LED button being pressed to adjust the brightness level (Dim or Bright) of the LED lights
- · Press and hold the LED button to turn the LED lights off.

-)The LED lights with last memory function, it will automatically follow the last played status when next time playback for both Radio and Bluetooth
- 2.)The LED lights will be rhythmic to the beats when the unit is playing music

USB for Charging

This clock radio has two USB(Type A/ Type C) port at the back, which can provide up to 5V 2.1A to charge devices like smartphone, tablet etc. via a USB cable (not provided).


Note: Electrical energy drawn from the USB port may vary due to different charging cable condition, battery characteristic or power management system of your device being charged



4-Level Control DIMMER

Press the **SNOONE / SLEEP / DIMMER** Button while in Standby mode and select any

Changing the Lithium Battery

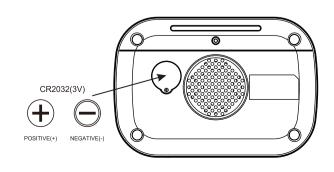

The lithium backup battery needs replacement when the LOW BATTERY indicator flashes, otherwise, the time and alarm settings will be lost/reset

- Leave the AC adapter connected to your AC outlet to retain memory while the original battery is removed.
- Unscrew the battery cover from the cabinet with a small screwdriver and insert a new battery with the same CR2032 or equivalent type into the slot the same way, observing the positive (+) polarity before putting the cover back into the slot. The LOW BATTERY indicator should then be Off.

BE CAREFUL NOT TO LOSE THIS SMALL SCREW!

Care and Maintenance

Care Of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- The battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire

IC Information 18

This device complies with Industry Canada Licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux
- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi. même si le brouillage est susceptible d'en compromettre le fonctionnement

LIMITED WARRANTY

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of ninety (90) days from date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:

* Repair service for ninety (90) days from date of original purchase at no charge for labor and parts.

To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020 or at http://www.emersonradio.com/ service/return-policy. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.

In the event the product must be returned to Emerson:

- * Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.
- st Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.
- * Enclose a note with your name, address, phone number, Return Authorization number and brief reason for returning the unit.
- * Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase). * Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a
- tracking number) NOTE: This warranty does not cover
- (a) Damage to equipment not properly connected to the product
- (b) Cost incurred in the shipping of the product to and from Emerson's Return
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (e) Signal reception problems caused by external antenna or cable systems
- (f) Products not purchased in the United States.
- (g) Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES. WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number: CKS8888 Serial Number:

@Emerson..

+ SERVICE

FOR ADDITIONAL SET-LIP OR OPERATING ASSISTANCE 1-800-898-9020

FOR CLISTOMER SERVICE PLEASE E-MAIL TO:

OR WRITE TO: Emerson Radio Corp. Consumer Affairs Dept. 959 Route 46 East Suite 210, 2nd Floor Parsippany, NJ 07054

▲ WARNING

- INGESTION HAZARD: This product contains a button cell or coin battery
- DEATH or serious injury can occur if ingested.
 A swallowed button cell or coin battery can cause Internal Chemica
- Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH of CHILDREN
 Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the boby.



Printed in China

CALIFORNIA RESIDENTS ONLY-WARNING: Cancer and Reproductive Harm – www.P65Warnings.ca.gov

Emerson Part No. CKS8888-20240219-00