 


9 Daylight Saving and Leap Year Adjustment

All Daylight Saving and Leap Year adjustment are made automatically by the SmartSet® internal computer as follow:
Start of Daylight Saving time:
 At 2:00 AM on the 2nd Sunday in March, the clock will automatically advance to 3:00 AM
End of Daylight Saving time:
 At 3:00 AM on the 1st Sunday in November, the clock will automatically reset to 2:00 AM
Leap Year:
 At 12:00 Midnight on February 28th, the calendar display will change to "2'29"'

10 Setting the Alarm

Alarm can only be set in standby mode where the function of Radio, Bluetooth, and AUX are disabled (i.e. indicators of "MHz", "BT", and "AUX" are OFF)
Adjusting the Wake up times

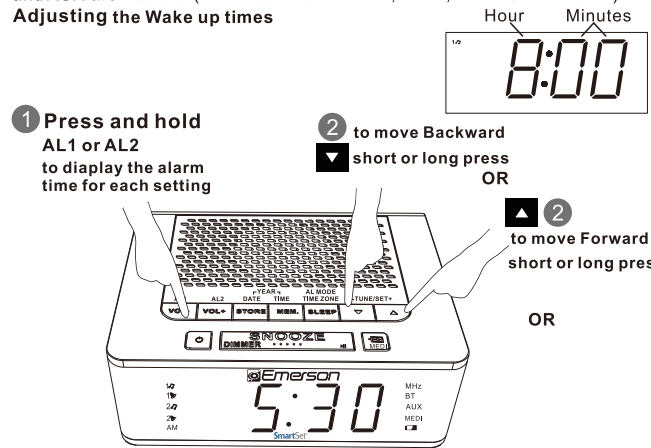

Setting the Alarm
 Press and Hold "AL1" or "AL2".
 Press "▲" to adjust Hour, Press "▼" to adjust Minutes.

Short press AL1 or AL2 to turn ON the Alarm Mode.

When Buzzer 🔔 lights on, the wake up Buzzer alarm will be ON.
 When Music 🎵 lights on, the wake up Radio alarm will be ON.

To completely turn off the alarm, short press AL1 or AL2 until the Buzzer 🔔 or Radio 🎵 light is OFF.

 
Wake To Radio and Alarm Volume Setting

- Press POWER button to turn the unit ON.
- Press SOURCE button to select FM Radio mode.
- Tune to or recall from Memory the station that you wish to hear when the alarm comes ON.
- Press Vol+ or Vol- to set the maximum radio volume at which the alarm will reach gradually at wake up time.
- Default alarm volume is U08 for radio volume set up between U00~U15 (before the unit turned OFF to standby mode).

For a louder alarm, set up radio volume above U08 before the unit turned OFF.

Snooze Alarm

When the Alarm comes ON, press SNOOZE button to pause it for 9 minutes. Snooze Alarm will not repeat after one hour. To turn off Snooze Alarm mode, press the POWER button once.

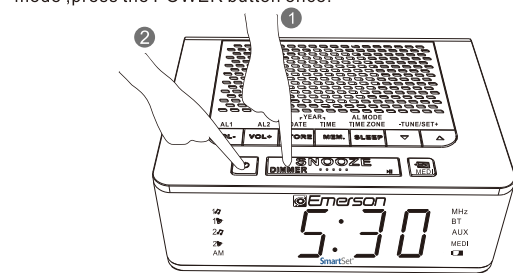


11 Listening to FM Radio

Press the Power button ⏻ to turn ON the unit and press SOURCE button [BT] to change to Radio Mode ("MHz" On)


Power on:

 - A: Switch to Radio Mode** (Press BT PAIR button) **Press [BT] 1**
- B: Tuning to FM Station** (Either press Tune Up or Tune Down to your desired station) **2 ▼ 2 ▲**

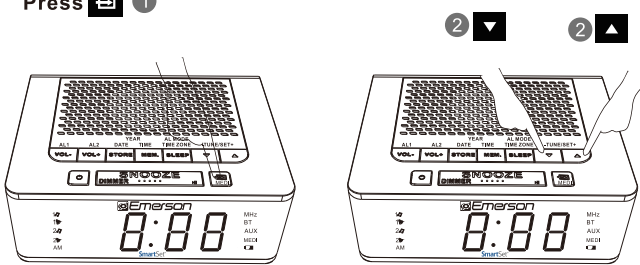


C: Auto Searching/Scanning FM Stations

 (Press the Tune Up or Turn Down button for 2 seconds and release)

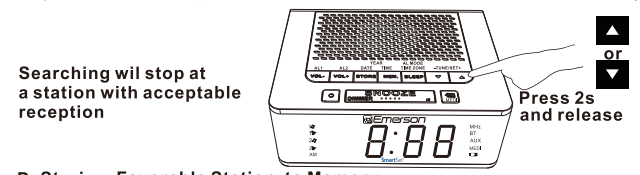


Searching will stop at a station with acceptable reception

 D: Storing Favorable Station to Memory (20 stations can be stored)

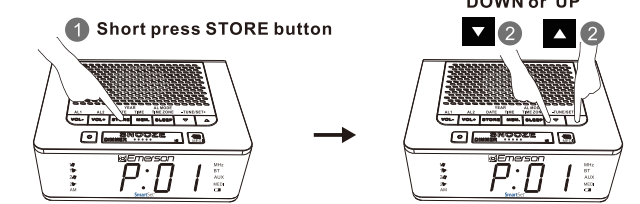

- At Radio Mode, Press Tune Down ▼ or Tune Up ▲ button to search your desired station.
- Press the SOTRE button, Program Number "P01" will be blinking on the display, press Tune Down ▼ or Tune Up ▲ to change the program number from "P01" to "P20", once you selected the desired program number, press the STORE again and the favorable station will be stored to the selected program number.

 E: Recall Favorable Station to Memory

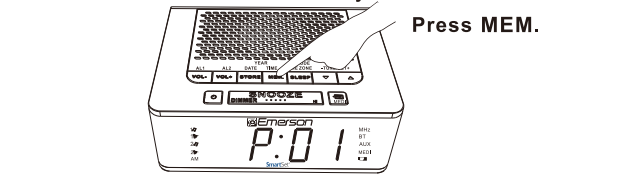


- Press the MEM. button, Program number will be shown on the display, press Tune Down ▼ or Tune Up ▲ to select your stored program number and listen to your favorable station.

Note: Keep the clock radio away from other electronic devices to avoid radio interference. For better reception, fully extend and adjust the position of the FM antenna (cable)

12 Pairing Bluetooth Speaker

 
- Press the POWER button to turn the unit ON
- Press the [BT] button to select Bluetooth (bt) mode ("BT" flashes for pairing)
- Enable your Bluetooth device and select Er100102 from its Available/ Paired device list. After pairing successfully, the unit will prompt and "BT" will become solid
- Automatic connection with your Bluetooth devices is possible if they have been paired successfully with this unit before.
- After paired, you can play your music through this Bass Boosted Bluetooth Speaker.

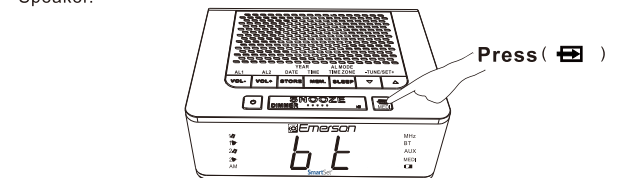

13 Sleeping to Music Timer

Press the Power button ⏻ to turn ON the unit, and press [BT] button to select either FM Radio, Bluetooth or AUX mode to play radio or music

 
Sleep mode setting

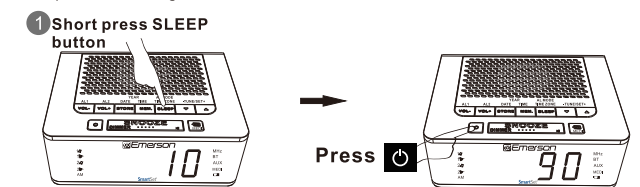

- Press and hold the SLEEP button. The display will show the sleep timer.
- Short press SLEEP button to choose your desired sleep timer (10~90 minutes).
- To display the sleep timer during count down process, press the SLEEP button.
- To cancel the sleep timer during count down process, press the POWER button to shut off the unit.


14 3-Level Dimmer Control

 The brightness of the clock display can be set at High/Medium/Low level in standby, Radio and AUX modes with a press of "DIMMER" button

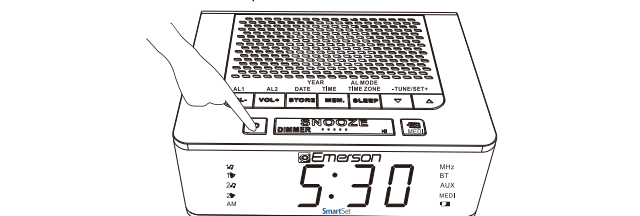

15 Enjoying Audio Source via AUX IN Jack

 
Press the POWER button to turn the unit ON
 Press BT PAIR button until "AUX" appear on LED display, connect your audio or mobile device and play music through the unit with the 3.5mm earphone jack.

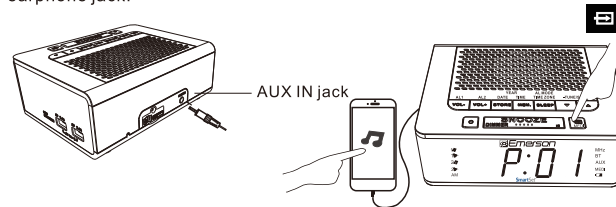

16 USB for Charging


Output 5V up to 1.5 A for charging mobile or portable digital audio player.

 Note: Charging current drawn from the unit may vary due to different USB charging cable condition or battery charging characteristics

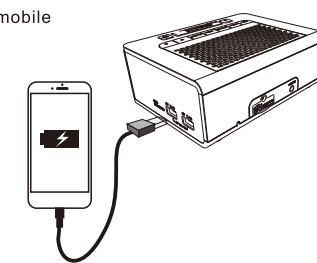

17 Changing the Lithium Battery

 - When the LOW BATT indicator 'Flashes', you should change the battery that is used for backup clock and alarm setting as
- It will be 'Off' when you have changed the battery in correct instructions.

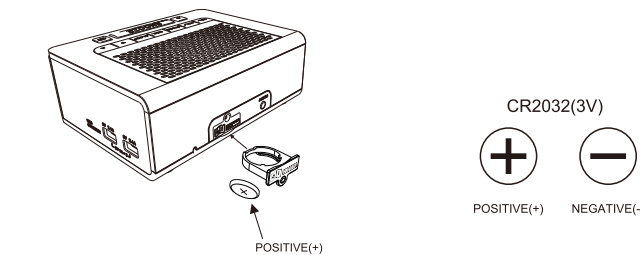

The battery backup is intended for short power outages only. The unit's primary functions cannot run on the battery backup alone. This unit uses a button cell battery that will last up to 1 year and maintains the time.

WARNING

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on the apparatus.

This marking indicates that this product should not be disposed of with other household wastes throughout the country. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this unit responsibly so as to promote the reuse of material resources. To return your used device, please use return and collection systems or contact the retailer where the product was purchased as they know how to safely recycle this product.

18 Care and Maintenance

Care Of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

Lithium Battery Precautions

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- The battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire.

19 LIMITED WARRANTY

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of ninety (90) days from date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:

* Repair service for ninety (90) days from date of original purchase at no charge for labor and parts.

To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.

In the event the product must be returned to Emerson:

- * Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.
- * Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.
- * Enclose a note with your name, address, phone number, Return Authorization number and brief reason for returning the unit.
- * Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).
- * Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).

NOTE This warranty does not cover:

- Damage to equipment not properly connected to the product.
- Cost incurred in the shipping of the product to and from Emerson's Return Facility.
- Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.
- Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- Signal reception problems caused by external antenna or cable systems.
- Products not purchased in the United States.
- Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

10-90-1402A

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number: Er100102
Serial Number: _____



Emerson Part No. Er100102-2017-11-13-05

Printed in China