

 


**1/2** Wake to Radio mode  
**1/2** Wake to Buzzer mode

**Three Alarm Week Modes**

- **Everyday** – If all the 7 indicators are On, the alarm will turn on everyday.
- **Weekdays** only – If only the MON to FRI indicators are On, the alarm will turn on Monday through Friday.
- **Weekends** only – If only the SAT and SUN indicators are On, the alarm will turn on Saturday and Sunday.

**Setting the Wake up Alarm**

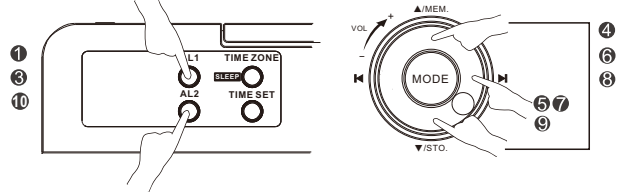

**Checking the Alarm Settings (Wake Up Time and Alarm Week Mode)**

- 1 Press the "AL1" or "AL2" button to check the current alarm settings for Alarm 1 or Alarm 2 respectively.
- 2 Default alarm settings are 8:00AM on Everyday week mode.

**Changing the Alarm Settings (Wake Up Time, Alarm Volume and Alarm Week Mode)**

- 3 Press and hold the "AL1 or AL2" button (for 2 seconds) until the 'Hour' of wake up time flashes. Then,
  - 4 Press the "▼" or "▲" button to adjust the Hour.
  - 5 Press the "▶" button once, the "Minutes" of wake up time will flash.
  - 6 Press the "▼" or "▲" button to adjust the Minutes.
  - 7 Press the "▶" button once, the current volume level will flash.
  - 8 Press the "▼" or "▲" button to adjust your desired alarm volume level (V01-V15) at which the alarm will reach gradually at wake up time.
  - 9 Press the "▶" button once, the "Hour" of wake up time will flash, then press the "MODE" button to select the desired Alarm Week Mode (Everyday, Weekdays, Weekends).
  - 10 Press the "AL1/AL2" button once to save and activate your alarm settings as well as return to clock mode.
- Note:** The "◀" button can be used to reverse the alarm settings sequence: volume, minutes, hour and week mode.

**Activating the Alarm**

 
- Press and release the "AL1/AL2" button continuously to turn On your desired Alarm Mode: Wake to Radio or Wake to Buzzer.
- When the "1/2" indicator glows, the wake up with Radio alarm will be On.
- When the "1/2" indicator glows, the wake up with Buzzer alarm will be On.
- To completely turn Off the alarm, press and release the "AL1/AL2" button continuously until the Radio "1/2" indicator or the Buzzer "1/2" indicator is Off.

**Snooze Alarm**

When the alarm comes On, press the "SNOOZE" button to pause it for 9 minutes. Alarm indicator will flash during Snooze Alarm mode. To turn off Snooze Alarm mode, press the "POWER" button once.  
**Note:** If not turned off, the Snooze Alarm will only be active for one hour.

**10 Bedroom/Desk LED Decor**


Press the "LED" button to turn the White LED On to decorate your bedroom or desk. To turn it Off, press the button once again.

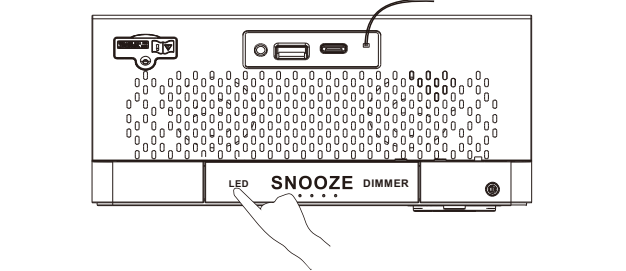

**11 Listening to FM Radio**

**A: Switch to Radio Mode**

 
- 1 press the "POWER" button to turn On the unit.

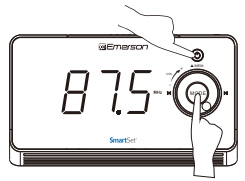

- 2 press the "MODE" button to switch to Radio mode


**B: Tuning in FM Station**

 - 1 Press Tune Up or Tune Down to search and tune in your desired station.

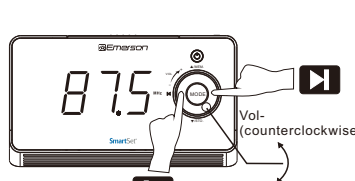


- 2 To adjust the output volume, turn the Shuttle Wheel in clockwise (Vol+) or counterclockwise direction (Vol-).

**C: Auto Searching/Scanning FM Stations (Press the Tune Up or Turn Down button for 2 seconds and release)**

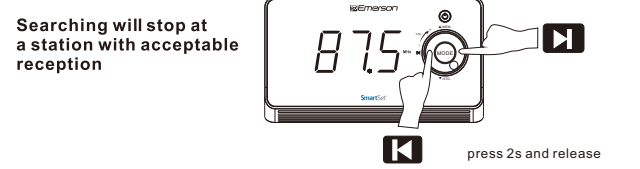 


**D: Storing Favorite Station to Memory (20 stations can be stored)**

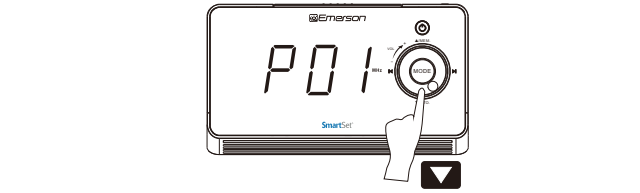 

- At Radio Mode, press the Tune Down "◀" or Tune Up "▶" button to search your desired station.
- Press and hold the "▼" button until Program Number between P01 and P20 flashes, press Tune Down "◀" or Tune Up "▶" button to change the program number you desired, press the "▼" button again and the favorite station will be stored to the selected program number.


**E: Recall Favorite Station from Memory**

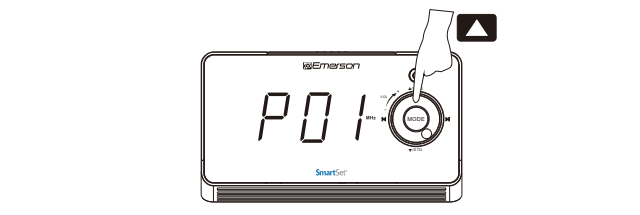 

- When Radio mode is On, press the "▲" button, Program number will be shown on the display, press Tune Down "◀" or Tune Up "▶" to select your stored program number and listen to your favorite station.
- Note:** Keep the clock radio away from other electronic devices to avoid radio interference. For better reception, fully extend and adjust the position of the AC Adapter cable, which functions as an FM antenna.

**12 Pairing Bluetooth Speaker**

 
- Press the POWER button to turn the unit On
- Press the "MODE" button to select Bluetooth(bt) mode ("BT" flashes for pairing)
- Enable your Bluetooth device and select ER100113 from its Available/ Paired device list. If pairing successful, the unit will prompt and "BT" will become solid
- Automatic connection with your Bluetooth devices is possible if they have been paired successfully with this unit before.
- After paired, you can play your music through this Bluetooth Speaker.

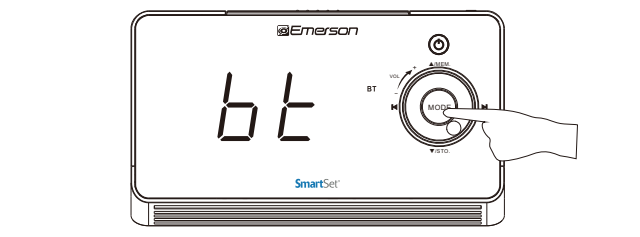

**Note:** If pairing unsuccessful, all previously paired Bluetooth devices around should be disconnected or turned off first in order to avoid making any auto reconnection between them. Then, set this unit to Bluetooth mode, and tap the Bluetooth switch on your phone or device off and back on again to refresh/search any nearby "ER100113" for pairing.

**13 Sleeping to Music Timer**

 
Press the Power button to turn ON the unit, and press the "MODE" button to select FM Radio, Bluetooth or AUX mode to play radio or music

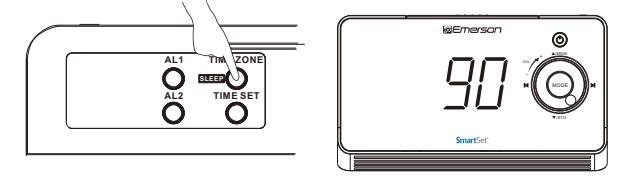

- Press and release the "SLEEP" button. The display will show the sleep timer.
- Press and release the "SLEEP" button continuously to choose your desired sleep timer (10-90 minutes or OFF).
- To display the sleep timer during count down process, press and release the "SLEEP" button.
- To cancel the sleep timer during count down process, press and release the POWER button to shut off the unit.


**14 4-Level Dimmer Control**

 Press the "SNOOZE/DIMMER" button while in Standby mode and select any of the four levels. It also can be adjusted when the Bluetooth, Radio or AUX is On.

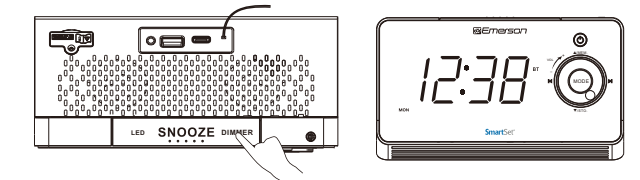

**15 Enjoying Audio Source via AUX IN Jack**

 Press the POWER button to turn the unit ON Press the "MODE" button until "AUX" appear on LED display, connect your audio or mobile device and play music through the unit with the 3.5mm AUX IN jack (3.5mm audio cord not included).

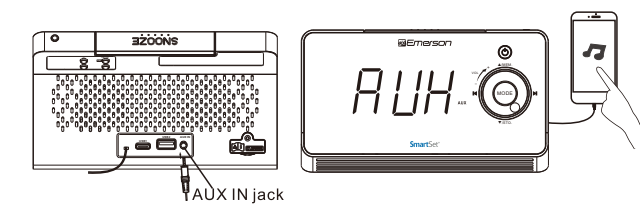


**16 Dual USB (Type-A and C) for Charging**

The unit has two USB outputs (USB1 Type-C and USB2 Type-A) for charging mobile or portable digital audio player. Output DC5V 2.1A is possible only if one USB charge out is being used. If using two USB outputs at the same time, each one of them could carry 1A only.


**Note:** Charging current drawn from the unit may vary due to different USB charging cable condition or battery charging characteristics

 **17 Enjoying Stereo via Earphone Jack**

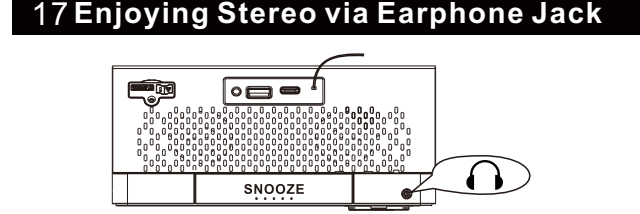

- 1 Press the "POWER" button to turn the unit On.
  - 2 Press the "MODE" button to select and listen to your desired audio source (Bluetooth, Radio and AUX).
  - 3 Adjust the output volume by turning the Shuttle Wheel in clockwise or counterclockwise direction.
  - 4 Connect your headphone plug into the 3.5mm earphone jack to enjoy streaming stereo through your headphone.
- Note:** If an alarm is set and your headphone is still connected to the unit, Wake to Radio/Buzzer alarm will not go off on the clock speakers but only on your headphone earbuds.  
**CAUTION:** Prolonged use of headphone at high volume may cause irreparable hearing loss. We strongly advise you to adjust the headphone volume to a reasonable level. The higher the volume for a prolonged time, the higher the risk of damaging your hearing.

**18 Changing the Lithium Battery**

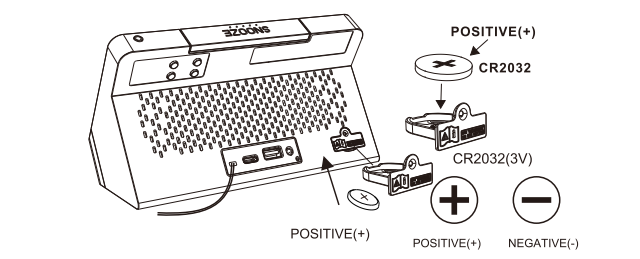 

- 1 The lithium backup battery needs replacement when the LOW BATTERY indicator flashes, otherwise, the time and alarm settings will be lost/reset after a power outage.
- 2 Leave the AC adapter connected to your AC outlet to retain memory while the original battery is removed.
- 3 Unscrew the battery holder from the cabinet with a small screwdriver and insert a new battery with the same CR2032 or equivalent type into the holder the same way, observing the positive (+) polarity before sliding the holder back into the slot. The LOW BATTERY indicator should then be Off.

**19 Care and Maintenance**

**Care Of Cabinets**  
If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

**Lithium Battery Precautions**

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- The battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire.

**20 LIMITED WARRANTY**

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of ninety (90) days from date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:

**\* Repair service for ninety (90) days from date of original purchase at no charge for labor and parts.**

To receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020 or at <http://www.emersonradio.com/service/return-policy>. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.

In the event the product must be returned to Emerson:

- \* Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. **If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.**
  - \* Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.
  - \* Enclose a note with your name, address, phone number, Return Authorization number and brief reason for returning the unit.
  - \* Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).
  - \* Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).
- NOTE** This warranty does not cover:
- (a) Damage to equipment not properly connected to the product.
  - (b) Cost incurred in the shipping of the product to and from Emerson's Return Facility.
  - (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.
  - (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
  - (e) Signal reception problems caused by external antenna or cable systems.
  - (f) Products not purchased in the United States.
  - (g) Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

10-90-1402A

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

**Model Number:** ER100113  
**Serial Number:** \_\_\_\_\_

To register your product online please visit <http://www.emersonradio.com/service/product-registration/>

**Emerson**  
SERVICE

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE PLEASE CALL: 1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE E-MAIL TO: [internet@emersonradio.com](mailto:internet@emersonradio.com)

OR WRITE TO:  
Emerson Radio Corp.  
Consumer Affairs Dept.  
35 Waterview Blvd  
Parsippany, NJ 07054