

User Guide

1. Introduction

Thank you for choosing the ER106003 Bluetooth stereo earphones. This manual will help you operate these earphones.

Safety Rules

1. Please follow the guidelines closely in this manual to ensure your safety before using the earphones.
2. These earphones do not contain any reusable parts so please do not modify or dismantle these earphones, doing so may void your warranty and could cause electric shocks / fires.
3. Do not use any abrasive or volatile liquids to clean the earphones.
4. Do not use the earphones in a hazardous location.

2. Package Contents



3. Controls and Indicators

- 1 Light Indicator and Microphone
- 2 Volume +
- 3 Multifunction (MF) button
- 4 Volume -
- 5 Charge Interface



RF WARNING STATEMENT:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT USE AND PROTECTION:

Read and follow all instructions. Use only as intended.

These Bluetooth Earbuds are intended to be used indoors or outdoors. The earphones have been tested to IPX5 waterproofing standards, which means that they are sweatproof, and water resistant. To prevent fire or shock, do NOT attempt to charge this unit if it is damp.

SAFETY ADVISORY & WARNING:

Read and follow all instructions. Use only as intended.

- CAUTION:** Do NOT open to repair. A qualified technician must carry out repair work.
ATTENTION: Do NOT charge while the unit is damp. Towel dry the unit AND make sure all connections are dry BEFORE plugging in the charging connector. Failure to do so may result in electrical damage to the unit and may void the warranty.
- WARNING:** This product may contain chemicals listed in Proposition 65 (www.oehha.ca.gov/propp65/prop65_list/Newlist.html). It has a built-in Lithium battery, that must NOT be used in or near an open heat source or excessive heat.
WARNING: Danger of explosion if battery is incorrectly replaced.
ATTENTION: Do NOT dispose of in a landfill. Contact a certified recycling agent to dispose of the unit.
- SAFETY:**

This product has a limited life span of use and should be replaced when it shows obvious signs of wear. Do not modify or remove any original component parts of the earphones. Please exercise care and good judgment when using these Earbuds. Always ensure that you can hear and be aware of any potential hazards around you.

You should always

- 1) Properly clean the Earbuds prior to storage.

You should never

- 1) Never charge the Earbuds if you suspect water has entered the device. Charging a device with water inside could be potentially hazardous and cause fire or a spark.
- 2) Never use the Earbuds in a wet environment.
- 3) Never attempt to fix these Earbuds.

4. How to Pair

4.1. General Functions

To turn on	Press the "MF" button for 2 seconds when the device is off. (The blue LED slowly flashes and a beep sound is heard.)
Enter the pairing mode	In power off mode press the "MF" button and hold on for 4 seconds. (The blue LED and red LED quickly flash alternately and 2 beep sounds can be heard.)
Pairing	In pairing Mode use a Bluetooth enabled mobile phone or other Bluetooth Device to perform the pairing action (for details refer to the chapter about pairing.)
Play / pause	Press "MF" button to play when the device is paused Press it again to resume playback.
Volume up	Press + for volume increase.
Volume down	Press - for volume decrease.
Previous	Press and hold - for previous music track.
Next	Press and hold + for next music track.
Turn off	Press the "MF" button for 4 seconds when the device is on. (Earbuds will issue a beep sound and all LEDs are off.)
Low battery warning	The red LED flashes.
Charging	Plug the micro USB adaptor to the micro USB port on the Earbuds, then plug the USB adaptor to a sub socket on a computer or on a USB charger. When charging, the red LED light is on.
Answer call	Press the "MF" button for 1 second while the call is incoming.
End call	Press the "MF" button for 1 second to end call.
Transfer a Telephone Call	Press "*" and "#" at the same time to transfer the call between the mobile phone & Earbuds during a call.
Decline a call	Press the "MF" button for 2 seconds to decline an incoming.
Last number redial	In standby mode, double click the "MF" button can redial your last dialing number.
Factory reset	In any mode, press and hold "*" and "#" at the same time, then Earbuds will reset to the factory setting.

4.2. Pairing to Bluetooth devices

To use your Bluetooth Stereo earphones, you must firstly pair them with a Bluetooth enabled device. Once your earphones are paired to a specific device, they will remain paired when they are within range.

4.3. Pair two devices at the same time

After pairing the first device, switch off the Bluetooth function on the device. Then turn on the second device to pair with the earphones after the second device is successfully paired with earphones, switch back on the Bluetooth function on the first device. Both devices now connected to the earphones so you can select music from either device.

Pairing to a Bluetooth device:

- Turn on your device and ensure its Bluetooth function is activated.
- Turn on the Bluetooth Stereo earphones, and go to pairing mode.
- Set your device to search/refresh mode.
- After a few seconds your device will discover the earphones under ER106003. Select it and your device will confirm this pairing. You can listen to music and any other sort of entertainment with your device, enjoying all the audio through the earphones. You can control your device with the earphone controls i.e. Volume up/down and previous/next tracks.



Pairing to a computer:

- If there is no Bluetooth function supported by your computer, a Bluetooth adapter will be required. Connect the adapter to your computer and ensure its Bluetooth function is activated.
- Turn on the device, go to the pairing mode.
- Open the Bluetooth software installed on your computer, and select the "Search your Bluetooth devices" function. Refer to your user manual of the Bluetooth software for more information.
- After a few seconds the ER106003 will list in Bluetooth software of your computer as a discoverable device. Select this icon and click right button of mouse to select "pairing", then select "connect with audio device" with the right button on the mouse.

4.4. Charging your device

Connect the Earbuds to a USB charger or port. Make sure the Earbuds are fully charged for at least 3.5 hours before initial use. Insert one end of your USB cable into the charger or USB port on a PC and the other end to the Micro USB socket on the Earbuds. While charging, the red LED light is on. When charging is completed, the Blue LED light will be on.

5. Technical specifications

Bluetooth Specification	Bluetooth Version 4.2
Bluetooth Profile	HSP,HFP,A2DP,AVRCP
RF Range	≥10m(free space)
Frequency Response	20Hz-22KHz
Speaker rated power	0.3V
Signal-To-Noise	≥95dB
THD+N	≤0.06%
Music time	About 4-5 hours from full charge
Talking time	About 4-5 hours from full charge
Charging Time	About 2 hours
Standby Time	Up to 180 hours
Dimension (LxWxH)	100×33×201mm
Weight	13.2g / 0.47 oz

6. FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected, consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CARE, MAINTENANCE, & PRECAUTIONS:

- 1) If the unit is placed in water, water may enter into the unit and void your warranty.
- 2) Do NOT use or store the unit in places with high temperature.
- 3) AVOID prolonged exposure to ultraviolet radiation (UV sunlight) and strong magnetic fields.
- 4) Periodically clean the rubber earbuds with a soft moist cloth and ensure no objects such as dirt, hair, or sand are on the rubber earbuds. Do NOT use any oily solvent or chemicals for cleaning.
- 5) Power and / or charge the built-in rechargeable battery for portable use by connecting the USB cord to a computer USB connection or to an AC outlet using the AC-to-USB cord 5V, 1A power adapter intended for use with the unit.
- 6) Noise and audio distortion may occur when the batteries are nearing end of charge.
- 7) Do NOT remove the built-in battery.

7. Battery Removal/Disposal

Your product contains batteries which cannot be disposed with normal household waste. Doing so may harm the environment. Please familiarize yourself about the local authority rules on the separate collection of batteries because correct disposal helps to prevent damage to the environment and health.

LIMITED WARRANTY

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of ninety (90) days from date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:

- Repair service for ninety (90) days from date of original purchase at no charge for labor and parts.

To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.

In the event the product must be returned to Emerson:

- * Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.
- * Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.
- * Enclose a note with your name, address, phone number, Return Authorization number and brief reason for returning the unit.
- * Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).
- * Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).

NOTE: This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Cost incurred in the shipping of the product to and from Emerson's Return Facility.
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (e) Signal reception problems caused by external antenna or cable systems.
- (f) Products not purchased in the United States.
- (g) Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

10-90-1402A

The serial number can be found on the packaging. We suggest that you record the serial number of your unit in the space below for future reference.

Model Number: ER106003

Serial Number: _____

