

Emerson[®]

***MICRO AUDIO SYSTEM
With CD PLAYER
And DIGITAL TUNER***

OWNER'S MANUAL



ES769

Visit our web site at www.emersonradio.com



WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Cleaning-Unplug this product from the wall outlet before cleaning, Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A Product and Cart Combination Should Be Moved with Care - Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn. 
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus(Including amplifiers) that produce heat.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Unplug this apparatus during lightening storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. The product may be mounted to a wall only if recommended by the manufacturer.
19. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.



BEFORE WE BEGIN

Thank you for purchasing this Emerson audio product. The Emerson brand is your assurance of quality, performance and value.

Our engineers have included many useful and convenient features in this product. Please be sure to read this Owner's Manual completely to make sure you are getting the maximum benefit from each feature.

This product was manufactured using the highest quality components and standards of workmanship. It was tested by Emerson inspectors and found to be in perfect working order before it left our factory. However, there is always the chance that some problem may occur because of rough handling during shipment to the retail store or to the final consumer.

If, after reading this Manual, you experience any problems with the operation of this product, please refer to the instructions for obtaining service at the end of this Manual. Emerson and Emerson retailers are committed to your satisfaction.

Once again, thanks for purchasing this Emerson audio product.

For future reference, record the serial number in the space provided.

Model No: ES769

Serial No: _____



FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTES

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM



This product contains a low power Laser Device.

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliance such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- Do not attempt to clean this unit with chemical solvents as this might damage the finish. Use a clean dry cloth.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the power cord is properly installed.
- Store your CDs in a cool area to avoid damage from heat.
- When moving the set, be sure to first disconnect the AC power cord.



POWER SOURCE

CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, AND INSERT FULLY.


ATTENTION:

POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

This unit is designed to operate only on normal 120V 60Hz AC house current. Operating this unit from any other power source may cause damage to unit and such damage is not covered by your warranty.




This unit has a polarized AC plug with one wide blade and one narrow blade.

This plug will only fit into a matching polarized AC outlet. This is a safety feature to reduce the possibility of electric shock. If this plug will not fit in your AC outlet, you probably have an outdated non-polarized outlet. You should have your outdated outlet changed by a qualified licensed electrician. Do not file the wide blade on the plug, or use an adapter to make the plug fit into your outlet. This defeats the safety feature and could expose you to electric shock.

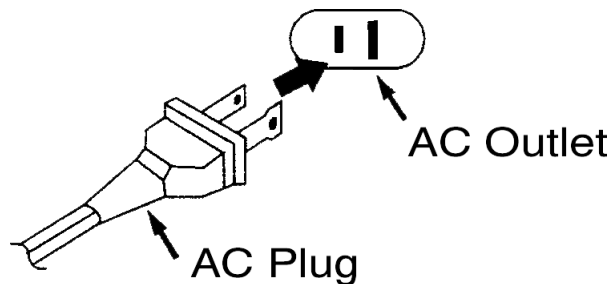




LOCATION OF CONTROLS AND INDICATORS

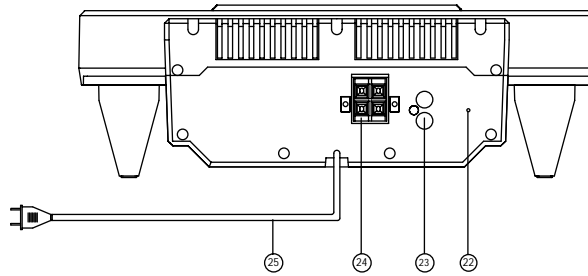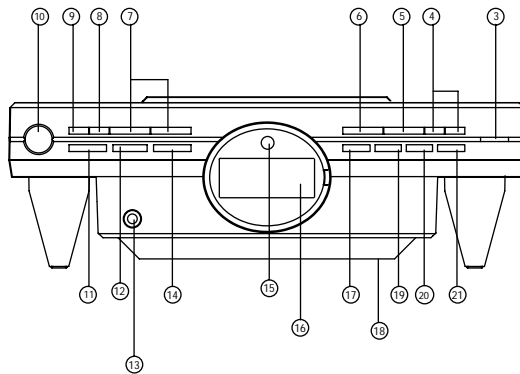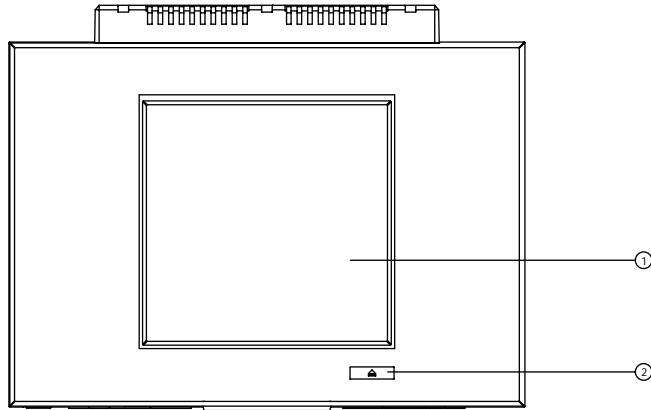





1. CD COMPARTMENT
2. ▲ CD DOOR OPEN / CLOSE BUTTON
3. STANDBY INDICATOR
4. ◀ TUNING ▶ / ◀◀ SKIP/FAST SEARCH ▶▶ BUTTON
5. ■ CD STOP BUTTON
6. ▶▶ CD PLAY/PAUSE BUTTON
7. VOLUME+ /- BUTTON
8. MUTE BUTTON
9. EQ BUTTON
10. ⏻ STANDBY BUTTON
11. CD BUTTON
12. TUNER /BAND BUTTON
13. PHONES JACK
14. AUX BUTTON
15. REMOTE SENSOR
16. MULTI FUNCTION LCD DISPLAY
17. MODE BUTTON
18. RESET BUTTON (AT BOTTOM CABINET)
19. RANDOM BUTTON
20. PROGRAM / MEMO BUTTON
21. REPEAT / MEMO-UP BUTTON
22. FM ANTENNA WIRE
23. AUX INPUT JACKS
24. SPEAKER TERMINALS
25. AC POWER CORD
26. SPEAKER BOX
27. SPEAKER WIRE

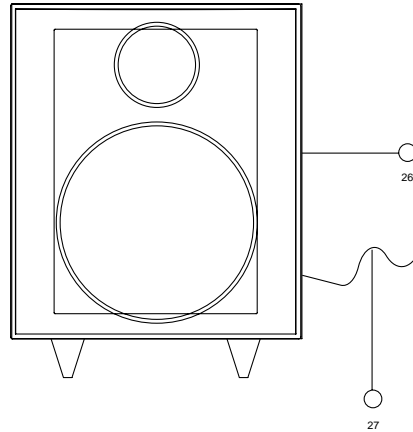

REMOTE HANDSET

 
28. ⏻ STANDBY Button
29. ▶▶ PLAY/PAUSE Button
30. TUNER/BAND Button
31. CD Function Button
32. AUX Function Button
33. ST/MO Button
34. EQ Button
35. RANDOM Button
36. MUTE Button
37. SLEEP Button
38. ■ STOP Button
39. PRESET/REPEAT Button
40. VOL + & VOL - Buttons
41. MODE Button
42. SNOOZE Button
43. MEMORY Button
44. ◀◀ & ▶▶ Buttons
45. 0-9 Buttons
46. +10 Button
47. INTRO Button
48. TIMER Button

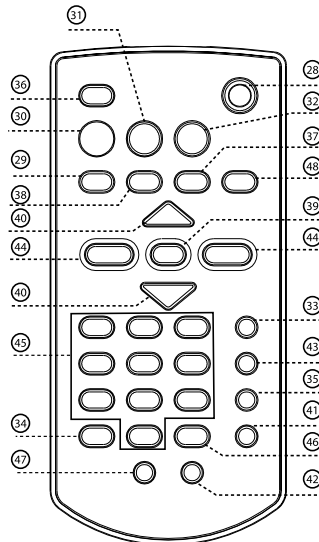



LCD DISPLAY


- D 1. SNOOZE indicator
- D 2. LINE(AUX in) indicator
- D 3. INTRO. indicator
- D 4. RANDOM indicator
- D 5. SLEEP indicator
- D 6. REP (Repeat) indicator
- D 7. Timer ON/OFF indicator
- D 8. MEMORY indicator
- D 9. Band (AM/FM) indicators
- D10. Frequency/Play Time display
- D11. Preset EQ indicators
- D12. Track/Preset station indicators
- D13. REMAIN indicator

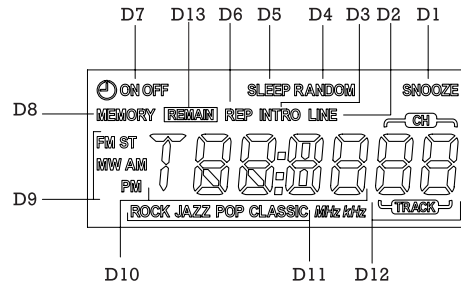

GETTING STARTED



SPEAKER CONNECTION

1. Connect the left and right speakers to the Speaker Terminals with the RED wires to Red terminals and the BLACK wires to Black terminals.
2. For better stereo effect move the two speakers away from the main unit.

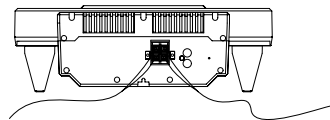

POWER SUPPLY

1. This mirco System operates on AC120V/60Hz line power supply.
2. The remote control unit operates on 1 pc "CR 2025" lithium battery (included). To power up the remote control, remove the insulation tab from the back of unit.

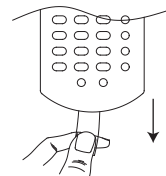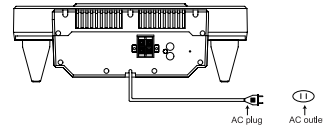


AC POWER CONNECTION

Connect the power cord to an AC120V/60Hz power source.

REPLACING BATTERY FOR THE REMOTE CONTROL

1. Turn over the remote control, and remove the battery door.
2. Install 1 pc "CR2025" lithium battery according to the polarity diagram on the battery compartment.
3. Replace the battery door.

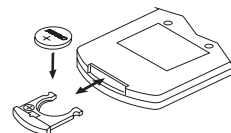



SETTING THE CLOCK

NOTE: The clock has to be set the first time you use the unit. If the unit is disconnected from the AC power for more than 1 minute, you need to re-adjust the clock.

TO SET THE CURRENT TIME




For example to set the clock at 7:30 AM

1. In STANDBY Mode, press MEMORY button once. Hour digits flash.

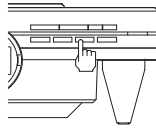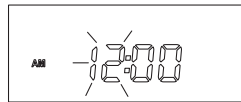



Note: If no button is pressed in 8 seconds, the unit will exit the setting mode.

2. Press the ◀◀ or ▶▶ button to adjust the hour.

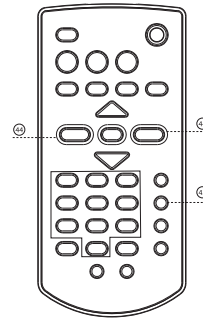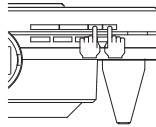
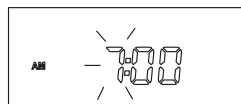


Note: Make sure the hour is set AM or PM correctly.



3. Press MEMORY button to confirm the selection and the minute digits flash.

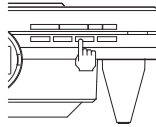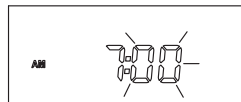

4. Press the ◀◀ or ▶▶ button to adjust the minutes.

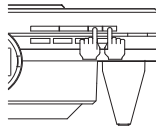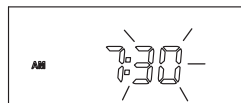


5. Press MEMORY button again to complete setting.

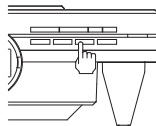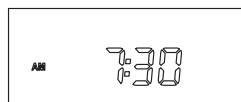




ADJUSTING THE SOUND

Press the STAND BY button to turn on the unit, then press VOLUME +/- button to adjust the sound to comfortable level. The volume level will show on display for a few seconds.

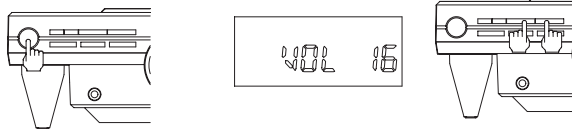

To temporarily shut off the sound from the speakers press the MUTE button. The display will cycle between the current function indication (radio frequency or CD elapsed time) and "VOL 0" to indicate that the system is in the Mute mode.

Press the MUTE button again to cancel Mute mode and restore the sound from the speakers.

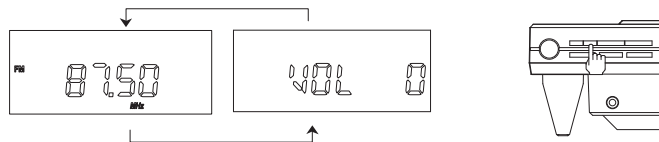

USING HEADPHONES (Headphones Not Included)


Connect a set of stereo headphones with 3.5mm mini plug to the headphone jack on the front panel. The speakers are automatically shut off when headphones are in use.

Note : to establish a safe headphones sound level :

Start your volume control at a low setting.

Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.


The sound equalization can be adjusted for optimum sound reproduction depending on the style of music you are playing. By pressing the EQ button, you can switch between Flat, ROCK, JAZZ, POP or CLASSIC.

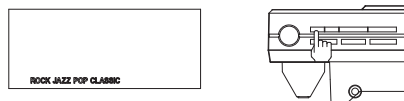

COMPACT DISC OPERATION


PLAYING A CD

1. Press the CD Button to select the CD function.

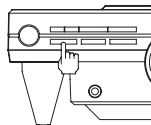






2. Press the OPEN/CLOSE button to open the CD door .

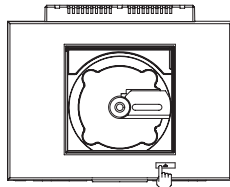

3. Place the CD with label side up inside the CD compartment. Press the OPEN/CLOSE button again to close the CD door.
4. After a few seconds, the total number of tracks and total playing time will appear in the Multi function Display.

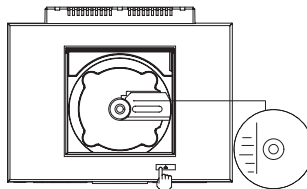

5. Press the **▶||** button to start playing the CD.

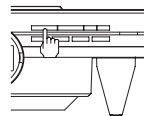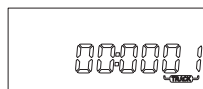


6. You can key in directly the track number you wish to play by pressing the number key on remote control. For example to play track #12: Press "+10" Button followed by "2" Button track #12 will start play back automatically.

TO:

Stop play
 Pause play
 Resume play after pause
 Scan forward and backward
 Skip tracks
 Repeat all tracks
 Repeat current track
 Random play
 Control the volume

PRESS:

■
 ▶|| once
 ▶|| again
 And hold ◀◀ / ▶▶
 ◀◀ / ▶▶
 REPEAT
 REPEAT twice
 RANDOM
 +/- Volume Control

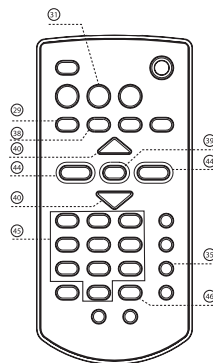

Note:

PAUSE MODE

To pause temporarily during CD playback press the PLAY/PAUSE **▶||** button again. The sound stops but the disc continues to spin. The elapsed time display flashes indicating that the system is in the Pause mode. Press the PLAY/PAUSE **▶||** button once more to cancel Pause mode and resume playback at exactly the same point on the disc.

REPEAT PLAYBACK

Use the Repeat feature to repeat either a single track or all tracks continuously.



Single Track Repeat

Press the ►► or ◀◀ buttons to select the desired track, then press the REPEAT button once. The "REP" indicator flashes and the selected track will be repeated continuously.

All Tracks Repeat

Press the REPEAT button twice. The "REP" indicator remains 'on'. Press the PLAY/PAUSE ►► button to begin playback. The entire disc will be repeated continuously.

To Cancel Repeat Playback

Press the REPEAT button until the Repeat indicator disappears. Repeat will also be canceled when the CD door is opened, the Tuner function is selected, or the power is switched 'off'.

RANDOM PLAYBACK

The Random feature allows you to play the tracks on a disc in random order. You can select Random Playback while the disc is stopped or while the disc is playing.

If the disc is stopped, press the RANDOM button followed by the PLAY/PAUSE ►► button. The RANDOM indicator appears and all the tracks on the disc will be played in random order.

If the disc is playing, just press the RANDOM button. The RANDOM indicator appears. When the current playing track ends random playback will begin.

To cancel Random Playback and resume normal playback, press the RANDOM button again.

The RANDOM indicator goes 'off'. Random playback is also canceled by pressing the STOP ■ button.

DISC ERROR



Note: If the disc is dirty, damaged or unreadable, or if the disc is inserted upside down, the "DISC" indicator will appear in the display. If this occurs, clean the disc, insert the disc correctly, or try another disc.

PROGRAMMING CD TRACKS




With this function you can program up to 16 titles in the order you desire.

Note : Programming can only be done when the player is in stop mode.



1. Press MEMORY Button to start programming the tracks. "MEMORY" and Pr 01 appears in the display.

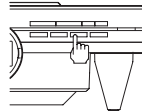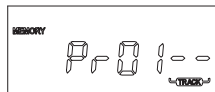

2. Select the desired track by pressing the CD skip buttons ◀◀ / ►► or use the remote control to key in directly the track number you want to program. The selected track blinks.

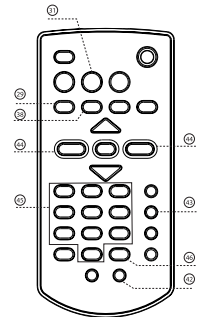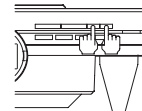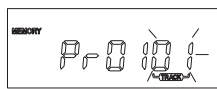

3. Press the MEMORY Button again to enter the selected track in program memory #1. The program number advances to Pr 02

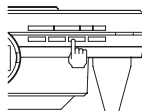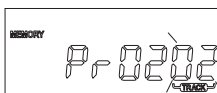



4. Repeat steps 2&3 to program additional tracks 16 tracks can be memorized.
5. Press ►|| PLAY/PAUSE button to start playing the tracks in your programmed order.
6. To clear the programmed tracks, press ■ STOP button at stop mode.


Note on CD-R/RW discs

- Because of non-standardized format definition / production of CD-R/RW, playback quality & performance are not guaranteed.
- Manufacture is not responsible for the playability of CD-R/RW due to recording conditions such as PC performance, writing software, media ability, etc.
- Do not attach a seal or label to either side of the CD-R/RW disc. It may cause a malfunction.

LISTENING TO RADIO

RADIO TUNING

1. Press the TUNER/BAND button to select TUNER function, press again to change bands.


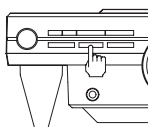


2. Tune to the desired station as follows:

Automatic Tuning - Depress the ◀◀ or ▶▶ buttons for at least one second until the display begins to move, then release the buttons. The tuner will scan up or down and then stop on the next strong station. Repeat this procedure until the display shows the frequency of your desired station.

Manual Tuning - Repeatedly press ◀◀ or ▶▶ buttons until the display shows the frequency of your desired station. Use Manual Tuning to select weaker stations that are bypassed by Automatic Tuning.


Note: The "FM ST" indicator will appear in the display if you tune to an FM Stereo broadcast. If FM Stereo reception is noisy or weak you may press the ST/MONO button on the remote control to switch to the FM Mono mode. Reception will usually improve but the sound will not longer be in stereo.

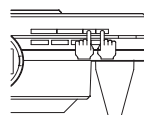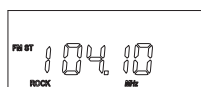

3. Adjust the VOLUME and EQ controls as desired.
4. When you are finished listening press the STAND BY button to return the system to the Standby (Power Off) mode.


FOR BETTER RECEPTION

FM

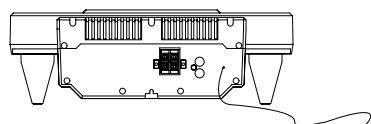

Fully unwind the wire antenna. Then extend the wire antenna and place it the position that sounds best.

AM

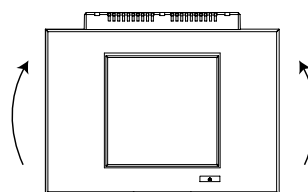



Rotate the unit from side to side.





TO PRESET CHANNELS

This unit is equipped with 12 preset memories for AM and 20 preset memories for FM. Once they are preset, they can be instantly accessed by pressing the appropriate number keys on the remote control.



1. Press the TUNER/BAND button to operate the unit in the radio mode and select the band.

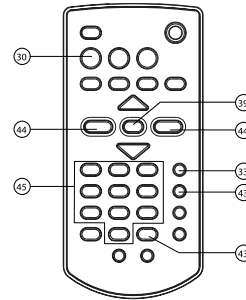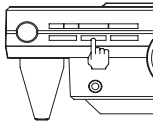



2. Tune to a desired station.

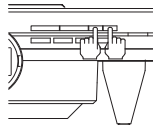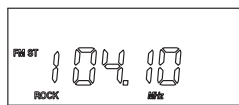



3. Press the MEMORY Button. The channel indicator " - " blinks.

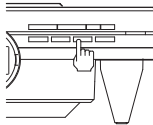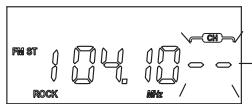

4. While the channel indicator is blinking, press the MEMO UP/PRESET button to select the desired preset channel. EXAMPLE: CHANNEL 01.

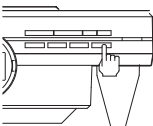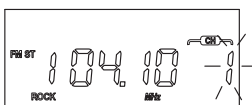

5. Press the MEMORY Button again to enter your station in memory channel 1.

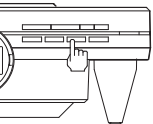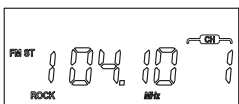


6. Tune to another station and repeat steps 3 to 5 to store the station in another preset channel.

Note: You can also store stations in the preset memories by using the numeric buttons on the remote control instead of the buttons on the front panel.


RECALLING PRESET STATIONS

1. Press the TUNER/BAND button to operate the unit in the radio mode and desired band.

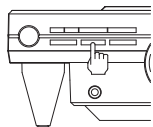



2. Press MEMO UP/PRESET button repeatedly to select your desired preset number or directly select the channel number by pressing the numeric button on the remote control.


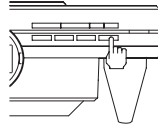


AUX OPERATION

To listen to the sound from a stereo TV, stereo VCR, or DVD player through the speakers of this system, connect the left/right Audio Out jacks of the external device to the left/right AUX IN jacks on the back of this system. Connection cables are not included.

Press the AUX button on the front panel or the remote control to select the Aux function. The "LINE" indicator appears in the display. Operate your external device as usual. When you hear the sound from the external device, adjust the VOLUME and EQ controls of this system as desired.

Note: It is not necessary to disconnect the external device when you are finished listening. You may leave the external device connected to the AUX IN jacks and select the external device by pressing the AUX button whenever you wish.

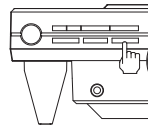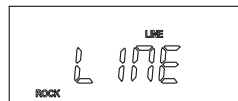



DISPLAY MODE FUNCTION

Repeatedly pressing this button cycles the display through various modes as follows:

In Standby (Power Off) Mode - Current Time > Timer On Time > Timer Off Time > Current Time, etc.

In Tuner Mode - Station Frequency > Current Time > Timer On Time > Timer Off Time > Station Frequency, etc.

In CD Play Mode - Elapsed Time of The Current Track > Remaining Time Till The End Of The Disc > Current Time > Timer On Time > Timer Off Time > Elapsed Time Of The Current Track, etc.

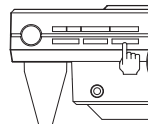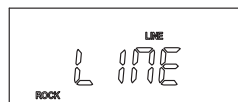


MISCELLANEOUS OPERATIONS

The following functions are accessible on the remote control.

SLEEP OPERATION

When the unit is ON, press the SLEEP button. The display shows 10 minutes of playing time momentarily and then returns to the current function mode. The unit will automatically turn off after 10 minutes.

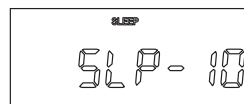

INCREASING THE SLEEP PERIOD


1. When the unit is "On", press the sleep button repeatedly until the desired sleep period is reached. The time increases in increments of 10 minutes and can be set from 10 minutes up to 90 minutes.
2. The unit will automatically turn off after the set time has elapsed.
3. To cancel the Sleep operation, press the SLEEP button repeatedly and release when "00" is displayed or simply switch the unit to standby and turn on again.


TIMER OPERATION

The unit can be set to turn on and off at predetermined times in any function mode. To set the on/off times proceed as follows:


SETTING TIMER ON



The following procedure shows the setting of TIMER to on at 7:30 AM and to off at 8:15 AM (in CD mode).

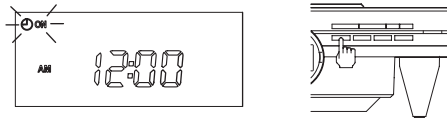
1. Press MODE Button repeatedly until the TIMER ON setting indicator "  ON " flashes in the display.

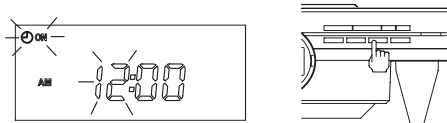


2. Press the MEMORY button. The Hour digits flash.



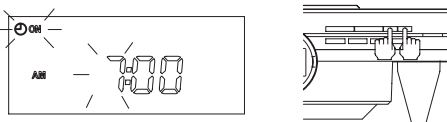


3. Press the  or  buttons to adjust the hour. Observe the AM / PM indicators.

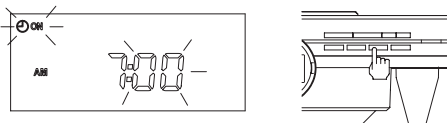


4. Press MEMORY Button to confirm the hour setting. The minute digits flash.




5. Press the  or  buttons to adjust the minutes.

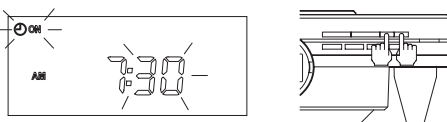

6. Press the MEMORY Button to complete setting. TIMER ON time is displayed with icon “🕒” flashing.

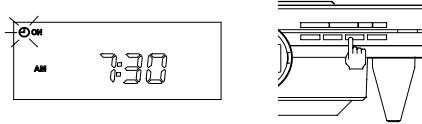



7. Press MODE button repeatedly until the display returns to the current function mode. The “🕒 ON” indicator will remain on the display.

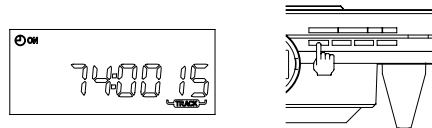


Note: If no button is pressed within 5 seconds after pressing the mode button, the unit will exit the setting mode.

SETTING TIMER OFF


1. Press MODE Button repeatedly until the TIMER OFF setting indicator “🕒 OFF” flashes in the display.

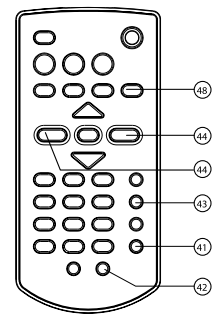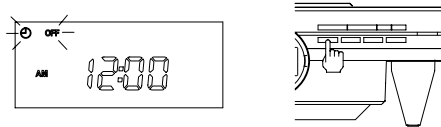


2. Press the MEMORY button. The Hour digits flash.

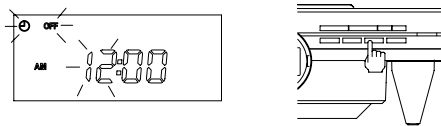


3. Press the ◀◀ or ▶▶ buttons to adjust the hour. Observe the AM / PM indicator.

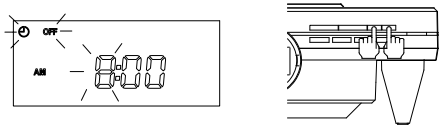


4. Press MEMORY button to confirm hour setting. The minute digits flash.

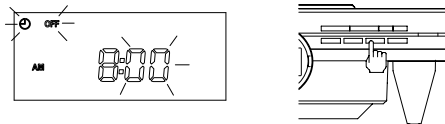

5. Press the ◀◀ or ▶▶ buttons to adjust the minutes.

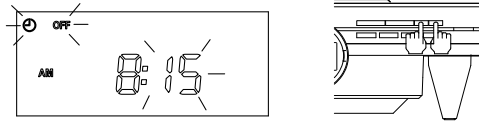


6. Press the MEMORY Button to complete setting. TIMER OFF time is displayed with icon ⏻ flashing.

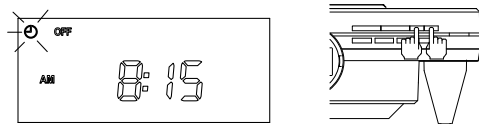


Note: If no button is pressed within 5 seconds after pressing the mode button the unit will exit the setting mode.

7. Press MODE button again. CD information and icon “⏻ ON OFF” are displayed.

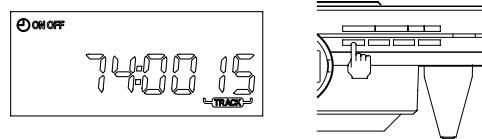


8. Press STAND BY button to turn off the unit. It will turn on automatically at the timer on time, and will turn off automatically as well at the timer off time. The current time and TIMER ON/OFF indicator will appear on the display.

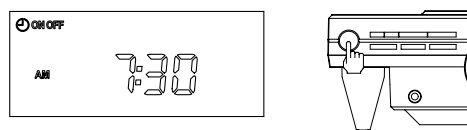


SNOOZE FUNCTION

If the unit has switched itself on by means of the timer function, press the SNOOZE on the remote control switch the unit to Standby mode for approximately 5 minutes. The current time, TIMER ON/OFF and SNOOZE indicator will appear on the display. After this time the unit switches on again. Press SNOOZE again for another 5 minutes or switch the unit off with ⏻ ON/STAND BY

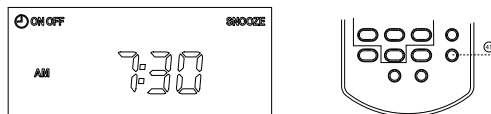

CLEARING TIMER ON SETTING

1. To clear the TIMER ON setting, press MODE button repeatedly until icon “⏻ ON” appear in the display left top corner with “⏻” flashing.

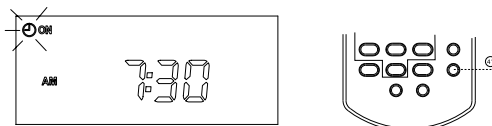

- Press TIMER Button once to enter TIMER ON setting mode. TIMER ON setting indicator “🕒 ON” flashes.



- Press MODE Button twice. TIMER ON setting indicator “ON” disappears and display shows icon “🕒 OFF”.



CLEARING TIMER OFF SETTING

- Press MODE button repeatedly until icon “🕒 OFF” appear in the display left top corner with “🕒” flashing.



- Press TIMER Button once to enter TIMER OFF setting mode. TIMER OFF setting indicator “🕒 OFF” flashes.




- Press MODE Button once. TIMER OFF setting indicator “🕒 OFF” disappears.



RESET BUTTON



If your system is subject to a sudden power surge the internal computer may lock up or freeze to prevent permanent damage to the system. If you find that the system will not respond to any commands from the front panel controls or the remote handset, lift the front of the system upward. The RESET button is located inside a small hole on the upper right corner of the bottom panel. Use a toothpick, a straightened paper clip, or similar device to depress the RESET button for at least 1 second. The internal computer will reset itself and the system will return to the Standby (Power Off) mode. Note: Pressing the RESET button will reset the internal computer to the factory default settings and all timer and preset station memories will be erased. It will be necessary to reprogram the station memories and the timer settings once again.

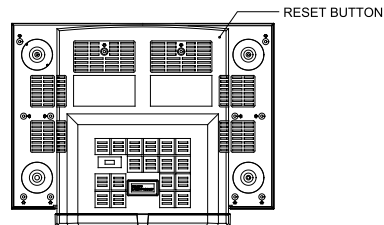



CARE AND MAINTENANCE

COMPACT DISC CARE

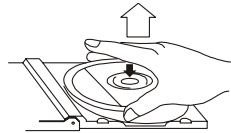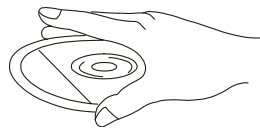

- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges. Discs should be stored in their cases after use to avoid scratches.
- Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the disc.
- Do not attach any tape, stickers, etc and or write anything on either side of the disc.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.



- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damage (scratched).
- Do not expose discs to direct sunlight, high humidity, high temperatures, or dust, etc. Prolonged exposure to extreme temperatures can warp the disc(such as leaving the disc in your car during summertime).
- When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.




Note : Always press the STOP button and wait for the disc stop rotating before opening the CD door to remove the disc.

- If there is a scratch, dirt or fingerprint on the CD, it may cause tracking error. Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out. Don't store discs in places with high temperatures or high humidity – they can become warped. After playing, store the CD in its case.



CLEANING THE LENS

A dirty lens will cause sound skipping. If the lens is very dirty, the player may not work. We suggest using a special cleaning disk(not included) available in most music and Hi-Fi stores. However, if you do not have one, you may use a cotton swab very slightly dampened with alcohol to clean the lens.

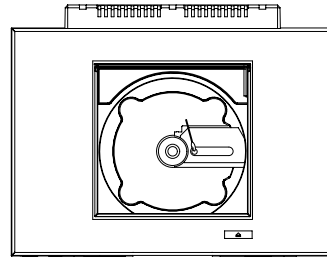

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- If the cabinet become dusty wipe it with a soft cloth. Do not use any wax or polish sprays on the cabinet.
- If the cabinet becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will mar the finish of your unit.





TROUBLE SHOOTING GUIDE		
If you experience a problem, check the following before calling for a service.		
Symptom	Possible Cause	Solution
General		
No Power	AC Cord Not Connected	Reconnect AC Cord
Incorrect Display	Power Surge	Press Reset Button (See Page 18)
No Sound	Unit In Standby Mode	Press Standby Button To Turn System 'On'
	Volume at Minimum	Raise Volume Level
	Mute Mode Selected	Press Mute Button To Cancel Mute Mode
Radio		
Poor Reception Quality	Station Not Tuned Correctly	Use Manual Tuning To Select Exact Frequency
	FM Antenna Not Positioned Properly	Fully Extend FM Wire Antenna
	AM Antenna Not Positioned Properly	Rotate Unit To Find Strongest Signal
CD Player		
Disc Does Not Play	CD Function Not Selected	Press CD Button To Select CD Function
Disc Skips or Stops	Dirty or Scratched Disc	Clean The Disc. See Page 19
Erratic Playback	Dirty or Defective Disc	Clean or Replace The Disc



TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST SERVICE CENTER PERMITTED TO PERFORM WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE
PLEASE CALL:
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:
Emerson Radio Corp.
Consumer Affairs Dept.
1901 Diplomat Drive,
Farmers Branch, TX 75234.



LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.


1901 Diplomat Drive.

Farmers Branch, TX 75234.

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

 AU898M



EMERSON
Part No. : 16-2918
312-01

Printed in China

