


## ***Needle Replacement***

To remove needle hold tone arm steady while pulling down on the top front edge of the red plastic part, as shown. It may help to use a fingernail. Rotate the front down and pull the red plastic part off as shown.

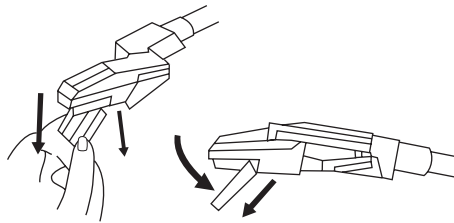

To replace the needle, push the red plastic part on at an angle and rotate the front up until it clicks into position.

