



CORDLESS SCALP MASSAGER



OWNER'S MANUAL ER110101

Visit our web site at www.emersonradio.com

UNAUTHORIZED MODIFICATIONS TO THIS DEVICE COULD
VOID MANUFACTURER'S WARRANTY

1. Packing List



Scalp Massager




USB
Charging Cable



Owner's Manual

2. Device Overview

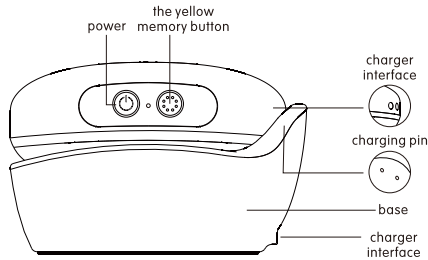

1. The appliance is charged and ready for use if the battery is discharged, go directly to the next step.
2. Put the product in the charging base, (remove the coma)and connect the charging interface to the charging pin of the base (see the picture above)
3. Insert the plug of the charger into household outlet, and insert the other end to the charger Interface of the base, charging light is on and charging starts. The battery is fully charged when charging light turn off.

3. Operating Instructions

1. For long time and traveling use, we designed travel lock in this product to avoid any error operating or energy consumption. When you lock it, none of the operations work until you unlock the program.
2. "Short Press" means quick press, "Long Press" means press over 3 seconds
3. The product is in travel-lock mode when it leaves the factory, please unlock it before using.

The Power Button

1. When the product is off, short press, LED light is on, the product will be turned on and switched into high-speed working mode.
2. When the product is on, short press once, it will be switched into a different working mode. Three modes cyclically switch of scratching, vibrating + scratching, vibrating.
3. When the power is on, long press to turn it off. When the power is off, it will aromatically memorize the last working mode and will run the last working mode when you turn it on and press "yellow memory button " .

The "Yellow Memory Button "

When the power is on, short press to switch In the memory mode. Press the memory button under each mode, it will cyclically switch of high-speed and low- speed.

Press "Power button " and the "yellow memory button " in the same time.

1. When the power is on, short press, Y stops running and deletes current memorized mode.
2. Under the working mode (the product can be fumed on or "Timed off), long press 3 seconds, it stops running and switches into travel locking mode with twice vibrating.
3. Under the travel-lock mode, long press 3 seconds, it switches into working mode with one time vibrating, then you can start to use it.

4. Precautions

When using electric appliances, basic safety precautions should always be observed, including the following:

1. Read all instructions.
2. Close supervision is necessary when this product is used by or near children or mentally disabled individuals.
3. Using by person who has limited physical mobility or reduced sensibility must under supervision.
4. This product is not to be used for any medical purpose.
5. Use this product only for its intended use as described in this manual.
6. The use of accessory attachments not recommended by the manufacturer may cause injuries.
7. Do not allow charging cord to touch hot surfaces. Wrap this cord loosely around the unit when storing.
8. The product should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
9. Do not operate this product with damaged charging cord, or after the appliance malfunctions or is dropped or damaged in any manner. Call your toll- free customer service number for information on examination, repair or adjustment.
- 10 Remove all scarves, neckties, necklaces and jewelry before using this product.
- 11 **IMPORTANT:** Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and / or thrombosis, is at an increased risk of developing blood clots, or who has pins/ screws/ artificial joints or other medical devices implanted in his/ her body should consult with a physician before using a massaging device designed for home use.
- 12 Do not keep it in any place with high temperature.
- 13 Disconnect the charging cord after full charging and before cleaning.
- 14 Do not use this product when it is undercharging.
- 15 Do not use outdoors.
- 16 Do not use it during driving.

16 It is recommended to use no more than 15 mins each time (the product stops automatically when it completes its 15 mins massage program). It is recommended to allow it to rest 30 minutes before re-using. This will prolong the life of the product.

17 Stop use the product if it is overheating by using long time until it becomes cool.

18 Using ER110101 charger to connect the power interface for charging. Do not use any foreign charger which not supplied by this manufacturer.

5. Troubleshooting

Trouble	Reason/Solution
Cannot start the massager	<ul style="list-style-type: none">· Battery Low, please charge it before using.· The product under travel lock mode, unlock it by the user's manual guides.
The massager stoped abnormally	<ul style="list-style-type: none">· Battery runs out of power, charge the battery.· Self-timed 15min is out, restart the product.
Massager slight noise	<ul style="list-style-type: none">· It is normal working noise of the internal mechanism.

6. FCC Statement and Safety Warnings

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF WARNING STATEMENT:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected, consult the dealer or an experienced radio/TV technician for help.

SAFETY ADVISORY & WARNING:

Read and follow all instructions. Use only as intended.

CAUTION: Do **NOT** open to repair. A qualified technician must carry out repair work.

ATTENTION: Do **NOT** power up while the unit is damp. Towel dry the unit AND make sure all connections are dry **BEFORE** plugging in the power plug. Failure to do so may result in electrical damage to the unit and may void the warranty.

WARNING: This product may contain chemicals listed in California Proposition 65 (<https://oehha.ca.gov/proposition-65/proposition-65-list>)

WARNING: This unit must NOT be used in or near an open heat source

WARNING: This unit must NOT be used in or near an open heat source or excessive heat.

ATTENTION: Do NOT dispose of in a landfill. Contact a certified recycling agent to dispose of the unit.

WARNING:

Consult your doctor before using this product if you are in any of the following cases:

- During Pregnancy or 4 months after delivery
- You are using cardiac pacemaker or other medical electronic device implanted
- You have disturbance of blood circulation or thrombi
- You have skin allergy or skin infection
- You have osteoporosis

Do not operate after taking painkillers, sedatives or alcohol. Consult your doctor if under these medications.

Never use the product on open skin eruptions or on swollen or inflamed areas.

Never leave the product operating or unattended, especially if children are present.

SAFETY:

You should never

- 1) Never power the unit if you suspect water has entered the device. Powering up a device with water inside could be potentially hazardous and cause fire or a spark.
- 2) Never use the device in a wet environment.
- 3) Never attempt to fix this device.

CARE, MAINTENANCE, & PRECAUTIONS:

- 1) If the unit is placed in water, water may enter the unit and void your warranty.
- 2) Do **NOT** use or store the unit in places with high temperature.
- 3) Periodically clean the unit with a soft moist cloth. Do **NOT** use any oily solvent or chemicals for cleaning.

- 4) Power the unit to an AC outlet using the AC-to-USB Adapter 5V, 1A and the USB cord provided.

7. Clean and Maintenance

1. Place the massager in its STORAGE BAG and in a safe, dry and cool place when not in use.
2. Do not keep it in any place with high temperature, near fire or direct sunlight or it may be faded or damaged.
3. Do not contact benzene, diluent or any other corrosive liquid.
4. It is a waterproof device. You can use cleaning fluid and water to clean it (Do not sink it into water for long time).
5. Wipe the nodes with soft, damp cloth or neutral detergent to clean the product and wipe dry afterwards.
6. Do not use any sharp brush, sharp tool, harsh solvents, alcohol, gasoline, diesel or bleach based cleansers to clean it.
7. Do not attempt to repair this product, there are no user-serviceable parts.

8.

LIMITED WARRANTY

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of one (1) year from date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:

* Repair service for one (1) year from date of original purchase at no charge for labor and parts.

To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.

In the event the product must be returned to Emerson:

- * Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.
- * Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.
- * Enclose a note with your name, address, phone number, Return Authorization number and brief reason for returning the unit.
- * Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).
- * Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).

NOTE This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Cost incurred in the shipping of the product to and from Emerson's Return Facility.
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (e) Signal reception problems caused by external antenna or cable systems.
- (f) Products not purchased in the United States.
- (g) Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA.


THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

10-01-1402A

The serial number can be found on the package. We suggest that you record the serial number of your unit in the space below for future reference.

Model Number: ER110101

Serial Number:



◆◆◆◆◆ SERVICE ◆◆◆◆◆

**FOR ADDITIONAL SET-UP
OR OPERATING ASSISTANCE PLEASE CALL:
1-800-898-9020**

**FOR CUSTOMER SERVICE, PLEASE E-MAIL TO:
internet@emersonradio.com**

**OR WRITE TO:
Emerson Radio Corp. Consumer Affairs Dept. 3
University Plaza,
Suite 405
Hackensack, NJ 07601**

Emerson Part No.: ER110101-20180119-00

Printed in China