



900W MICROWAVE OVEN



AUG 1 2004

**OWNER'S MANUAL
MW8990SB**

EMERSON
PART NO.:80-5118
403-01

Printed in China

Visit our web site at "www.emersonradio.com"

UNAUTHORIZED MODIFICATIONS TO THIS DEVICE COULD VOID THE USER'S AUTHORITY TO OPERATE IT.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the following: (1) door (bent), (2) hinges and latches (broken or loosened) and/or (3) door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

CONTENTS

Precautions to Avoid Possible Exposure to Excessive Microwave Energy	1	Precautions to Avoid Possible Exposure to Microwave Techniques.....	14
Important Safety Instructions	2	Hot Snacks and Appetizers.....	15
Safety Precautions.....	3	Meats.....	16
Grounding Instructions.....	4	Poultry.....	17
Installation.....	4	Seafood.....	17
Care of Your Microwave Oven.....	5	Eggs & Cheese.....	18
How to Use Your Microwave Oven Safely	5	Vegetables.....	19
Location of Controls	6	Soups.....	19
Operation	7	Sauces.....	20
Setting the Clock.....	7	Casseroles.....	20
Defrost By Weight.....	8	Sandwiches.....	21
Defrost by Time.....	8	Pasta and Grains	21
Cooking In One Stage.....	9	Cereals.....	22
Timer Cook	9	Convenience Foods	22
Cooking in Two or Three Stages.....	10	Desserts.....	23
Defrosting in Two or Three Stages.....	11	Weight & Measure Conversion Chart.....	23
Quick Cook.....	11	Specifications.....	24
Cancel/Stop Button	11	Before You Call for Service.....	24
Auto Cook	12	Limited Warranty.....	25
Child Lock	13		
Cooking Guide	14		
The Principles of Microwave Cooking	14		
Food Characteristics.....	14		

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- 1 Read all instructions before using this appliance.
- 2 Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 1.
- 3 This appliance must be grounded. Connect only to a properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on page 4.
- 4 Install or locate this appliance only in accordance with the provided installation instructions.
- 5 Some products such as whole eggs and sealed containers, for example, closed glass jars, may explode and should not be heated in this oven.
- 6 Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
- 7 As with any appliance, close supervision is necessary when used by children.
- 8 Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- 9 This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair or adjustment.
- 10 Do not cover or block any openings on this appliance.
- 11 Do not store or use this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, or near a swimming pool, and the like.
- 12 Do not immerse cord or plug in water.
- 13 Keep cord away from heated surfaces.
- 14 Do not let cord hang over edge of table or counter.
- 15 When cleaning surfaces of door and oven that come together when closing the door, use only mild, non-abrasive soaps or detergents applied with a sponge or soft cloth.
- 16 To reduce the risk of fire in the oven cavity:
 - (a) Do not overcook food. Carefully attend appliance if paper, plastic or other combustible materials are placed inside the oven to facilitate cooking.
 - (b) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - (c) If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - (d) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
- 17 Do not use this microwave oven to heat corrosive chemicals (for example, sulfides and chlorides). Vapors from such corrosive chemicals may interact with the contact and springs of the safety interlock switches thereby rendering them inoperable.

SAVE THESE INSTRUCTIONS

2

SAFETY PRECAUTIONS

General Use

- 1 Do NOT attempt to tamper with or make any adjustments or repairs to door, control panel or any other part of the oven. Do NOT remove outer panel from oven. Repairs should only be done by qualified service personnel.

Food

- 1 Never use your microwave oven for HOME CANNING. The oven is not designed to permit proper canning. Improperly canned food may spoil and be dangerous to consume.
 - 2 COOKING TIMES given in the cooking guide are approximate. Factors that may affect cooking are starting temperature, altitude, volume, size and shape of food and utensils used. As you become familiar with the oven, you will be able to adjust for these factors.
 - 3 It is better to UNDERCOOK RATHER THAN OVERCOOK foods. If food is undercooked, it can always be returned to the oven for further cooking. If food is overcooked, nothing can be done. Always start with minimum cooking times.
 - 4 SMALL QUANTITIES of food or foods with LOW MOISTURE content can burn, dry out or catch on fire if cooked too long.
 - 5 Do NOT boil eggs in their shell. Pressure may build up and the eggs may explode.
 - 6 Potatoes, apples, egg yolks, whole acorn squash and sausage are some examples of food with NONPOROUS SKINS. These must be pierced before cooking to prevent bursting.
 - 7 POPCORN must be popped in a microwave corn popper. Microwave popped corn produces a lower yield than conventional popping. Do not use oven for popcorn unless popped in a microwave approved popcorn utensil or unless it's commercially packaged and recommended especially for microwave ovens. Do not use oil unless specified by the manufacturer.
 - 8 Do NOT attempt to deep fat fry in your oven.
 - 9 HEATED LIQUIDS can ERUPT if not mixed with air. Do not heat liquids in your microwave oven without first stirring.
- 1 Do NOT attempt to tamper with or make any adjustments or repairs to door, control panel or any other part of the oven. Do NOT remove outer panel from oven. Repairs should only be done by qualified service personnel.
 - 2 Do NOT operate the oven empty. The microwave energy will reflect continuously throughout the oven if no food or water is present to absorb energy.
 - 3 If a fire occurs in the oven, touch the Cancel/Stop button and LEAVE THE DOOR CLOSED. Disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - 4 Do NOT attempt to dry clothes, newspapers or other materials in the oven. They may catch on fire.
 - 5 Do NOT use recycled paper products. Recycled paper towels, napkins and waxed paper can contain metal flecks which may cause arcing or ignite. Paper products containing nylon or nylon filaments should be avoided, as they may ignite.
 - 6 Some styrofoam trays (like those that meat is packaged on) have a thin strip of metal embedded on the bottom. When microwaved, the metal can burn the floor of the oven or ignite a paper towel.
 - 7 Avoid inserting nails, wire, etc. through any holes in the unit during operation. Never insert a wire, nail or any other metal objects through the holes on the cavity or any other holes or gaps, because such objects may cause electric shock and microwave leakage.
- ### Utensils
- 1 METAL CONTAINERS or dishes with metallic rims should not be used. Arcing may occur.
 - 2 METAL TWIST-TIES may not be used in the microwave oven.
 - 3 Do NOT use SEALED JARS or NARROW NECK bottles for cooking or reheating. They may shatter.
 - 4 Do NOT use CONVENTIONAL THERMOMETERS in the microwave oven. They may cause arcing.
 - 5 Remove PLASTIC STORE WRAPS before cooking or defrosting foods in the oven.

3

GROUNDING INSTRUCTIONS

pliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having an escape wire with a grounding plug. The plug must be inserted into an outlet that is properly installed and grounded.

Warning: Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service personnel if the grounding instructions are not completely understood, or if you doubt either as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a three wire extension cord that has a three blade grounding plug, and a three slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

INSTALLATION

Location: When positioning the microwave oven, it should be set on a steady, flat surface.

Ventilation: Do not block air vents. If they are blocked during operation, the oven may overheat and eventually cause a fire. For proper ventilation, keep three inches of space between the oven's top, sides, rear and the area where it is to be installed.

TV reception: Poor television reception and radio interference may result if the oven is located close to a radio, antenna, or antenna wire. Position the oven as far from them as possible.

Heat and moisture: Keep the oven away from hot air, steam or splashing liquids when choosing a place to install it, otherwise, the unit's operation may be adversely affected, causing it to break down.

Power supply:

Check your local power source. This microwave oven requires a 120V, 60Hz power supply.

 
Use a receptacle that will accept the ground prong. Do not use a power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a power cord.

Power cord sets or extension cords are available and may be used if care is exercised in their use.


If a long cord or extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, (2) the extension cord must be a grounding-type 3-wire cord, and (3) the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

Do not use the oven for any damage such as: Dents, a misaligned door, broken door or a dent in the cavity. If any of these are visible, DO NOT INSTALL THE UNIT. Notify the dealer immediately.

When using a 3-pronged plug

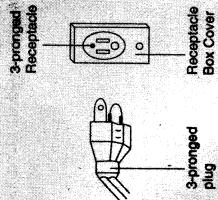

 When using a grounding adapter, make sure the receptacle box is fully grounded.

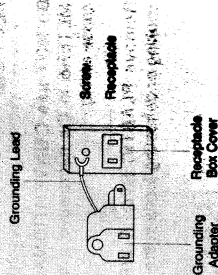

CARE OF YOUR MICROWAVE OVEN

1 Disconnect the AC plug from the outlet before cleaning.

 
2 Keep the inside of the oven clean. When food spatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. The use of harsh detergent or abrasives is not recommended.

3 The outside oven surface should be cleaned with soap and water, rinsed and dried with a soft cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation slots.

4 If the Control Panel becomes dirty or wet, clean with a soft, dry cloth. Do not use harsh detergents or abrasives on Control Panel.

5 If steam accumulates on both sides of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and this is not an indication of a malfunction in the unit.

6 It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm, sudsy water or in a dishwasher.

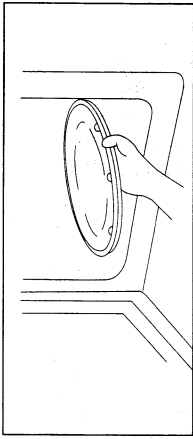

7 The roller guide and oven cavity floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent water or window cleaner and dry. The roller guide may be washed in mild, sudsy water or in the dishwasher.

Roller Guide

1 The ROLLER GUIDE and oven floor should be cleaned frequently to prevent excessive noise.

2 The ROLLER GUIDE MUST ALWAYS be used for cooking together with the Glass Tray.

 
Glass Tray

1 Do NOT operate the oven without the Glass Tray in place.

2 Do NOT use any other Glass Tray with this oven.

3 If the Glass Tray is hot, ALLOW IT TO COOL before cleaning it or placing it in water.

4 Do NOT cook directly on the Glass Tray.

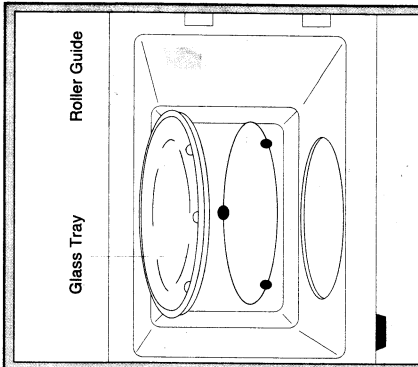


HOW TO USE YOUR MICROWAVE OVEN SAFELY

Although your oven is provided with safety features, it is important to observe the following:

- It is important not to defeat or tamper with safety interlocks.
- Do not place any object between the oven face and the door or allow residue to accumulate on sealing surfaces. Wipe the sealing area frequently with a mild detergent, rinse and wipe dry. Never use abrasive powders or pads.
- When opened, the door must not be subjected to strain, for example, a child hanging on an open door or any load which could cause the oven to fall forward and cause injury and damage to the door. Do not operate the oven if it is damaged, until it has been repaired by a qualified person. It is particularly important that the oven door close properly and that there is no damage to the following:
 - Door (bent), ii) Hinges and Latches (broken or loosened), iii) Door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

 LOCATION OF CONTROLS

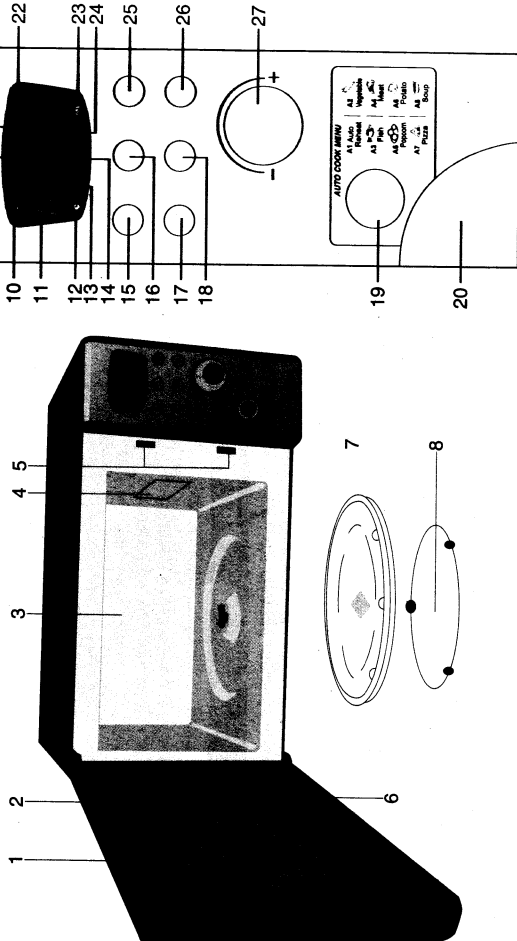

Door latch-When the door is closed, it will automatically lock shut. If the door is opened while the oven is operating, the magnetron will automatically shut off.

Door screen-Allows viewing of food. The screen is designed so that light can pass through, but not the microwaves.

Oven cavity
Spatter shield-Protects the microwave outlet from splashes of cooking foods.

Safety interlock system-Prevents the oven from operating while the door is opened.

Door seal-The door seal maintains the microwaves within the oven cavity and prevents microwaves leakage.

Glass cooking tray-Made of special heat resistant glass. The tray must always be in proper position before operating the oven. Do not cook food directly on the tray.

Roller guide-Supports the glass cooking tray. Must always be in proper position before operating the oven.

Defrost Indicator

Microwave Indicator

Display

Clock Indicator

Child Lock Indicator

 
Auto Cook Indicator

Defrost By Weight Button-Used to set the oven to

OPERATION

SETTING THE CLOCK

1. Press the **Timer Cook/Clock Adjust** button; the hour digit will blink and the clock indicator will light.

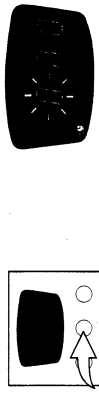

2. Rotate the **Selection Dial** to set the current hour.



3. Press the **Timer Cook/Clock Adjust** button again; the minute digits will blink.



4. Rotate the **Selection Dial** to set the current minute.



5. Press the **Timer Cook/Clock Adjust** button again; the display will show the present time. After the clock has been set, the time will appear unless the oven is cooking or defrosting.



NOTES:

 
- To reset the present time in the display window when the oven is off, press the **Timer Cook/Clock Adjust** button and reset.
- If you make a mistake when setting the time, press the **Cancel/Stop** button.
- To recall the actual time while the oven is cooking or defrosting, simply press the **Timer Cook/Clock Adjust** button and the display will show the actual time for three seconds.

OPERATION (CONTINUED)


SET BY WEIGHT

DEFROST BY WEIGHT lets you easily defrost foods by eliminating guesswork in determining defrosting time. The minimum weight for Auto Weight Defrost is 3.5oz. The maximum weight is 70.00oz. Follow the steps below for defrosting.


Press the **Defrost By Weight** button; the Microwave and High Cook indicators will light and "dDEF1" will appear in the display.

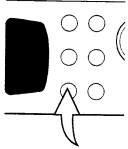

 Rotate the **Selection Dial** to set the desired weight; the indicator will light.

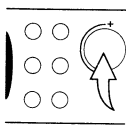

 
Press the **OK/Start** button to start defrosting; the Microwave and Defrost indicators will blink and the display will countdown the remaining defrosting time in minutes and seconds. It will beep five times when defrosting is completed.

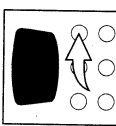


DEFROST BY TIME

DEFROST BY TIME will automatically set the oven to defrost at a time set by the user. The minimum time for defrost is 5 seconds. The maximum time is 95 minutes. Follow the steps below for easy defrosting.

 
Press the **Defrost By Time** button; the Microwave and High Cook indicators will light and "dDEF2" will appear in the display.

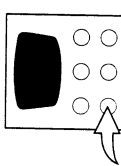

 Rotate the **Selection Dial** to set the desired time.

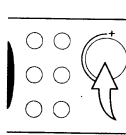

 Press the **OK/Start** button to start defrosting; the Microwave and Defrost indicators will blink and the display will show "count down" the remaining defrosting time in minutes and seconds. It will beep five times when defrosting is completed.

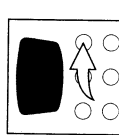


OPERATION (CONTINUED)



COOKING IN ONE STAGE

Set a cooking or other operational time/power as follows:

 
1. Press the **Power Level** button; the Microwave and High Cook indicators will light and "P100" will blink in the display.

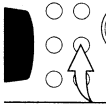

  
2. Rotate the **Selection Dial** to set the desired power (100, 80, 50, 30, 10); the display will show the percentage you chose. If selecting power 50, 30 or 10, the Low Cook indicator will light instead of the High Cook indicator. Skip this step if cooking at 100%.

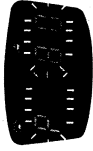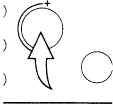

 
3. Press the **OK/Start** button; the power will stop blinking in the display.

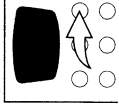

 4. Rotate the **Selection Dial** to set the desired cooking time in 5 second increments (up to 95 minutes).

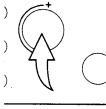

 
5. Press the **OK/Start** button to start cooking; the Microwave and one of the Cook indicators will blink and the display will countdown the remaining cooking time in minutes and seconds. It will beep five times when cooking is completed.

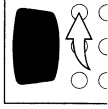


TIMER COOK-TIME MUST BE SET BEFORE PERFORMING TIMER COOK-SEE PAGE 7.

Set the microwave to turn on at a preset time as follows:

 
1. Repeat steps 1 through 4 above, then press the **Timer Cook/Clock Adjust** button; the Timer Cook hour digit will blink.

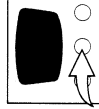

 2. Rotate the **Selection Dial** to set the timer hour; then press the **Timer Cook/Clock Adjust** button again; the Timer Cook minute digits will blink. Repeat steps 1 and 2 to set the minute. Rotate the **Selection Dial** to set the timer minute.

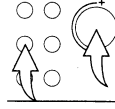

 3. Press the **OK/Start** button. When the actual time matches the preset Timer Cook time, the microwave will turn on and cook as per the preset cooking instructions.


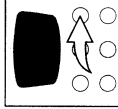


OPERATION (CONTINUED)


COOKING IN TWO OR THREE STAGES

Set up to three cooking stages as follows:

  
1. Press the **Power Level** button; the Microwave and High indicators will light and "P100" will blink in the display.

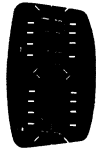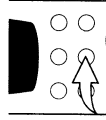

 
2. Rotate the **Selection Dial** to set the desired power (100, 30, 30, 10); the display will show the percentage you select. If selecting power 50, 30 or 10, the Low Cook indicator will light instead of the High Cook indicator. Repeat this step if cooking at 100%.

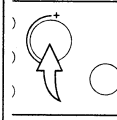


 
3. Press the **Ok/Start** button; the power will stop blinking in the display.

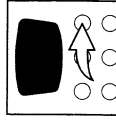

 
4. Press the **Selection Dial** to set the desired cooking time in second increments (up to 95 minutes).

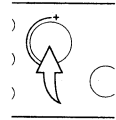

  
5. Press the **Power Level** button; the Microwave and High indicators will light and "P100" will blink in the display.

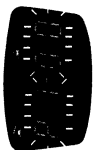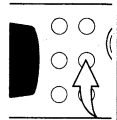

 
6. Rotate the **Selection Dial** to set the desired second power; the display will show the percentage you select. If selecting power 50, 30 or 10, the Low Cook indicator will light instead of the High Cook indicator. Repeat this step if cooking at 100%.

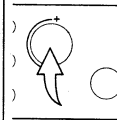

 
7. Press the **Ok/Start** button; the power will stop blinking in the display.



 8. Rotate the **Selection Dial** to set the desired second cooking time in 5 second increments (up to 95 seconds). Repeat steps 5 through 8 if setting a third stage.



 9. Press the **Ok/Start** button to start cooking; the Microwave and one of the Cook indicators will blink and the display will countdown the remaining cooking time in minutes and seconds and beep once between stages. It will beep five times when all the stages have completed cooking.




OPERATION (CONTINUED)


DEFROSTING/COOKING IN TWO OR THREE STAGES

Set up to three defrosting/cooking stages as follows:

 
1. Press the **Defrost By Weight** or **Defrost By Time** button; the Microwave and Defrost indicators will light and "DEF 1" or "DEF2" will appear in the display.



 2. Rotate the **Selection Dial** to set the desired weight/time.

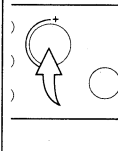

 
3. Follow steps on the previous page to set a second or third stage, then press the **Ok/Start** button to start cooking; the display will countdown the remaining time in minutes and seconds and beep once between stages. It will beep five times when all the stages have completed cooking.

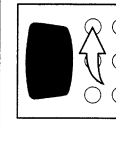


QUICK COOK

The microwave can start cooking at the press of a button as follows:

 1. Press the **Ok/Start** button; the Microwave will immediately start cooking at high (100%) power for one minute.

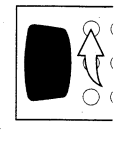

 2. Repeatedly press the **Ok/Start** button to increase the cooking time in one minute increments.

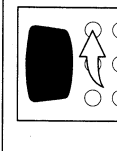

CANCEL/STOP BUTTON

 
To stop cooking or cancel a cooking program, simply press the **Cancel/Stop** button once to stop cooking or twice to cancel a cooking program.

OPERATION (CONTINUED)



COOK

COOK lets you easily cook items in the oven as it will automatically set the times and power levels to give results than one power only cooking.


Press the **Auto Cook** button; the Auto Cook indicator will blink and "A-1" will blink in the display.

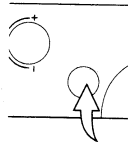

  Use the **Selection Dial** to select a desired Auto Cook item (see chart on the microwave control panel).

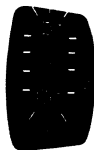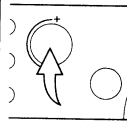


 Press the **Ok/Start** button; the Auto Cook selection will stop blinking in the display.

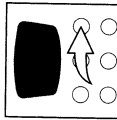


Press the **Selection Dial** to set the desired weight.

 The Auto Cook item will have the most popular weight to choose from.

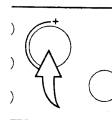

 Press the **Ok/Start** button to start cooking; the Auto Cook indicator will blink and the display will countdown the cooking time in minutes and seconds. It will beep when cooking is completed.

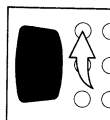


OPERATION (CONTINUED)


CHILD LOCK

The **CHILD LOCK** prevents unwanted oven operation by small children. The oven can be set so that the control panel is deactivated or locked.

 1. To activate, press and hold the **Cancel/Stop** button for three seconds, the display will appear as shown at the right and no buttons can be pressed.

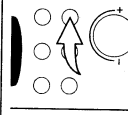

 2. To deactivate, press and hold the **Cancel/Stop** button for three seconds, the display will return to the time.

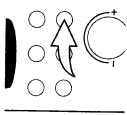

NOTES:

- To prolong the magnetron's life, the power will be switched to mid-low when cooking at high power for more than 30 minutes.
- One beep will sound when rotating the Selection Dial.
- Five beeps will sound when the cooking/defrosting ends.
- If the door is opened during oven operation, close the door and press the **Ok/Start** button to continue the cooking.
- If a cooking program has been set, but the **Ok/Start** button (or any other button) is not pressed within 5 minutes, the display will revert back to the time.

IFICATIONS

	Rating Specification
Supply	120V~ 60Hz
Output Power	900W
Frequency	2450MHz
Capacity	0.9 cubic feet
Dimensions	20(W) X 16.1(D) X 11.3(H) inches 32.05 Lbs (Approx)

E YOU CALL FOR SERVICE

Use the following checklist before you call for service.

does not work:

- that the power cord is securely plugged in.
- that the door is firmly closed.
- that the cooking time is set.
- that a blown circuit fuse or tripped main circuit breaker in your house.
- that the Child Lock feature is not engaged.

parking in the cavity:

Use containers, dishes or utensils in the oven and make sure they are not metal or have metal trim.

**LIMITED WARRANTY
MICROWAVE OVENS**

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal use and conditions ("manufacturing defect") for a period of one (1) year from date of original purchase in, and if used in, the United States ("warranty"). Should service be necessary under this warranty, Emerson will provide the following at an Independent Service Center or Regional Repair Facility permitted by Emerson to perform repairs, provided the manufacturing defect is verified along with the date of purchase:

- Repair service for one (1) year from date of original purchase at no charge for labor and parts.
- Replacement of a defective magnetron for seven (7) years from date of original purchase (labor not included after initial twelve (12) months).

There are Independent Service Center and Regional Repair Facilities located throughout the country. For one nearest you, DIAL TOLL FREE: 1-800-695-0098. In the event the product must be mailed to a Regional Repair Facility which is permitted by Emerson to perform repairs:

- Pack the unit in a well-padded heavy corrugated box.
- Enclose your check or money order payable to the REGIONAL REPAIR FACILITY in the amount of \$15.00 to cover return shipping and handling costs.
- Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).
- Ship the unit prepaid via UPS or parcel post (insured).

NOTE: This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Cost incurred in the shipping of the product to and from a Regional Repair Facility permitted by Emerson to perform warranty repairs.
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (e) Signal reception problems caused by external antenna or cable systems.
- (f) Products not purchased in the United States.
- (g) Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF EMERSON RADIO CORP.'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP.'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

MV1094F



TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST AUTHORIZED SERVICE CENTER...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE PLEASE CALL:
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:
Emerson Radio Corp.
Consumer Affairs Dept.
1901 Diplomat Drive
Farmers Branch, TX 75234