



Downmix

1. Press the SETUP button to enter the Setup Menu.
2. Use the (< , >) Navigation buttons to select Audio.
3. Use the (^ , v) Navigation buttons to move the cursor to the Downmix item.
4. Use the (>) Navigation button followed by the (^ , v) Navigation buttons to select between LT/RT, Stereo modes.

LT/RT: The front speakers are in theatrical LT/RT downmix mode.

Stereo: The front speakers are in Stereo Downmix mode.

5. Press the ENTER button.
6. Using the (< , > , ^ , v) Navigation buttons and press ENTER to exit and save setting.

General	Audio	Dolby	Preference
-- Speaker Setup Page --			
Downmix		LT/RT	Stereo
Set Downmix Mode			

Dynamic

1. Press the SETUP button to enter the Setup Menu.
2. Use the (< , >) Navigation buttons to select Dolby.
3. Use the (^ , v) Navigation buttons to move the cursor to the Dynamic item.
4. Use the (>) Navigation button followed by the (^ , v) Navigation buttons to select between Full and off levels and 3/4 to 1/4 in between..

Note: Select your desired Dynamic Range Compression Rate (DRC) to adjust linear compression rate to obtain the different compression results of the signals.

5. Press the ENTER button.
6. Using the (< , > , ^ , v) Navigation buttons and press ENTER to exit and save setting.

General	Audio	Dolby	Preference
-- Dolby Digital Setup --			
Dynamic		FULL 3/4 1/2 1/4 OFF	
Dynamic Range Compression			

Audio

1. Press the SETUP button to enter the Setup Menu.
2. Use the (< , >) Navigation buttons to select Preference.
3. Use the (^ , v) Navigation buttons to move the cursor to the Audio item.
4. Use the (>) Navigation button followed by the (^ , v) Navigation buttons to select between English, French, Spanish, German, and Japanese audio soundtrack languages*.
5. Press the ENTER button.
6. Using the (< , > , ^ , v) Navigation buttons and press ENTER to exit and save setting.

General	Audio	Dolby	Preference
-- Preference Page --			
Audio	ENG	English	
Subtitle	ENG	French	
Disc Menu	ENG	Spanish	
Parental		German	
Password		Japanese	
Preferred Audio Language			

* Actual available audio languages depend on the disc used.



Subtitle

1. Press the SETUP button to enter the Setup Menu.
2. Use the (< , >) Navigation buttons to select Preference.
3. Use the (^ , v) Navigation buttons to move the cursor to the Subtitle item.
4. Use the (>) Navigation button followed by the (^ , v) Navigation buttons to select between English, French, Spanish, German, or Japanese subtitles*. or turn subtitles Off.
5. Press the ENTER button.
6. Using the (< , > , ^ , v) Navigation buttons and press ENTER to exit and save setting.

General	Audio	Dolby	Preference
-- Preference Page --			
Audio	ENG		
Subtitle	ENG	English	
Disc Menu	ENG	French	
Parental		Spanish	
Password		German	
		Japanese	
		Off	
Preferred Subtitle Language			

* Actual available subtitle languages depend on the disc used.

General	Audio	Dolby	Preference
-- Preference Page --			
Audio	ENG		
Subtitle	ENG		
Disc Menu	ENG	English	
Parental		French	
Password		Spanish	
		German	
		Japanese	
Preferred Menu Language			

* Actual available menu languages depend on the disc used.

Parental

1. Press the SETUP button to enter the Setup Menu.
2. Use the (< , >) Navigation buttons to select Preference.
3. Use the (^ , v) Navigation buttons to move the cursor to the Parental item.
4. Use the (>) Navigation button followed by the (^ , v) Navigation buttons to select one of the 8 rating levels.
5. Press the ENTER button to confirm your desired level.
6. Using the (< , > , ^ , v) Navigation buttons and press ENTER to exit and save setting.

General	Audio	Dolby	Preference
-- Preference Page --			
Audio	ENG	1 KID SAF	
Subtitle	ENG	2 G	
Disc Menu	ENG	3 PG	
Parental		4 PG 13	
Password		5 PGR	
		6R	
		7 NC17	
		8 ADULT	
Set Parental Control			

Disc Menu

1. Press the SETUP button to enter the Setup Menu.
2. Use the (< , >) Navigation buttons to select Preference.
3. Use the (^ , v) Navigation buttons to move the cursor to the Disc Menu item.
4. Use the (>) Navigation button followed by the (^ , v) Navigation buttons to select between English, French, Spanish, German, and Japanese Menu languages*.
5. Press the ENTER button.
6. Using the (< , > , ^ , v) Navigation buttons and press ENTER to exit and save setting.



Password

Notes:

- The password is factory preset to "1234".
- Press the SETUP button to enter the Setup Menu.
 - Use the (< , >) Navigation buttons to select Preference.
 - Use the (^ , v) Navigation buttons to move the cursor to the Password item.
 - Press the Number button(s) to enter a 4-Digit factory preset password "1234" into the player.
 - Press the ENTER button.
 - Using the (< , > , ^ , v) Navigation buttons and press ENTER to exit and save setting.

General	Audio	Dolby	Preference
-- Preference Page --			
Audio	ENG		
Subtitle	ENG		
Disc Menu	ENG		
Parental			
Password		Change	
Change Password			

Notes:

- To change password, enter preset password "1234" and press ENTER button. Use navigation buttons to go back to password box and enter your own 4-digit password and press ENTER button.
- Default function is disabled on the unit. If you forget your own password, enter super password "1369" to unlock control. The password "1369" becomes your password, unless you change it.

Other Functions


This chapter describes how to use some functions contained in system.

ZOOM

- Press the ZOOM button to change the size of the screen between 2x, 3x, 4x, and off zoom.


Common Procedure

- Press the DISPLAY button repeatedly during play to display elapsed time of title, chapter, track, etc.

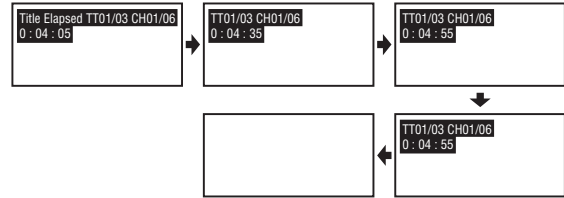

KEY LOCK

This feature allows you to lock all the controls on the front panel of the main unit to prevent others, especially children, from operating the unit without the remote handset. To activate the Key Lock feature press the KEY LOCK button on the remote control. The "KEY LOCK ON" statement will appear on the TV screen and all front panel controls, including the Power button will be locked. To unlock the front panel controls press the KEY LOCK button on the remote control again. The "KEY LOCK OFF" statement will appear on the TV screen to indicate the unlock action.

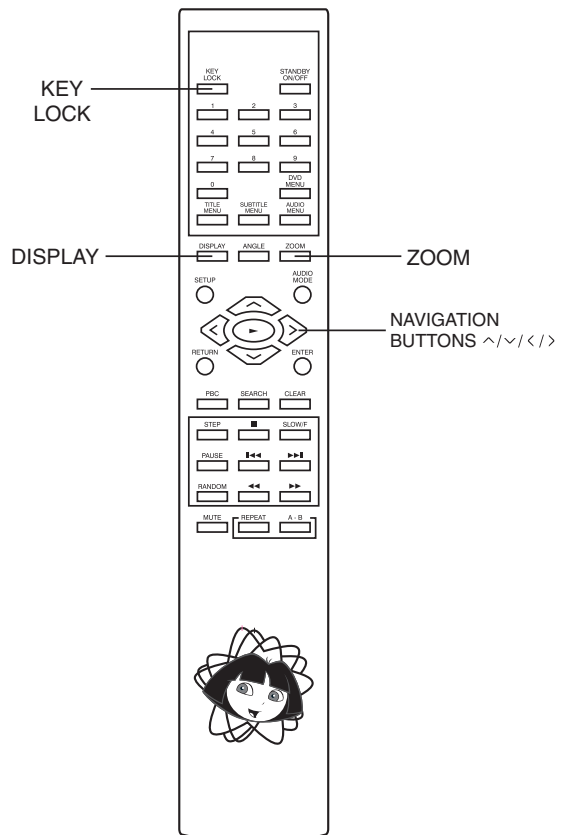



Additional Information

Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest service center by calling 1-800-898-9020.

No power.

- Is the power cord firmly plugged into the power outlet?
- One of the safety mechanisms may be operating. In this event, unplug the player from the power outlet briefly and then plug it in again.

No picture.

- Check that the system is connected securely.
- The video connecting cord is damaged. Replace it with a new one.
- Make sure you connect the system to the video input connector on the TV. (see page 14)
- Make sure you turn on the TV.
- Make sure you select the video input on the TV so that you can view the pictures from this system.

Noise (interference) appears in the picture.

- Clean the disc.
- If video from this system has to go through your VCR to get to your TV, the copy-protection applied to some DVD programs could affect picture quality.

The aspect ratio of the screen cannot be changed even though you set "TV SYSTEM" in the SETUP menu when you play a wide picture.

- The aspect rate is fixed on your DVD disc.
- Depending on the TV, you may not be able to change the aspect ratio.

There is no sound or only a very low-level sound is heard.

- The audio connecting cord is damaged. Replace it with a new one.
- The system is in pause mode or in slow-motion play mode, or fast forward or fast reverse is performed
- Press PLAY (▶) to return to normal play mode.

Severe hum or noise is heard.

- Move your TV away from the audio components.
- The plugs and jacks are dirty. Wipe them with a cloth slightly moistened with alcohol.
- Clean the disc.

The remote does not function.

- Remove any obstacles between the remote control and the system.
- Move the remote control closer to the system.
- Point the remote control at the remote sensor on the front panel.
- Replace all the batteries in the remote control with new ones if they are weak.
- Check that the batteries are loaded correctly.

The disc does not play.

- Insert a disc.
- Insert the disc correctly with the playback side facing down on the disc tray.
- Clean the disc. (see page 12)
- The system cannot play CD-ROMs, etc. (see page 11) Insert a DVD or a CD disc.
- Check the region code of the DVD disc. (see page 11)
- Moisture has condensed inside the system. Remove the disc and leave the system turned on for about an hour. (see page 9)

The system starts playing the DVD automatically.

- The DVD features the auto playback function.

Playback stops automatically.

- Depending on the disc, the auto pause signal is recorded. While playing such a disc, the system stops playback at the signal.

Stopping playback, Search, Slow-motion play, repeat play or Program play, etc., cannot be done.

- Depending on the disc, some of the above operations may not be available.

Messages do not appear on the TV screen in the language you want.

- Select the language for OSD in SETUP menu. (see page 24) The disc must have the language you selected, if not, other language will be selected.

The language for the sound cannot be changed when you play a DVD.

- Multilingual sound is not recorded on the DVD.
- Changing the language for the sound is prohibited on the DVD.



Troubleshooting (Continued)

The language for the subtitles cannot be changed when you play a DVD.

- Multilingual subtitles are not recorded on the DVD.
- Changing the language for the subtitles is prohibited on the DVD.

The subtitles cannot be turned off when you play a DVD.

- Depending on the DVD, you may not be able to turn the subtitles off.

The angles cannot be changed when you play a DVD.

- Multi-angles are not recorded on some DVDs.
- Change the angles when the angle marks appears on the TV screen. (see page 20)
- Changing the angles is prohibited on some DVDs.

The system does not operate properly.

- Static electricity, etc., may affect the system's operation. Disconnect the AC power cord once, then connect it again.

 Emerson SERVICE	TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST SERVICE CENTER PERMITTED TO PERFORM WARRANTY...
CALL TOLL FREE 1-800-695-0098	
FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE PLEASE CALL: 1-800-898-9020	
FOR CUSTOMER SERVICE, PLEASE WRITE TO: Emerson Radio Corp. Consumer Affairs Dept. 5101 Statesman Drive, Irving, TX 75063	

The serial number of your system can be found on a label on the back panel of the main unit, and also on the display carton. Please record the serial number in the space below. You may need to refer to this number if your system ever needs to be serviced.

Model No.: DTE329

Serial No.: _____



EMERSON RADIO CORP. LIMITED WARRANTY

What does this warranty cover? Any manufacturing defects in original material, including original parts and workmanship, under normal use and conditions.

For how long? For a period of ninety (90) days for labor and for a period of one (1) year for parts, from the date of original purchase in the U.S.

What will we do? If you need service under this warranty, and you provide us with the dated proof of purchase, we will provide repair service at no charge for labor and parts, for the time periods set forth above, at an authorized Depot Repair Facility, or replace the product in our discretion.

How do you make your warranty claim? If it becomes necessary to repair your unit, you can obtain the name and mailing location of a Depot Repair Facility by dialing 1-800-695-0098. You should pack your unit in a well-padded heavy corrugated box, enclose your check or money order payable to the Depot Repair Facility in the amount of \$9.00 to cover the return shipping and handling costs, and enclose a copy of your proof of purchase (warranty service will not be provided without a dated proof of purchase). Finally, you should ship the unit prepaid via UPS or parcel post (insured).

What does your warranty not cover? Your warranty does not cover the following:

- Damage from negligence, misuse, abuse, accident, or failure to follow operating instructions.
- Use of product in a commercial application or rentals.
- Changes or repairs by anyone other than an authorized Depot Repair Facility.
- Damage because your unit is improperly connected to the equipment of other manufacturers.
- Unit on which the serial number has been defaced, modified or removed.
- Damage to equipment not properly connected to the product.
- Cost incurred in shipping your unit to and from an authorized Depot Repair Facility.
- Ordinary adjustments which you can perform as outlined in the owner's manual.
- Signal reception problems caused by external antenna or cable systems.
- Products purchased, used, serviced, or damaged outside of the United States.
- Damage to compact discs or cassettes.

What other limitations apply to your warranty?

THIS WARRANTY IS NOT-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THERE AFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

How does state law apply to your warranty?

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

DVD399



EMERSON
PART NO.: 21-2076B
608-03

Printed in China