

Thank you for purchasing this SpongeBob SquarePants calculator. Emerson Radio Corporation is producing this calculator under license from Nickelodeon. In addition to normal functions (+, -, x and ÷), this calculator has percent (%) and square root ($\sqrt{\quad}$) functions.

If you have any problems with the setup or operation of this calculator, please call the Emerson Radio Corporation service hotline, toll free at 1-800-898-9020.

OPERATION CHART

To operate the keypad of the calculator, press the center of the button keys.

Sample Problem	Press These Keys	Answer/Display
Turn the Unit on	ON/C	0.
Addition $38 + 60 = 98$ $48 + 60 = 108$	3 8 + 6 0 = 4 8 + 6 0 =	98. 108.
Subtraction $38 - 10 = 28$ $8 - 10 = -2$	3 8 - 1 0 = 8 - 1 0 =	28. -2.
Multiplication $72 \times 33 = 2,376$ $24 \times 18 = 432$	7 2 x 3 3 = 2 4 x 1 8 =	2376. 432.
Division $58 \div 2 = 29$ $144 \div 8 = 18$	$\text{5 8 } \div \text{ 2 =}$ $\text{1 4 4 } \div \text{ 8 =}$	29. 18.
Percent $144 + (144 \times 10\%) = 158.4$ $299 - (299 \times 30\%) = 209.3$ $88 \times 6\% = 5.28$ $96 - 25\% = 72$	1 4 4 + 1 0 \% 2 9 9 - 3 0 \% 8 8 x 6 \% 9 6 - 2 5 \%	158.4 209.3 5.28 72.
Raising a Number to a Power $4^3 = 64$	4 x = =	64.
Finding Square Root $\sqrt{81} = 9$ $\sqrt{30.5} = 5$	$\text{8 1 } \sqrt{\quad}$ $\text{3 0 . 5 } \sqrt{\quad}$	9. 5.
Chain Calculations $(27 - 6) \times 3 \div 7 = 9$	$\text{2 7 - 6 x 3 } \div \text{ 7 =}$	9.
Automatic Constant/Multiplication $12 \times 1 = 12$ $12 \times 2 = 24$ $12 \times 3 = 36$	1 2 x 1 = 2 = 3 =	12. 24. 36.
Automatic Constant/Division $144 \div 12 = 12$ $132 \div 12 = 11$ $120 \div 12 = 10$	$\text{1 4 4 } \div \text{ 1 2 =}$ $\text{1 3 2 } \div \text{ 1 2 =}$ $\text{1 2 0 } \div \text{ 1 2 =}$	12. 11. 10.
Overload (Error) $10,000 \times 10,000 = 100,000,000$	$\text{1 0 0 0 0 x 1 0 0 0 0 =}$	1.0000000E
Memory Calculations $(72 \times 3) - (48 \div 4) = 204$	7 2 x 3 M+ $\text{4 8 } \div \text{ 4 M-}$	M 216. M 12.
Recall Memory	MRC	M 204.
Clear Last Entry	ON/C	M 0.
Clear Memory	MRC MRC	204.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.
This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.


Emerson Radio Corp.
1901 Diplomat Drive
Farmers Branch, TX 75234

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$5.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

LIMITED WARRANTY

REPLACING THE BATTERY

If the calculator no longer operates properly or does not operate at all, use a small (eyeglass-type) Phillips screwdriver to remove the battery door screw and slide the battery door off. Replace the weak/dead battery with a new one (type LR1130 or equivalent). Place the new battery into the battery compartment as shown, making sure to put the positive (+) side facing up. Slide the battery door back on and replace the battery door screw.

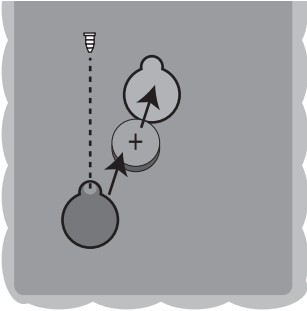

CALCULATOR

OWNER'S MANUAL

SB60

IMPORTANT: Dispose of the old battery properly. Do not leave it lying around where a young child or a pet could play with it or swallow it.