 



8 Listening to The Radio

Tuning to The FM Radio

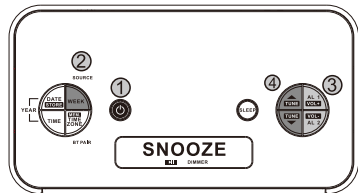


- Press ① to turn the unit 'On' and press ② SOURCE button to select Radio Mode ("MHz" On).
 - Set the volume by pressing ③.
 - Tune to your desired station by pressing ④ slightly to increase or decrease the receiving frequency by one step, or holding ④ for one second and release to engage Auto Station Seeking until a station with acceptable reception is found.
- NOTE:** For better reception, fully extend and adjust the position and direction of the AC adapter cord that acts as an FM antenna.

 Storing Station to the Memory

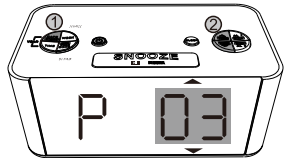


- Tune to the desired station as described above.
- Press and hold ① until 'P XX' blinks, indicating the memory location to store the currently listening station, then release the button.
- While 'P XX' is blinking, press ④ can change the memory location (P01~P20).
- Press ① again, the currently listening station is stored.

 Recalling Station from the Memory

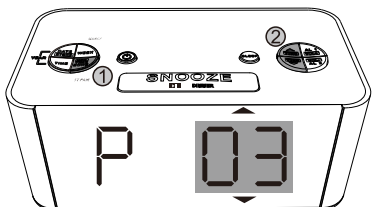

- After the radio is 'On', press ①, 'P XX' shows on the display. The station according to this memory location will then be automatically tuned in.
- To change memory location (P01~P20), press ④ to step Up or press ② to step Up/Down to locate and tune in the station stored in memory.

 9 Enjoying Audio Sources with AUX IN Jack

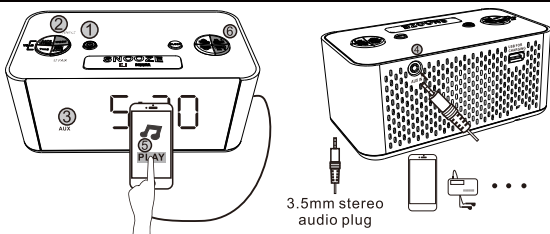


- Press ① to turn the unit 'On', and then press ② to select AUX Mode (③AUX 'On').
- Connect the audio source from its earphone jack to ④ with a 3.5mm Male to Male stereo AUX cable provided.
- Start ⑤ to play the audio source.
- The AUX volume can be adjusted through your audio players or ⑥ VOL +/-.

Remark:

Even the **AUX IN** jack is plugged in, the alarm sound only be Buzzer or Radio according to your Alarm Mode setting while the alarm function is activated.

10 Setting The Alarm

 Wake To Radio and Radio Alarm Volume Setting

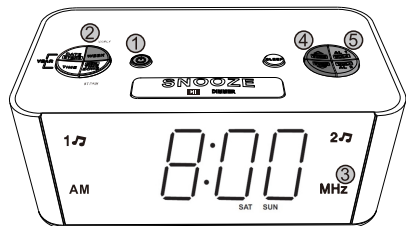


Radio gradually

1 hour

- Press ① to turn the unit 'On', and then press ② SOURCE to select Radio Mode (③ MHz 'On').
- Press ④ or recall station from the Memory to select the station that you wish to hear when the alarm comes 'On'.
- Press ⑤ to set the maximum radio volume at which the alarm will reach gradually at wake up time.
- To have a softer radio volume (U07) at wake up time, select radio volume between U00 and U07.
- Press ① again to turn the radio 'Off'.
- Reconfirm the wake up time and alarm mode settings for the alarm you are using by pressing and holding ② (either AL 1 or AL 2) when the radio is 'Off'.
- Press ⑤ slightly, and repeat doing so if necessary, until 1/7 or 2/7 indicator is lit on the display.
- If you do not want the alarm to turn the radio on the following day, press until the ALARM indicator on the display is 'Off'.

Wake To Buzzer

 - Alarm 1 → Single beep" sound
- Alarm 2 → Double beep" sound

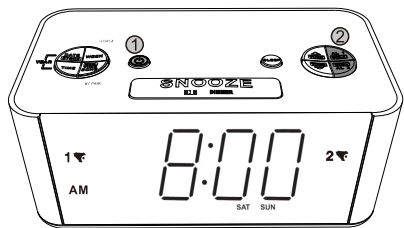

Buzzer gradually

 
1 hour

- Reconfirm the wake up time and alarm mode settings for the alarm you are using by pressing and holding ② (either AL 1 or AL 2) when the unit is 'Off'.
- Press ② slightly, and repeat doing so if necessary, until 1/7 or 2/7 indicator is lit on the display.
- At the selected wake up time the buzzer will sound gradually and continue for 1 hour, press ① to stop the buzzer sooner.
- If you do not want the alarm to buzzer on the following day, press ② until the ALARM indicator on the display is 'Off'.

Radio And Buzzer Operation

You may also set one alarm for wake to **RADIO** and the other for wake to **BUZZER**. Just press the **AL 1** and **AL 2** buttons to the desired status as shown on the ALARM indicators.

Snooze Alarm

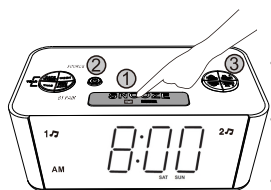


9 minutes

- When alarm sounds, press ① to snooze the alarm that will repeat nine minutes later.
- The Snooze operation may be repeated several times if desired but after one hour the alarm will not come on again.
- Alarm indicator will flash during Snooze operation.
- To cancel Snooze Alarm, press either ② or ③.

Sure Alarm


- Sure Alarm is a battery back-up buzzer alarm that can wake you up even if the power is interrupted at the selected wake up time.
- This Sure Alarm will sound for 30 seconds and then shut off automatically.
- To stop the Sure Alarm sooner, press either Snooze, Power, AL 1 or AL 2 button.

 11 Pairing Bluetooth Speaker

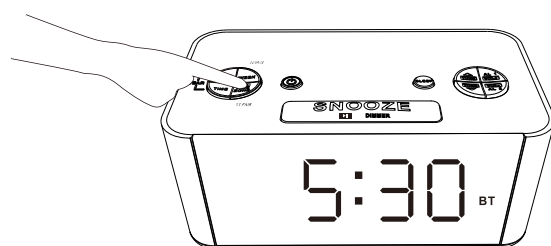

- Press the POWER button to turn the unit ON
- Press the SOURCE button to select Bluetooth (bt) mode ("BT" flashes for pairing), and then press BT PAIR (TIME ZONE) button.
- Enable your Bluetooth device and select ER100 from its Available/ Paired device list.
- After pairing successfully, the unit will prompt and "BT" will become solid
- Automatic connection with your Bluetooth devices is possible if they have been paired successfully with this unit before.
- After paired, you can play your music through this Bluetooth Speaker.
- Press PLAY/PAUSE button to pause or resume the music play.

 
12 Sleep to Music Timer

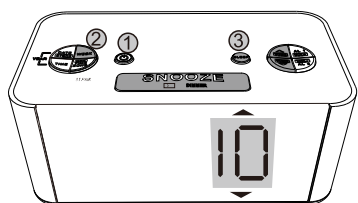

10-90 min, shut off automatically

- Press ① to turn on the unit, and then press ② to select your desired audio source to play.
- Press ③ to change the display to the desired sleep time (10-90 minutes or OFF). Default sleep time is 90 minutes.
- To cancel the sleep timer, press ③ until it displays 'OFF'.

 
13 3-Level Dimmer Control

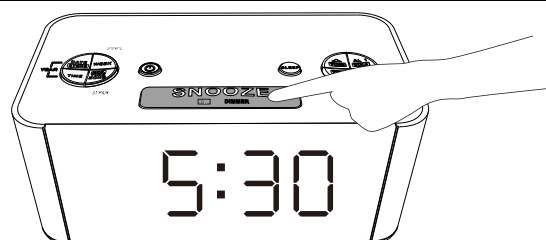

The brightness of the clock display can be set at High/Medium/Low level in Off/Standby, Radio and AUX modes just with a press of **DIMMER** button.

14

 USB Charging

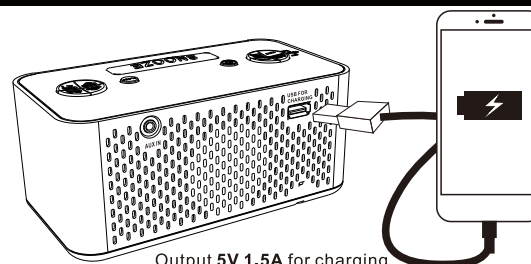


Output 5V 1.5A for charging mobile phone or portable digital audio player.

Note: Charging current drawn from the unit may vary due to different USB charging cable condition or battery charging characteristics.

15 Changing The Lithium Battery



 - When the ① **LOW BATT** indicator 'Flashes', you should change the battery that is used for backup clock and alarm setting as well as for the Sure Alarm that can wake you up even if the power is 'Off' at the selected wake up time.
- It will be 'Off' when you have changed the battery in correct instructions.

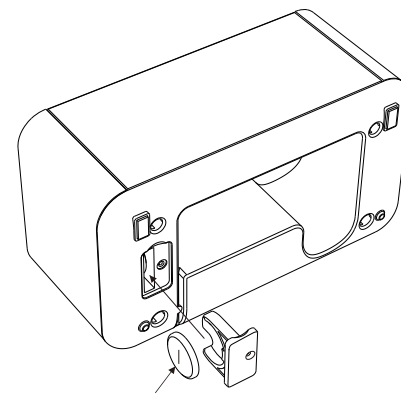

2-5 years battery life

CR2032(3V)

POSITIVE(+) NEGATIVE(-)

WARNING

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

16

CARE AND MAINTENANCE

Care Of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

Lithium Battery Precautions

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with, or swallow it. If the battery is swallowed, contact a physician immediately.
- Battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire.

17

LIMITED WARRANTY

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of ninety (90) days from date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:

* Repair service for ninety (90) days from date of original purchase at no charge for labor and parts.

To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.

In the event the product must be returned to Emerson:

* Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.

* Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.

* Enclose a note with your name, address, phone number, Return Authorization number and brief reason for returning the unit.

* Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).

* Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).

NOTE: This warranty does not cover:

(a) Damage to equipment not properly connected to the product.
(b) Cost incurred in the shipping of the product to and from Emerson's Return Facility.

(c) Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.

(d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.

(e) Signal reception problems caused by external antenna or cable systems.

(f) Products not purchased in the United States.

(g) Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE. THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

10-90-1402A

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference.

Model Number: ER100201

Serial Number: _____

