



(<https://camo.githubusercontent.com/451eee740c221c691ef2c375bf049a2f0fd0593>

[/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393930332f35346535623032](https://camo.githubusercontent.com/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393930332f35346535623032)

Introduction

- Energy Sistem™ thanks you for buying your new Energy Pro IO Windows. We hope you enjoy it!
- This device belongs to the Energy Tablet Pro family: a new generation of communication devices based on Windows™ operating system, with which you can access the Internet, work with Office, use Skype, check your e-mails and play any multimedia content (high definition 1080p video, music, photos, eBooks, etc.). In addition, there are thousands of applications and games available so you can get the best of your device. The device has a 10.1" IPS screen (1280x800 pixels) capacitive multi-touch display, Quad Core Intel Atom up to 1.83GHz processor, Bluetooth 4.0, WiFi, rear and front cameras and expandable memory via microSD.
- We recommend you to read this manual to enjoy your device in a safe way and with maximum performance.

Care and maintenance

- Do not expose your Energy Tablet to impacts, dust, direct sunlight, humidity or high temperatures.
- Do not use abrasive or corrosive cleaners.

- Keep the device clean and dust free using a soft, dry cloth.
- Charge the battery when the display shows the low battery icon. Only charge with the adapter included in your tablet.
- Do not disassemble the device. Any repairs must be carried out by Energy Sistem Soyntec S.A. qualified personnel only.

Key Features

- 10.1" IPS screen (1280x800 pixels).
- Capacitive multitouch screen.
- Quad Core Intel Atom up to 1.83GHz processor.
- 2GB RAM.
- 32GB eMMC internal memory expandable up to 64GB via microSD.
- Wi-Fi connection (802.11 b/g/n).
- Bluetooth 4.0.
- Built-in front camera 2 Mpx.
- Built-in rear camera 5 Mpx.
- microHDMI out.
- USB-Host.
- USB-OTG .
- Built-in speakers 2x1w.
- Built-in omnidirectional microphone.
- Motion sensor (accelerometer).
- Battery capacity: 3.7v/7.000mAh.
- Autonomy: Until 9 hours surfing in internet under Wi-Fi connection.
- AC/DC adapter 100-240v 50-60Hz DC 9V/2A.

Product Content

- Energy Tablet Pro 10 Windows.
- Quick guide.
- USB-HOST cable to connect external USB.
- AC/DC (Europlug) 100-240V AC 50-60Hz power adapter.

General Overview



(<https://camo.githubusercontent.com/cf2d0e512dd073e1ead6be36a4fbff8855ec460d/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393930332f353465343734376>)

1. Rear camera
2. Front camera
3. Speakers
4. Power button
5. Volume control +
6. Volume control -
7. Touch panel
8. microSD slot
9. Headphone output
10. microUSB connector
11. microHDMI out
12. Keyboard connector
13. Windows button

Battery Management/First use

Your Energy Tablet has a rechargeable lithium ion battery. Initially the battery is charged at factory, but it is highly

recommended to perform a full charge before the first use.

Recharge the battery connecting the device to the AC/DC 5V included with the product. The charging time ranges from 4-6 hours, depending on whether the device is off or running. In order to keep the battery in good condition, we recommend that you turn it off while charging and not leave it charging more than 8 hours.

You have several ways to improve the performance and optimize the battery use of your Energy Tablet:

Set your tablet to automatically turn off the display after a few seconds of inactivity and select an ideal display brightness to enlarge the battery life.

Switching On and Off

To switch on your Energy Tablet, press the power button (4) located on the upper left of your device for a few seconds. When the operating system has loaded, unlock the device to start using it.

For the first use, follow the steps that the device shows you to create an user account. If you don't have a Microsoft Windows™ user account you can create a new one.

In order to turn off the device, hold the power button (4) until you see the power off menu and then select OK. Briefly pressing the power button (4) locks/unlocks the device, turning the screen on/off and activating the power saving mode.

Main Gestures

Main gestures

- Tap

Touch the screen briefly



(<https://camo.githubusercontent.com/8ala605385ab4126116678757bd133fca34ea6c9>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f353335363962f

- Double tap

Touch the screen twice quickly



(<https://camo.githubusercontent.com/db80dcae04fdc6774428bbf32f6e0e7e654a6f07>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f353335363962f

- Drag

Move your finger over the screen without losing contact



(<https://camo.githubusercontent.com>

/8b1d8c3b7c185b5d06538ec662397fd55d11853c

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f35333535363963f

- Slide

Slide your finger quickly over the screen



(<https://camo.githubusercontent.com>/19a82089a6bd24bb4557d05e1b706dc668d6865b

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f353335353661616f

- Press

Touch the screen for an extended period of time




(<https://camo.githubusercontent.com>/a773834656455845bf8b52066e8397a3957324ba

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f353335353661616f

- Zoom

Zoom in and out the screen image

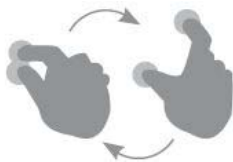


(<https://camo.githubusercontent.com>

/123d08d94943648cf48946d49af9f88bl2dl7del

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393533302f353335353661666

Main Screen

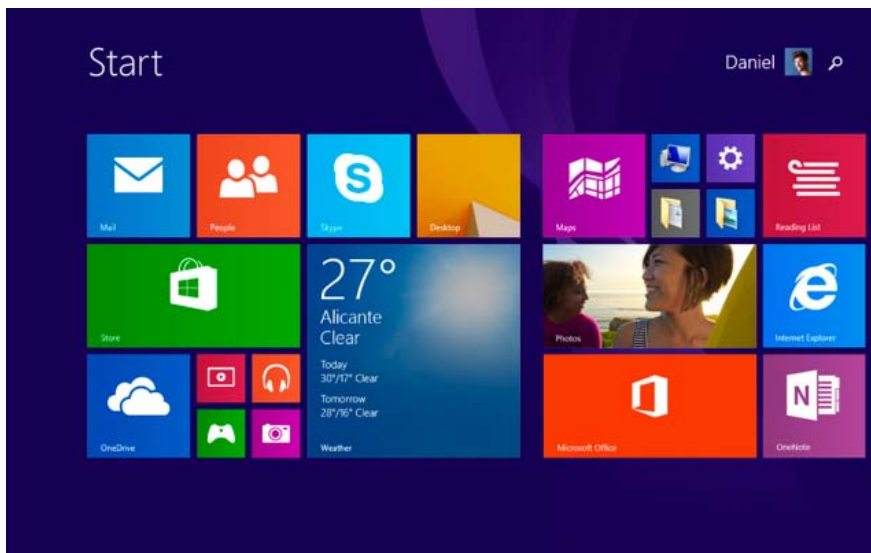

(<https://camo.githubusercontent.com/28e51b850e79a5bc85a080108591edcf8b11ecfd>

[/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393930332f3534653437363333](https://camo.githubusercontent.com/28e51b850e79a5bc85a080108591edcf8b11ecfd/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393930332f3534653437363333)

1. **User:** shows the opened user account
2. **Search:** direct access to tablet, windows store and applications search engine.
3. **Desktop:** classic windows desktop mode
4. **Email:** e-mail client
5. **System:** Access to storage units from device
6. **Settings:** configure your Windows™ system
7. **Store:** Windows™ app store
8. **Office:** Microsoft Word, Excel, Outlook...
9. **OneDrive:** Cloud storage
10. **Camera:** Access to the integrated camera
11. **Gallery:** Pictures: images gallery
12. **Internet explorer:** web browser
13. **People:** contact list
14. **Skype:** videocalls, messages...

Wireless conection

Bluetooth Setup

Your Energy Tablet has Bluetooth for connecting your device with headphones, computers, tablets, smartphones, etc.

To pair the Bluetooth device follow the steps below.

1. Enables the device in pairing mode.
2. Open access Settings, click Change settings PC> PC> Bluetooth devices.
3. You must make sure that Bluetooth is turned on, and began to appear available Bluetooth devices within range.
4. Follow the onscreen instructions to complete the device pairing.

Configuring Wi-Fi

Your Energy Tablet has WiFi. To connect your device to a wireless network the following steps.

1. Go into settings and click the wireless network icon.
2. Click the wireless network you want to connect and click connect.
3. If network has security, password will be required. Type the security of the network and click Next.
4. Now you must indicate whether you want to share your files and devices with other computers on the network and indicate what type of network you are connecting

Note: Your Energy Tablet is compatible with security standards WEP, WPA, WPA2, TKIP and AES. Once you have completed the authentication process successfully, your Energy Tablet save the data

Access to the Wi-Fi network and you will be ready for you to use the Internet. The device will remember the network and

automatically connect to it when it becomes available.

Pre-loaded applications

Internet Explorer

Your new Energy Tablet has a powerful Internet Explorer II Web browser among the list of applications installed by default, with which you will be able to surf the Internet quickly and easily. Once the device is connected to a Wi-Fi or 3G network, press the browser icon located on the desktop or in the application menu to start the program. The system will load and display the home page set by default.

Mail

Your Energy Tablet has a management application installed by default email which allows you to work with your email account conveniently and effectively. In addition, with Microsoft Office 365 license, you also have Microsoft Outlook to feel an extended experience in working with your email.

For the configuration parameters of your query to your account email provider.

Microsoft Office 365

Your Energy Tablet includes office set Microsoft Office 365 which includes, among others, Microsoft Word, Microsoft Excel and Microsoft Outlook applications. Extensive experience using your Energy Tablet thanks to the one-year license that we include with it.

OneDrive

OneDrive allows us to share documents in the cloud and download them easily from any Internet-connected device. You can access to all your documents wherever you are, and your Energy Tablet have 1Tb of free storage available.

Skype

Skype lets you keep in touch with your home, work or wherever you are with everyone. In addition, this platform can be installed on your tablet, PC, smartphone, etc. With your Energy Tablet you can enjoy 60 minutes of free calls per month for one year.

Playing Audio and Video

You can use Windows Media Player to play music and videos. Supports the most common audio and video formats and allows multiple adjustments in the same formats.

Gallery: Pictures

You can use this application to view the pictures you have on your Energy Tablet and OneDrive as well. Also, if you

have pictures on your phone, you can import them using this application.

To display your pictures, open the pictures application is in the home screen. All pictures in your Pictures folder appear in this application.

Camera

Your Energy Tablet Camera has a preinstalled application and other applications can also be used Camera as well downloading them from the Windows Store.

To take a picture or record a video, you need to open Camera and press the Photo button or Video button on the screen. You can modify the settings of the camera to improve your photos and videos.

Updating

Your Energy Tablet offers Windows operating system # trade # 8.1 installed, you can reinstall or update if necessary. By default, automatic updates are enabled, so your Energy Tablet will automatically alert you when an update is available to install.

You can also reinstall the factory settings of the operating system. Follow these steps for installation:

1. Make sure that your Energy Tablet battery is fully charged. Otherwise your Energy Tablet connected to external power using the AC adapter / DC provided and wait until the battery is fully charged.
2. Slide the bar on the right side in the main menu, and click on the search icon.
3. Make the search for "Recovery" and enter it.
4. Choose the option you want and follow the instructions to restore your system

Troubleshooting

1. Why can't I play some MP3 files?
The MP3 file must follow the "layer 3" standard for MPEG1, MPEG2 and MPEG 2.5 formats. Otherwise, it must be converted using a specific software.
2. My Energy Tablet does not turn on, what can I do?
Make sure that the battery is charged enough to power the device. If after leaving the device charging for at least 30 minutes the problem continues, there may be a problem with the installed operating system. Please, refer to the "Updating" section of this manual.
3. Why can't I play some WMA files?
Make sure you are not trying to play WMA file with DRM.
4. Why can't I see my video, image or text files when using the music player?
Generally, applications only display the files supported by the program. Therefore, while you browse the folders using a specific application, you can only see the files associated to that program (songs in the music player, videos in the movie player, etc). In order to see all the files stored in the internal memory, start the FileXplorer application from the application menu.

5. Which video formats are compatible with my Energy Tablet?

Your Energy Tablet can play multiple video formats without recoding.

6. Why can't I display my .jpg images?

Many digital cameras and image editing software add hidden data to .jpg files. This can prevent your Energy Tablet from loading the images. Try to delete them and save the image with another name.

7. Sometimes the screen turns black and the device does not respond.

It is always better to reboot the device through one of the options available within the system, but if that is not possible, remove the battery, put it back again and press the power button.

8. The built-in memory of the Energy Tablet is lower than the specified in the specifications. Why?

The Windows™ operating system and the preinstalled applications need memory to work. Therefore, the available memory for additional data is less than the specified.

9. I updated the firmware but I no longer have any multimedia files nor wallpapers. How can I retrieve the contents that came preinstalled?

Before any system update, we recommend making a backup of everything you want to keep. In www.energysistem.com (<http://www.energysistem.com>), you will find not only all the content that came preinstalled in your Energy Tablet, but many more multimedia files and additional wallpapers.

10. What must I do to install an application?

First, make sure that the file has the Android™ application extension (.APK). Android™ will ask you to activate the application installation from "Unknown sources", this option is disabled for safety. To authorize the installation of applications, you only have to follow the instructions on the screen the first time you try to install an application: Settings / Security / Unknown sources (activate).

11. How long does the battery last?

It depends largely on the use, such as the screen brightness, use of headphones or speaker, if the Wi-Fi connection is enabled or disabled and the power consumption required by the apps, games, etc.

Warranty

Energy Sistem Soyntec SA is liable for any lack of conformity which exists at the time the goods were purchased during a period of 36 months. Batteries are excluded from the 36-month warranty, having a warranty period of 12 months.

This warranty covers any defects in workmanship or materials. This warranty does not cover any failure of the product due to accidents, misuse or alteration made by an unauthorized person.

The special 36-months warranty is valid for the European Union. For other countries, please refer to your specific legislation or your local distributor.

Warranty Procedure

Visit the Support section at <http://support.energysistem.com> (<http://support.energysistem.com>) and select your product to view the FAQ (Frequently Asked Questions), user manuals, drivers and updates available, as the possibility to submit a query to the Technical Service or consult the warranty.

1. You can check the availability of the user manual in your language at <http://www.energysistem.com/en/guide/39903> (<http://www.energysistem.com/en/guide/39903>)

2. Alternatively, you may prefer to contact the distributor from which you purchased the product, presenting the purchase receipt or invoice.

Specifications are subject to change without notice.

Trademarks. All company, brand and product names are trademarks or registered trademarks of their respective companies.

© 2014 by Energy Sistem Soyntec S.A. All rights reserved.

Declaration of Conformity

Manufacturer Name: Energy Sistem Soyntec S.A. // **Date:** 09-10-2014 //

Address: Pol. Ind. Finestrat C/. Calpe, 1 - 03509 Finestrat Alicante (Spain).

Tel: 902 388 388 // **Fax:** 902 119 034 // **NIF:** A53107488

We declare under our own exclusive responsibility that the product:

Energy Sistem™ Tablet Pro 10 Windows

Manufacturing Country: China

Is in compliance with the essential norms and standards of the Directive 1999/5/EC of the European Parliament and of the Council of March 09th 1999.

Note: The present device could contain connections to other sites or websites operated by third parties not related to Energy Sistem Soyntec S.A. These connections are provided for your information or convenience; Energy Sistem Soyntec S.A is not responsible for their availability, content, update, adequacy or accuracy.

These external connections might contain or link references to trademarks, patents, registered information, technologies, products, processes or rights property of other companies or individuals. All the rights reserved are property of their respective owners, and you are not granted with any license or right related to those brand names, patents, industrial secrets, technologies, products, processes or other rights property of other companies or individuals.