INSTRUCTION MANUAL

USE UNDER SUPERVISION OF AN ADULT

PLEASE READ CAREFULLY BEFORE STARTING TO OPERATE

- •FULLY DIRECTIONAL
- **OWHEEL ALIGNMENT**
- WITH WORKING HEADLIGHTS, TAILLIGHTS AND LIGHTS ON THE ROLL BAR
- •FRONT AND REAR SUSPENSION WITH COIL SPRING SHOCK UNITS
- **ODIFFERENTIAL GEAR BOX**

1:10 SCALE

CAUTION: ELECTRIC TOY
Not Recommended for children

under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

CHOKING HAZARD--Small parts Not for Children under 3 years



BATTERIES REQUIREMENTS:

- CAR: 9.6V RECHARGEABLE BATTERY x 1Pc.(Included)
- TRANSMITTER: 1 x 9V BATTERY (included)
- CHARGER x 1 (Included)

ENERTEC

 
Enertec Enterprises Ltd

(Packing has to be kept since it contains important information.)

9.6V POWER SET

POWER SET INCLUDES: • 1 x 9.6V RECHARGEABLE BATTERY PACK • 1 x CHARGER


CAUTION: THIS IS AN ELECTRICAL SYSTEM, READ INSTRUCTIONS CAREFULLY BEFORE USE. ADULT SUPERVISION RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE.




- CHARGE THE RECHARGEABLE BATTERY PACK WITH THE CHARGER.
- APPROX. 4 HOURS CHARGE TIME.
- DO NOT CHARGE FOR MORE THAN THE RECOMMENDED TIME.

BATTERYINSTALLATION


FOR VEHICLE

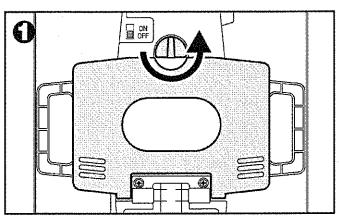

- TURN THE KNOB TO UNLOCK POSITION.
- REMOVE THE BATTERY COVER FROM THE BOTTOM OF THE VEHICLE.

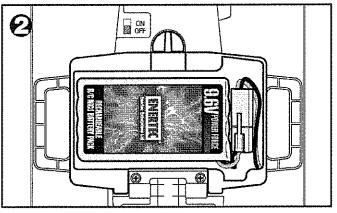


• CONNECT THE PLUG FROM THE BATTERY PACK TO THE BATTERY COMPARTMENT AS SHOWN.

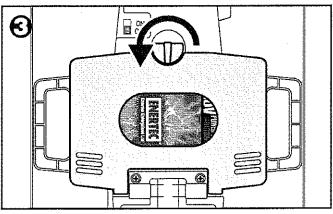

- PUT THE BATTERY COVER BACK IN PLACE.
- TURN THE KNOB TO LOCK POSITION.


FOR TRANSMITTER

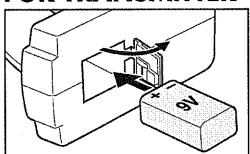


- SLIDE OPEN THE BATTERY COVER ON THE BOTTOM AND FLIP OUT.
- INSTALL 1 X "9V" BATTERY.
- MAKE SURE THE POLARITY (+)(-) MATCH THE MARKING ON THE BATTERY COMPARTMENT.
- SLIDE THE BATTERY COVER BACK IN PLACE.

HOW TO SWITCH ON



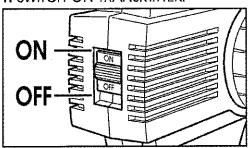

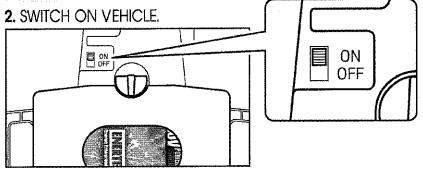

HOW TO OPERATE

1. FORWARD AND REVERSE CONTROL TRIGGER

PULL THE TRIGGER BACKWARD WITH YOUR FINGER TO CONTROL THE VEHICLE TO FORWARD ACTION AND PUSH THE TRIGGER TO THE FRONT FOR REVERSE ACTION. TRIGGER WILL RETURN TO NEUTRAL POSITION WHEN RELEASED.


2. STEERING CONTROL

TO STEER THE VEHICLE LEFT AND RIGHT, TURN THE STEERING WHEEL ON THE TRANSMITTER EITHER CLOCKWISE OR ANTI-CLOCKWISE DIRECTION.


3. ANTENNA

EXTEND TRANSMITTER ANTENNA TO FULL LENGTH WHEN IN USE.



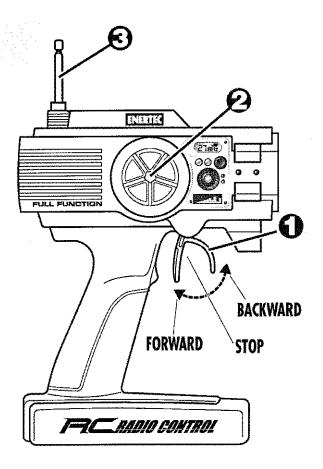


WHEEL ALIGNMENT

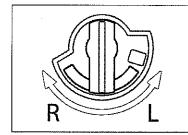

ADJUST THE DIRECTION TRIMMER IF THE CAR DOES NOT RUN STRAIGHT, TURN IT TO LEFT OR RIGHT UNTIL YOUR DESIRED ALIGNMENT IS REACHED.


IMPORTANT NOTICE:

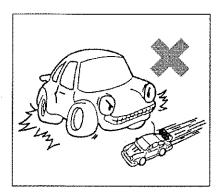

- 1. Don't operate your car in dangerous places.
- 2. Don't put your car and transmitter near any source of HEAT.
- 3. Don't run through water, including pools or puddles.
- 4. Avoid all possible collisions. Check the road ahead and watch for obstacles.
- 5. Avoid your car and transmitter antennas touching each other.
- **6.** Never use a Charger when regular alkaline, transister or heavy duty batteries are in the vehicle. A Charger is to be used only for Nickel-Cadmium batteries.
- 7. Don't run your car in the same vicinity as another radio-controlled car.
- 8. Don't leave your car and transmitter outside overnight. Night dampness will cause harm.
- **9.** Don't forget to remove batterles from your car and transmitter if you are not going to operate the car again that day.
- 10. If malfunction occurs, replace batteries.
- 11. Do not try to dismantle the charger and battery pack.
- Do not charge the battery if it is still hot from usage. Wait until they have cool down.
- 13. Only batteries of the same type are to be used at the same time.
- 14. Different types of batteries or old and new batteries are not to be mixed.
- 15. The supply terminals are not to be short circuited.
- **16.** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 17. Do not recharge non-rechargeable batteries.
- 18. Remove exhausted batteries from the toy.
- 19. Rechargeable batteries must be carried out under adult supervision.
- 20. Rechargeable batteries are to be removed from the toy before being charged.
- 21. Batteries are to be inserted with the correct polarity.
- 22. Do not mix old and new batteries.
- 23. Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Nickel-Cadmium) batteries.

Note: The charging devices or transformers used with the toy are to regulary examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this charging device or transformers until the damaged parts has been repaired.


Hereby, Enertec declares that this 1219/12199 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

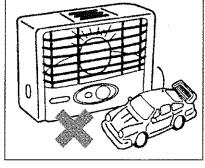



FCC Compliant FCC ID: OGM12199 TX-27 FCC ID: OGM12199 TX-49

 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.