

## INSTRUCTION MANUAL

USE UNDER SUPERVISION OF AN ADULT

# RADIO CONTROL

• PLEASE READ CAREFULLY BEFORE STARTING TO OPERATE

# CROSS COUNTRY UTE<sup>TM</sup>

UTILITY VEHICLE

- FULLY DIRECTIONAL
- WHEEL ALIGNMENT
- FRONT AND REAR SUSPENSION
- WITH WORKING HEADLIGHTS AND TAILLIGHTS



**NO. 1240**  
**CROSS COUNTRY UTE UTILITY VEHICLE**  
(BATTERIES NOT INCLUDED)

BATTERIES REQUIREMENTS:

- CAR: 3 X "AA" BATTERIES (Not included)
- TRANSMITTER: 2 X "AA" BATTERIES (Not included)



**WARNING:**

CHOKING HAZARD - Small parts  
Not for Children under 3 years

**NO. 12401**  
**CROSS COUNTRY UTE UTILITY VEHICLE**  
(BATTERIES INCLUDED)



BATTERIES REQUIREMENTS:

- CAR: 3 X "AA" BATTERIES (Included)
- TRANSMITTER: 2 X "AA" BATTERIES (Included)

**ENERTEC**  
Enertec Enterprises Ltd.

(Packing has to be kept since it contains  
important information.)

## **BATTERY & ON/OFF SWITCH DIAGRAM AND BATTERY INSTALLATION**

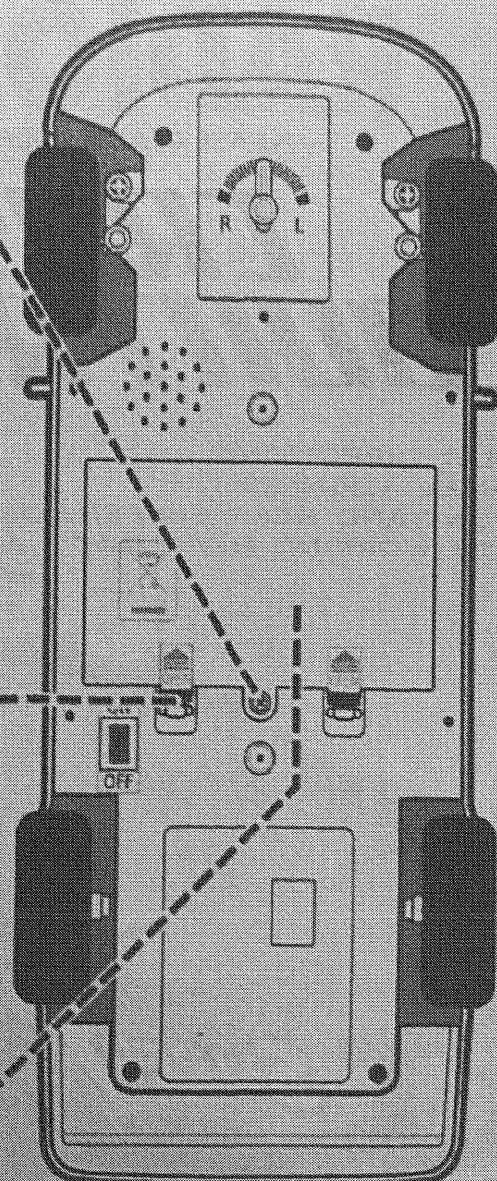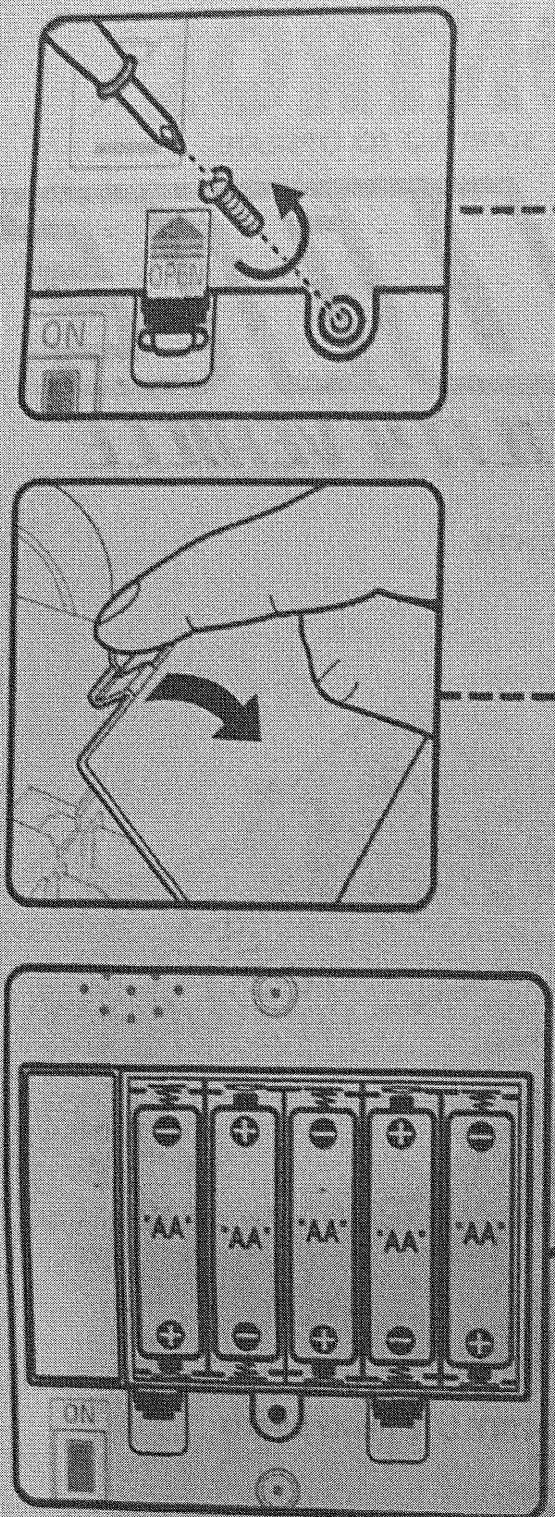

## VEHICLE

- OPEN THE BATTERY COMPARTMENT AT THE BOTTOM OF THE CHASSIS WITH A SCREWDRIVER
- INSERT 5 PCS. "AA" 1.5V BATTERIES INTO THE BATTERY COMPARTMENT. MAKE SURE THE END OF THE BATTERIES OF POSITIVE (+) AND NEGATIVE (-) SIGNS MATCH THE MARKINGS ON THE BATTERY COMPARTMENT.
- CLOSE AND TIGHTEN THE BATTERY COVER USING A SCREWDRIVER.

## **\*IMPORTANT**

**MAKE SURE TO TURN THE SWITCH TO THE "OFF" POSITION AFTER USE TO AVOID DRAINAGE OF BATTERIES.**