

INSTRUCTION MANUAL

USE UNDER SUPERVISION OF AN ADULT

RADIO CONTROL

• PLEASE READ CAREFULLY BEFORE STARTING TO OPERATE

CROSS COUNTRY HURRICANE™

- FULLY DIRECTIONAL
- WHEEL ALIGNMENT
- WITH WORKING HEADLIGHTS AND TAILLIGHTS



1:16 SCALE

CAUTION: ELECTRIC TOY

Not Recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

NO. 1246 (BATTERIES NOT INCLUDED)

NO. 12469 (POWER SET INCLUDED)

BATTERIES REQUIREMENTS:

- CAR: 4.8 RECHARGEABLE BATTERY x 1Pc. (Included)
- TRANSMITTER: 1 x 9V BATTERY (Included)
- CHARGER x 1 (Included)

 **WARNING:**
CHOKING HAZARD—Small parts.
Not for children under 3 years.

ENERTEC™


ENERTEC ENTERPRISES LTD

(Retain packaging as it contains important information.)

4.8V POWER SET

POWER SET INCLUDES: • 1 x 4.8V RECHARGEABLE BATTERY PACK • 1 x CHARGER


CAUTION: THIS IS AN ELECTRICAL SYSTEM, READ INSTRUCTIONS CAREFULLY BEFORE USE. ADULT SUPERVISION RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE.

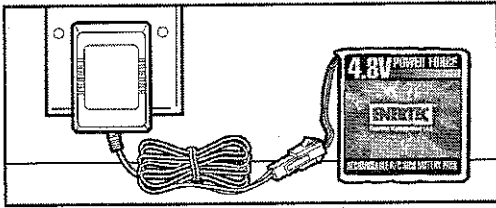


- CHARGE THE RECHARGEABLE BATTERY PACK WITH THE CHARGER.
- APPROX. **4 HOURS** CHARGE TIME.
- DO NOT CHARGE FOR MORE THAN THE RECOMMENDED TIME.

BATTERY INSTALLATION


FOR VEHICLE

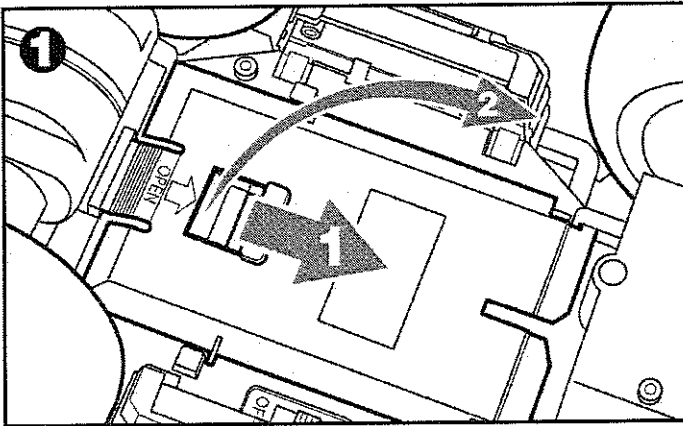

- PUSH THE BATTERY COVER AT THE BOTTOM OF THE VEHICLE AND SLIDE OUT.

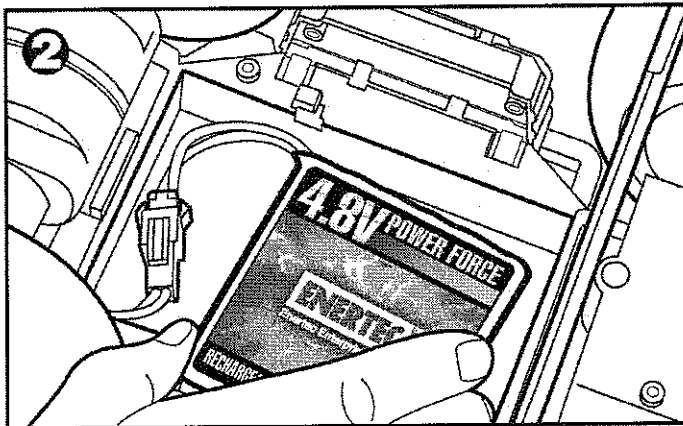


- CONNECT THE PLUG FROM THE BATTERY PACK TO THE BATTERY COMPARTMENT AS SHOWN.

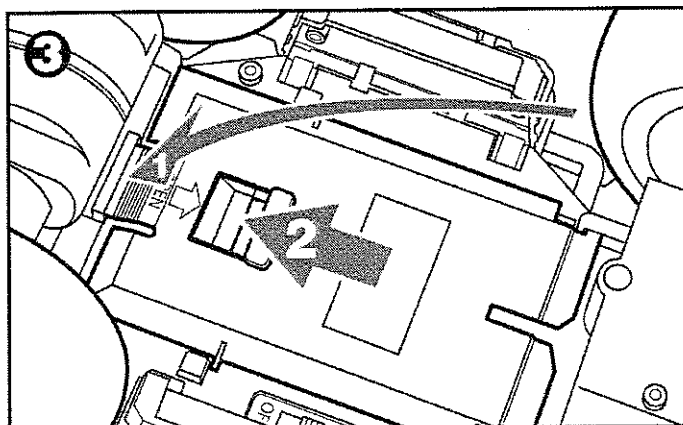


- SLIDE THE BATTERY COVER BACK IN PLACE.

FOR TRANSMITTER

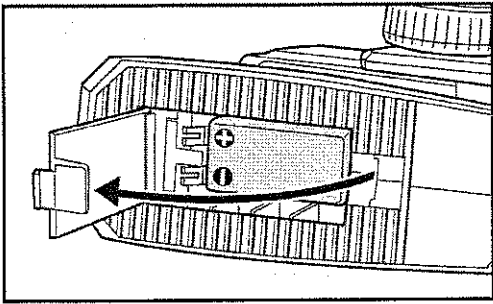


- PUSH THE BATTERY COVER ON THE BOTTOM AND SLIDE OUT.
- INSTALL 1 X "9V" BATTERY.
- ENSURE THE POLARITY SIGNS MATCH THOSE ON BATTERY.
- SLIDE THE BATTERY COVER BACK IN PLACE.

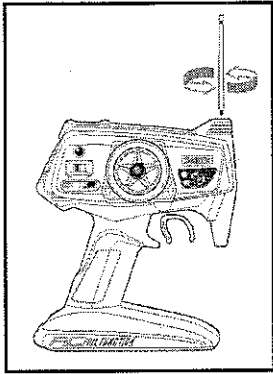



- SCREW THE ANTENNA IN THE CAVITY OF THE TRANSMITTER, AND ENSURE IT IS FULLY EXTENDED WHEN IN USE.

HOW TO SWITCH ON

1. SWITCH ON TRANSMITTER.

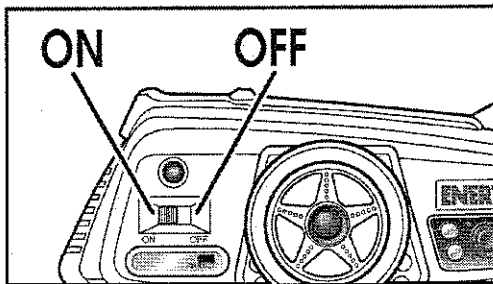

2. SWITCH ON VEHICLE.

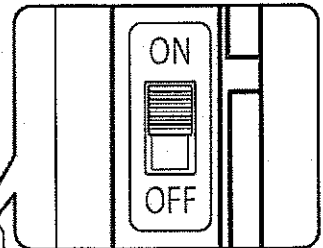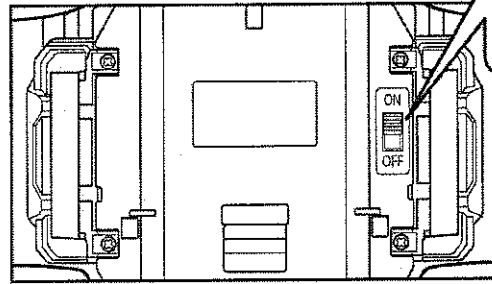

***IMPORTANT!** SWITCH TO "OFF" POSITION AFTER USE TO AVOID DRAINAGE OF BATTERIES.



HOW TO OPERATE

1. FORWARD AND REVERSE CONTROL TRIGGER


PULL THE TRIGGER BACKWARD WITH YOUR FINGER TO CONTROL THE VEHICLE TO FORWARD ACTION. PUSH THE TRIGGER TO THE FRONT FOR REVERSE ACTION. TRIGGER WILL RETURN TO NEUTRAL POSITION WHEN RELEASED.

2. STEERING CONTROL

TO STEERING THE VEHICLE LEFT AND RIGHT, TURN THE STEERING WHEEL ON THE TRANSMITTER EITHER CLOCKWISE OR ANTI-CLOCKWISE DIRECTION.


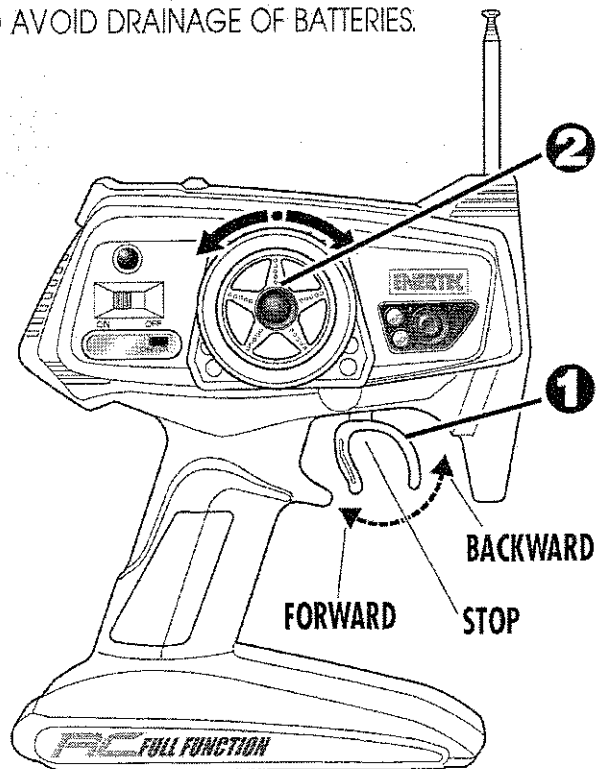
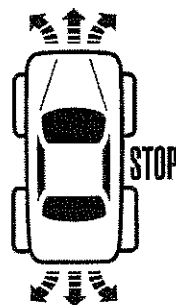


WHEEL ALIGNMENT

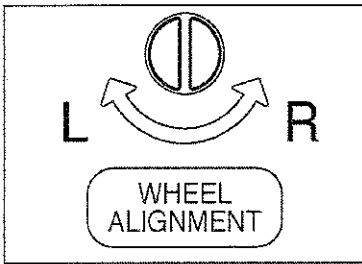

ADJUST THE DIRECTION TRIMMER UNDERSIDE OF VEHICLE IF THE VEHICLE DOES NOT RUN STRAIGHT, TURN TO LEFT OR RIGHT UNTIL YOUR DESIRED ALIGNMENT IS REACHED.

IMPORTANT NOTICE:

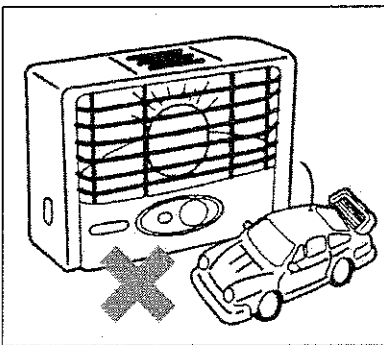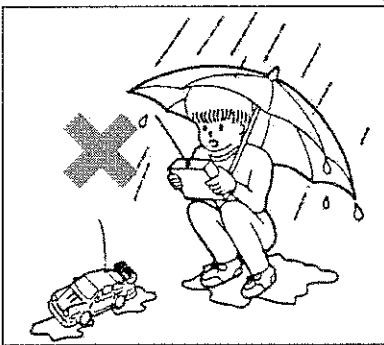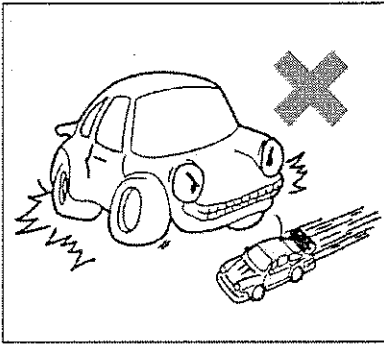

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (Carbon Zinc) or rechargeable (Nickel-Cadmium) batteries.
3. Batteries should be replaced by adults because of small parts.
4. Batteries are to be inserted with correct polarity.
5. Non-rechargeable batteries are not to be charged.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Expired batteries are to be removed from the toy and disposed of safely.
8. Don't operate your car in dangerous places.
9. Don't put your car and transmitter near any source of HEAT.
10. Don't run through water, including pools or puddles.
11. Avoid all possible collisions. Check the road ahead and watch for obstacles.
12. Avoid your car and transmitter antennas touching each other.
13. Don't operate your car in the vicinity of another radio-controlled car with the same frequency.
14. Don't leave your car and transmitter outside overnight. Night dampness will cause harm.
15. Don't forget to remove batteries from your car and transmitter if you are not going to operate the car again soon.
16. If malfunction occurs, replace batteries.
17. The supply terminals must not to be short-circuited.
18. Do not try to dismantle the charger and/or battery pack.
19. Do not charge the battery if it is still hot from usage. Wait until it has cooled down.
20. Changes or modifications to any part of the vehicle not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
21. Recharging of battery must be carried out under adult supervision.
22. Rechargeable batteries are to be removed from the toy before being charged.

Note: The charging devices or transformers used with the toy are to regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this charging device or transformers until the damaged parts has been repaired.



FCC Compliant
FCC ID: OGM12469TX-27
FCC ID: OGM12469TX-48

Declaration of Conformity
Trade name: ENERTEC
Model No.: 12469
Responsible Party: Playtimes Sales & Marketing Co LLC
Address: 200 Fifth Avenue, Room 310
New York, NY 10010
USA
Telephone No.: (212) 243 5522

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.