

# INSTRUCTION MANUAL

USE UNDER SUPERVISION OF AN ADULT

# RADIO CONTROL

• PLEASE READ CAREFULLY BEFORE STARTING TO OPERATE

# FLASH TRACKER™

- FULLY DIRECTIONAL
- WHEEL ALIGNMENT
- WITH SUSPENSION
- WITH WORKING HEADLIGHTS AND TAILLIGHTS
- WITH LIGHTS ON BOTTOM
- WITH LIGHTS ON WHEELS

## 1:10 SCALE



### CAUTION: ELECTRIC TOY

Not Recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

 **WARNING:**  
CHOKING HAZARD—Small parts  
Not for Children under 3 years

**NO. 1716** (BATTERIES NOT INCLUDED)

**NO. 17169** (BATTERIES INCLUDED)

BATTERIES REQUIREMENTS:

- 7.2V RECHARGEABLE BATTERY x 1 (Included)
- CHARGER x 1 (Included)
- 5 x 'AA' BATTERIES (Included)

**ENERTEC™**

 
Enertec Enterprises Ltd

(Retain packaging as it contains important information)

# 7.2V POWER SET

POWER SET INCLUDES: • 1 x 7.2V RECHARGEABLE BATTERY PACK • 1 x CHARGER


**CAUTION:** THIS IS AN ELECTRICAL SYSTEM, READ INSTRUCTIONS CAREFULLY BEFORE USE. ADULT SUPERVISION RECOMMENDED.




- CHARGE THE RECHARGEABLE BATTERY PACK WITH THE CHARGER.
- APPROX. **4 HOURS** CHARGE TIME.
- DO NOT CHARGE FOR MORE THAN THE RECOMMENDED TIME.

## BATTERY INSTALLATION


### FOR VEHICLE

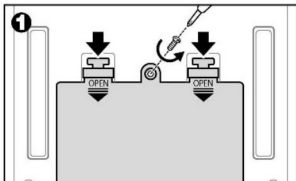

- OPEN THE BATTERY COMPARTMENT ON THE BOTTOM OF THE CHASSIS WITH A SCREWDRIVER.
- FLAP OPEN AND REMOVE THE BATTERY LID AT THE BOTTOM OF THE VEHICLE.

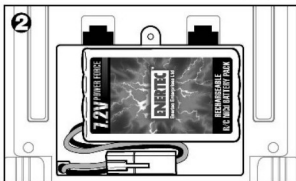

- CONNECT THE PLUG FROM THE BATTERY PACK TO THE BATTERY COMPARTMENT AS SHOWN.

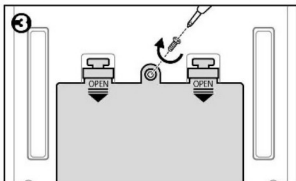


- PUT THE BATTERY LID BACK IN PLACE.
- CLOSE AND TIGHTEN THE BATTERY COVER WITH A SCREWDRIVER.

#### \*IMPORTANT!

SWITCH TO "OFF" POSITION AFTER USE TO AVOID DRAINAGE OF BATTERIES.

## FOR TRANSMITTER

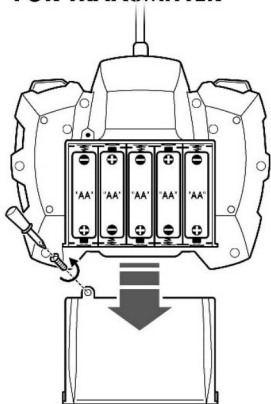


- UNSCREW AND SLIDE OUT THE BATTERY COVER USING A SCREWDRIVER.
- INSTALL 5 X 'AA' BATTERIES.
- ENSURE THE POLARITY SIGNS MATCH THOSE ON BATTERY.
- SLIDE THE BATTERY COVER BACK IN PLACE AND PLACE BACK THE SCREW WITH A SCREWDRIVER.



- SCREW THE ANTENNA IN THE CAVITY OF THE TRANSMITTER, AND ENSURE IT IS FULLY EXTENDED WHEN IN USE.


## HOW TO OPERATE

1. TURN ON/OFF SWITCH AT BOTTOM OF VEHICLE TO "ON" POSITION.
2. FORWARD. ENGAGE LEFT JOYSTICK TO POSITION **1**.
3. REVERSE. ENGAGE LEFT JOYSTICK TO POSITION **2**.
4. STEERING. MOVE RIGHT JOYSTICK IN EITHER DIRECTION TO TURN LEFT OR RIGHT. JOYSTICK AUTOMATICALLY RETURNS TO NEUTRAL WHEN RELEASED.

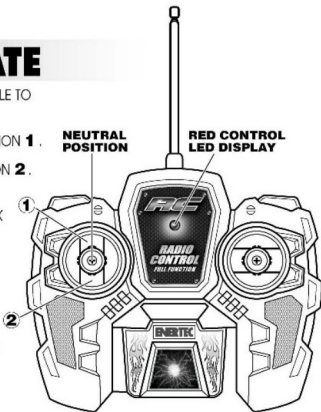


**NOTE:** TRANSMITTER TURNS ON AUTOMATICALLY AND OFF WHEN NOT IN USE.

## WHEEL ALIGNMENT

 


ADJUST THE DIRECTION TRIMMER ON UNDERSIDE OF VEHICLE WITH A SCREWDRIVER IF THE VEHICLE DOES NOT RUN STRAIGHT, TURN TO LEFT OR RIGHT UNTIL YOUR DESIRED ALIGNMENT IS REACHED.

## IMPORTANT NOTICE:

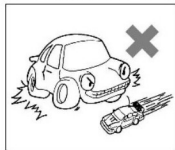

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (Carbon Zinc) or rechargeable (Nickel-Cadmium) batteries.
3. Batteries should be replaced by adults because of small parts.
4. Batteries are to be inserted with correct polarity.
5. Non-rechargeable batteries are not to be charged.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Expired batteries are to be removed from the toy and disposed of safely.
8. Don't operate your car in dangerous places.
9. Don't put your car and transmitter near any source of HEAT.
10. Don't run through water, including pools or puddles.
11. Avoid all possible collisions. Check the road ahead and watch for obstacles.
12. Avoid your car and transmitter antennas touching each other.
13. Don't operate your car in the vicinity of another radio-controlled car with the same frequency.
14. Don't leave your car and transmitter outside overnight. Night dampness will cause harm.
15. Don't forget to remove batteries from your car and transmitter if you are not going to operate the car again soon.
16. If malfunction occurs, replace batteries.
17. The supply terminals must not be short-circuited.
18. Do not try to dismantle the charger and/or battery pack.
19. Do not charge the battery if it is still hot from usage. Wait until it has cooled down.
20. Changes or modifications to any part of the vehicle not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
21. Recharging of battery must be carried out under adult supervision.
22. Rechargeable batteries are to be removed from the toy before being charged.

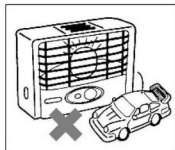

**Note:** The charging devices or transformers used with the toy are to regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this charging device or transformers until the damaged parts has been repaired.

Hereby, Enertec declares that this 17169 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



FCC Compliant  
FCC ID: OGM17169TX-27  
FCC ID: OGM17169TX-49

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Declaration of Conformity  
Transceiver: EN17062  
Model No.: 17169  
Responsible Party: Playmax Sales & Marketing Co. LLC  
Address: 388 Wilkes-Barre, Pocono 388  
New York, NY 10968  
USA  
Telephone No.: 0170 210 0502

This device complies with Part 15 of FCC Rules.  
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.