INSTRUCTION MANUAL

USE UNDER SUPERVISION OF AN ADULT

PLEASE READ CAREFULLY BEFORE STARTING

- ●FRONT AND REAR SUSPENSION ●WITH WORKING HEADLIGHTS AND TAILLIGHTS
- DIFFERENTIAL GEAR BOX

 
NO. 1717 (BATTERIES NOT INCLUDED) NO. 17179 (POWER SET INCLUDED)

BATTERIES REQUIRED

- * 7.2V RECHARGEABLE BATTERY FOR CAR
- 1 X '9V" BATTERY FOR TRANSMITTER

CAUTION: ELECTRIC TOY

Not Recommended for children under 5 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.



CHARGE THE RECHARGEABLE BATTERY PACK WITH THE CHARGER

APPROX 4 HOURS CHARGE TIME.

DO NOT CHARGE FOR MORE THAN THE RECOMMENDED TIME

 
7.2V POWER SET

POWERE SET REQUIRED: • 1 X 7:2V (KR157 / 51) RECHARGEABLE BATTERY PACK

. 1 Y CHARGER

CAUTION: THIS IS AN ELECTRICAL SYSTEM, READ INSTUCTIONS CAREFULLY BEFORE USE ADULT SUPERVISION RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE.


BATTERY & ON/OFF SWITCH DIAGRAM AND



 UNSCREW THE BATTERY COMPARTMENT COVER * PRESS BOTH TARS TO OPEN AND REMOVE COVER.



 CONNECT THE:PLUG-FROM THE BATTERY PACK TO THE BATTERY COMPARTMENT AS SHOWN.



• PUT THE BATTERY COVER BACK:

* TIGHTEN THE COVER WITH

FOR TRANSMITTER



LINSCREW AND OPEN THE BATTERY COVER ON THE BOTTOM BY THE TAB. INSTALL T.X. 9V (6LRT) BATTERY. ENSURE THE POLARITY SIGNS MATCH

 
THOSE ON RATTERY CLOSE THE BATTERY COVER AND IIGHTEN BY SCREW



SCOEW THE ANTENNIA IN THE CAVITY OF THE TRANSMITTER, AND ENSURF IT IS FULLY EXTENDED WHEN IN HISE

HOW TO SWITCH ON





IMPORTANTI SWITCH TO "OFF" POSITION AFTER USE TO AVOID DRAINAGE OF BATTERIES:

HOW TO OPERATE

1. FORWARD AND REVERSE CONTROL TRIGGER PULL THE TRIGGER BACKWARD WITH YOUR FINGER TO CONTROL THE VEHICLE TO FORWARD ACTION AND PUSH THE TRIGGER TO THE FRONT FOR REVERSE ACTION TRIGGER WILL RETURN TO NEUTRAL POSITION WHEN RELEASED.

2, STEERING CONTROL

TO STEER THE VEHICLE LEFT AND RIGHT, TURN THE STEERING WHEEL ON THE TRANSMITTER IN EITHER CLOCKWISE OR ANTI-CLOCKWISE DIRECTION.

extend transmitter antenna to FULL LENGTH WHEN IN USE.

a

WHEEL ALIGNMENT



ADJUST THE DIRECTION TRIMMER ON UNDERSIDE OF VEHICLE IF THE VEHICLE DOES NOT RUN STRAIGHT, TURN TO LEFT OR RIGHT UNTIL YOUR DESIRED ALIGNMENT IS REACHED.

WARNING: CHOKING HAZARD--Small parts Not for children under 3 years.



IMPORTANT NOTICE:



SCALE 1:16





Don't operate your car in dangerous places

Don't put your car and transmitter near any source of HEAT.

Don't run through water, including pools or puddles. Avoid all possible collisions. Check the road ahead and watch for obstacles:

Avoid your car and transmitter antennas touching each other.

Never use a Charger when regular alkaline or heavy duty batteries are in the vehicle. A Charger is to be used only for Nickel-Cadmium batteries.

Don't run your car in the same vicinity as another radio controlled car.

Don't leave your car and transmitter outside overnight. Night dampness will cause

9. Don't forget to remove batteries from your car and transmitter if you are not going to

operate the car again that day.

10. If malfunction occurs, replace batteries.

11. Do not try to dismantle the charger and battery pack.

12. Do not charge the battery if it is still hot from usage. Waif until they have cool do

13. Only batteries of the same type are to be used at the same time.

14. Different types of bafferies or old and new batteries are not to be mixed.

15. The supply terminals are not to be short circuited.

16. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

17. Do not recharge non-rechargeable batterles.

18. Remove exhausted batteries from the toy.

19. Rechargeable batteries are not to be carged under adult supervision.

20. Rechargeable batteries are to be removed from the toy before being charged.

21. Batteries are to be inserted with the correct polarity.

22. Do not mix old and new batteries

23. Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Nickel-Cadmium)

Note:

The charging devices or transformers used with the toy are to regulary examined for domage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this charging device or transformers until the damaged parts has been repaired.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for

compliance could void the user authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against: harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications

However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

· Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for help.