 
 
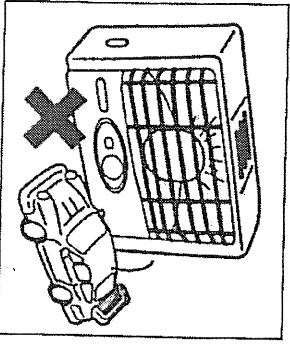 


IMPORTANT NOTICE:

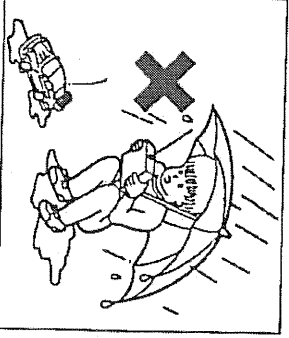

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (Carbon Zinc) or rechargeable (Nickel-Cadmium) batteries.
3. Batteries should be replaced by adults because of small parts.
4. Batteries are to be inserted with correct polarity.
5. Non-rechargeable batteries are not to be charged.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Expired batteries are to be removed from the toy and disposed of safely.
8. Don't operate your car in dangerous places.
9. Don't put your car and transmitter near any source of HEAT.
10. Don't run through water, including pools or puddles.
11. Avoid all possible collisions. Check the road ahead and watch for obstacles.
12. Avoid your car and transmitter antennas touching each other.
13. Don't operate your car in the vicinity of another radio-controlled car with the same frequency.
14. Don't leave your car and transmitter outside overnight. Night dampness will cause harm.
15. Don't forget to remove batteries from your car and transmitter if you are not going to operate the car again soon.
16. If malfunction occurs, replace batteries.
17. The supply terminals must not be short-circuited.
18. Rechargeable batteries are to be removed from the toy before being charged.
19. Rechargeable batteries are only to be charged under adult supervision.

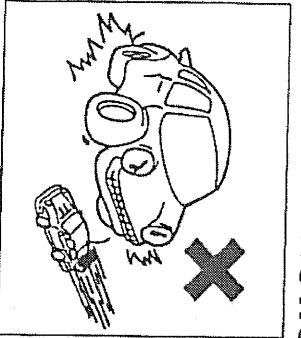

FCC Compliant
FCC ID: OGM26231TX-27
FCC ID: OGM26231TX-48

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity
Trade name: ENERTEC
Model No.: 26231
Responsible Party: Playtime Sales & Marketing Co Ltd
Address: 200 Fifth Avenue, Room 310
New York, NY 10010
USA
Telephone No.: (1212) 243 5522

This device complies with Part 15 of FCC Rules.
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

INSTRUCTION MANUAL

USE UNDER SUPERVISION OF AN ADULT

 
RADIO CONTROL

PLEASE READ CAREFULLY BEFORE STARTING TO OPERATE

MONSTER WHEELS

CHUBBIES

FULLY DIRECTIONAL
WITH WORKING
HEADLIGHTS AND
TAILLIGHTS

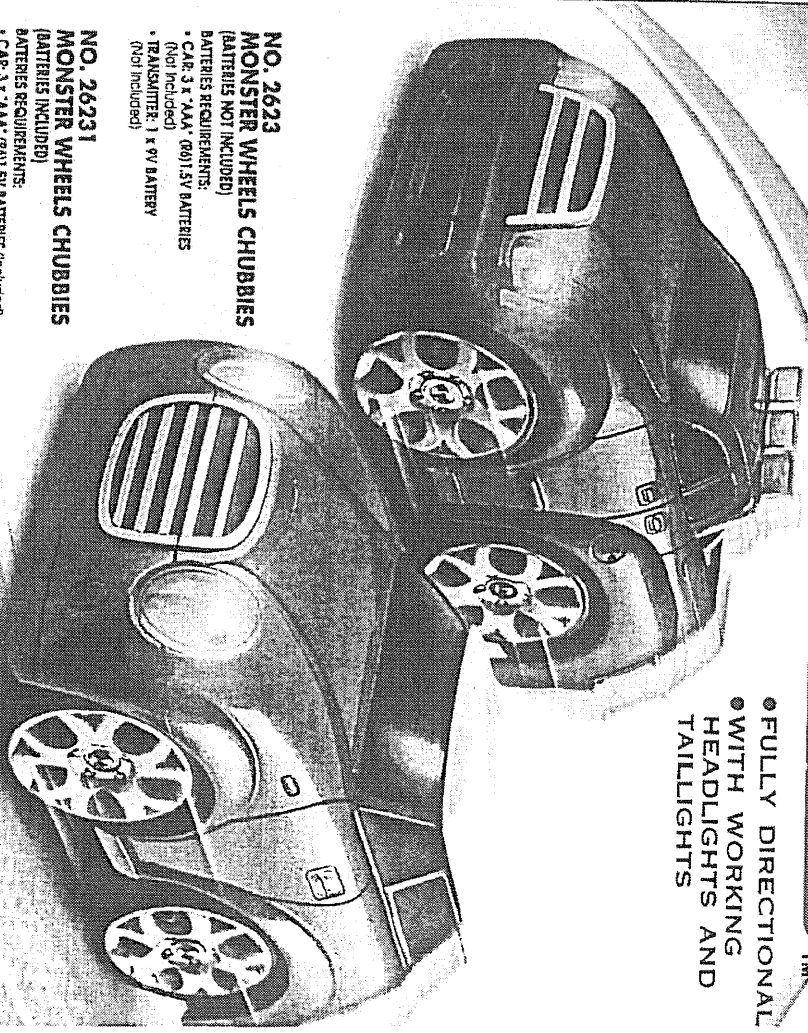

NO. 2623 MONSTER WHEELS CHUBBIES (BATTERIES NOT INCLUDED)

- BATTERIES REQUIREMENTS:
- CAR: 3 x 1.5AA (R01) 1.5V BATTERIES (Not included)
 - TRANSMITTER: 1 x 9V BATTERY (Not included)

NO. 26231 MONSTER WHEELS CHUBBIES (BATTERIES INCLUDED)

- BATTERIES REQUIREMENTS:
- CAR: 3 x 1.5AA (R01) 1.5V BATTERIES (Included)
 - TRANSMITTER: 1 x 9V BATTERY (Included)

 
WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.



Enertec Enterprises Ltd


(Retain packaging as it contains important information.)

BATTERY & ON/OFF SWITCH DIAGRAM AND BATTERY INSTALLATION

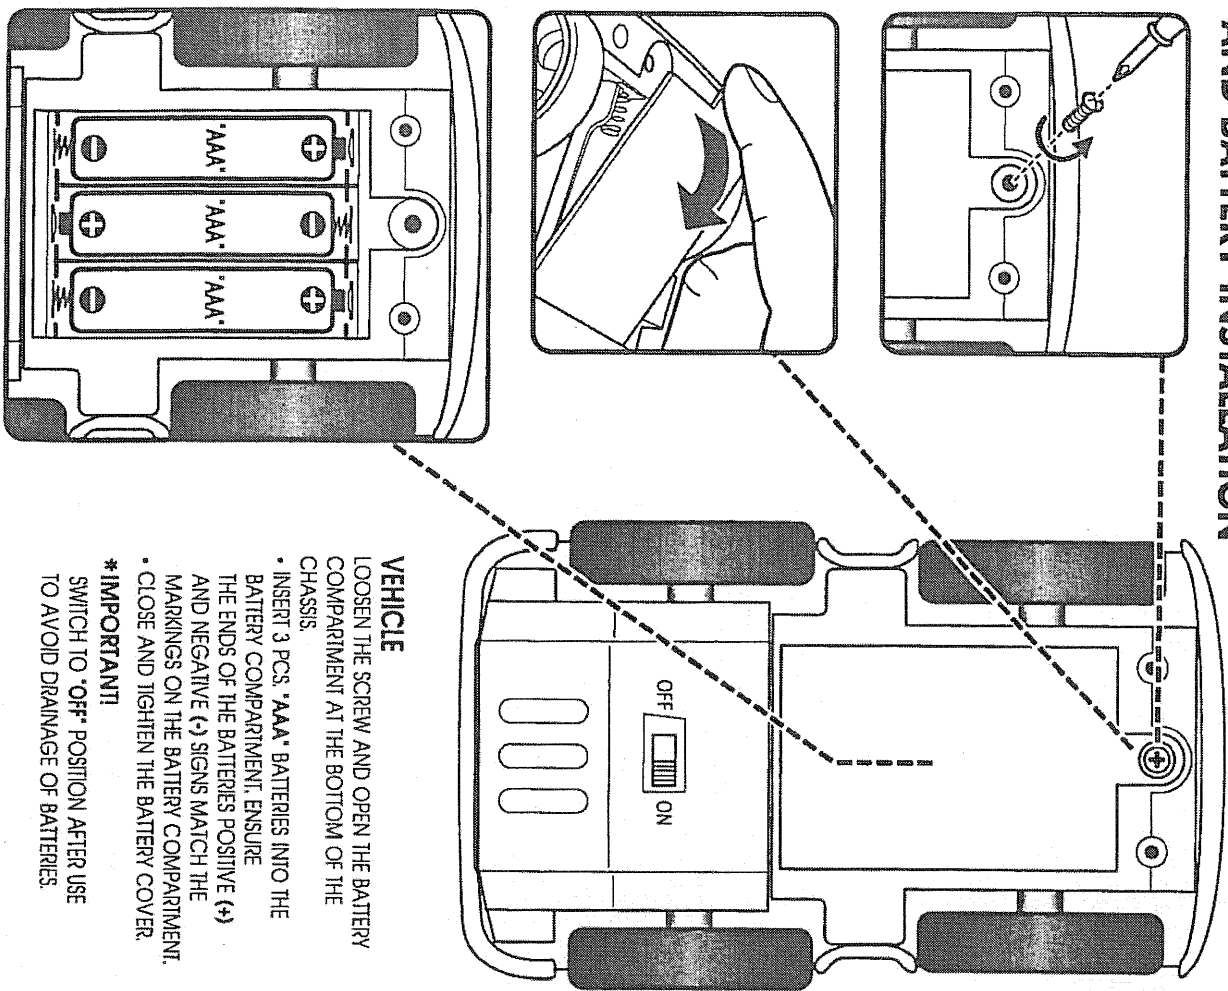


VEHICLE

 - LOOSEN THE SCREW AND OPEN THE BATTERY COMPARTMENT AT THE BOTTOM OF THE CHASSIS.
- INSERT 3 PCS. "AAA" BATTERIES INTO THE BATTERY COMPARTMENT. ENSURE THE ENDS OF THE BATTERIES POSITIVE (+) AND NEGATIVE (-) SIGNS MATCH THE MARKINGS ON THE BATTERY COMPARTMENT.
- CLOSE AND TIGHTEN THE BATTERY COVER.
- ***IMPORTANT!** SWITCH TO "OFF" POSITION AFTER USE TO AVOID DRAINAGE OF BATTERIES.

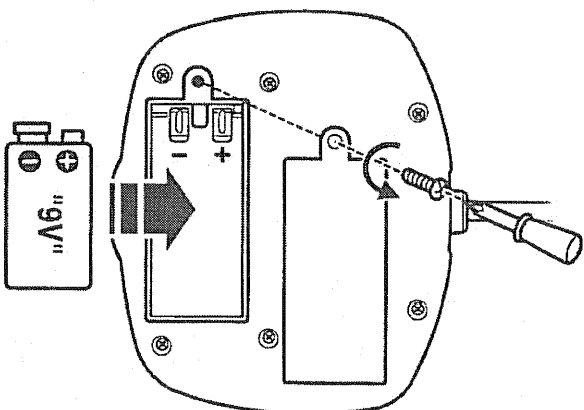

- ### TRANSMITTER
- OPEN THE BATTERY COMPARTMENT AT THE BACK OF THE TRANSMITTER WITH A "PHILLIPS" SCREWDRIVER AND INSTALL 1 9V BATTERY.
 - CLOSE AND TIGHTEN THE BATTERY COVER WITH A "PHILLIPS" SCREWDRIVER.

 - SCREW THE ANTENNA IN THE CAVITY OF THE TRANSMITTER, AND ENSURE IT IS FULLY EXTENDED WHEN IN USE.

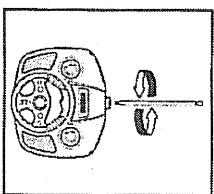

HOW TO OPERATE:

1. TURN ON/OFF SWITCH AT BOTTOM OF VEHICLE TO "ON" POSITION.
2. FORWARD: ENGAGE LEFT AND RIGHT JOYSTICKS TO POSITION 1.
3. REVERSE: ENGAGE LEFT AND RIGHT JOYSTICKS TO POSITION 2.
4. SPINNING: ENGAGE LEFT JOYSTICK TO POSITION 1 AND RIGHT JOYSTICK TO POSITION 2 AT THE SAME TIME.

NOTE: TRANSMITTER TURNS ON AUTOMATICALLY AND OFF WHEN NOT IN USE.

