


Wireless Control Handle (Set of 2)

REPLACING OR USING ADDITIONAL WIRELESS CONTROL HANDLES

If you must replace a lost or damaged handle or if you purchase a second set of Wireless Control Handles for your PowerTower®, you will need to reprogram the tower to accept the new handle code. The code in each set of Wireless Control Handles is unique and is permanently set at the factory. The PowerTower must be reprogrammed to accept the code of each handle set before it will accept wireless control commands.



STEPS TO REPROGRAM YOUR POWERTOWER TO ACCEPT THE NEW HANDLE CODE

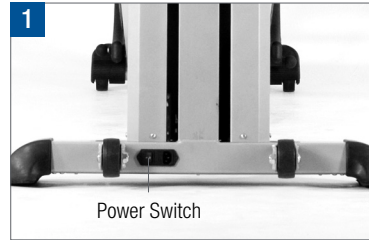

STEP 1. Turn the red power switch to the “Off” position on the back base of the PowerTower unit.




STEP 2. Then turn the power switch back to the “On” position. Within 10 seconds, insert a paper clip or similar object into the hole in the top of the tower and gently press into the hole as shown. The LED will light up.

FCC RULES

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

The PowerTower Wireless Control Handle is a wireless transmitter that complies with FCC Rules, Part 15. Operation is subject to the following two conditions:

“This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”

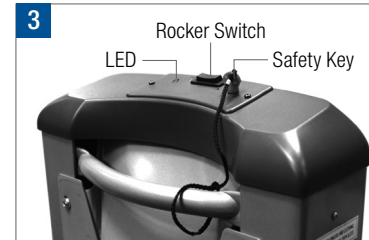

STEP 3. Press and hold down either button on the Wireless Control Handle that you are programming.

If you are programming two Wireless Control Handles:

- Press and hold one button on the first handle. The LED light will flash, then become steady.
- Within 3 more seconds, press and hold one button on the other handle. The light will flash again and then become steady.

When the LED light turns off, programming is complete and your PowerTower will immediately respond when the handle buttons are pressed.

NOTE: The Rocker Switch on the top of the tower will always operate the PowerTower, whether a Wireless Control Handle is programmed or not.

RSS RULES

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.