

EPSON[®]
EXCEED YOUR VISION


LABELWORKS[™]

A white icon of an iron, positioned to the right of the 'LABELWORKS' text.

Iron-on Kit

User's Guide

LabelWorks tapes available at www.epson.com/LabelWorks

 TAPE	6 mm (~1/4")	9 mm (~3/8")	12 mm (~1/2")
Standard	LC-2WBN9	LC-3WBN9 LC-3WLN9 LC-3WRN9	LC-4WBN9 LC-4BWN9 LC-4WLN9 LC-4BKP9 LC-4WRN9
Clear			LC-4TBN9 LC-4TKN9
Metallic			LC-4SBM9 LC-4KBM9
Iron-on			LC-4WBQ5 LC-4LBQ5 LC-4IBQ5
Glow-in-the-Dark			LC-4ZBU1
Strong Adhesive			LC-4WBW9 LC-4YBW9
Pearlized			LC-4LBL9 LC-4GBL9 LC-4RBL9

Contents

Welcome	3	Customizing your labels	18
Getting Started.....	4	Creating vertical text	18
Inserting batteries.....	4	Using mirror-image text	18
Using the optional AC adapter.....	5	Creating sequentially numbered labels....	19
Inserting a tape cartridge.....	5	Customizing the length of labels.....	19
Removing a tape cartridge.....	6	Adding space between characters	19
Changing the language.....	6	Selecting narrow characters	20
Creating labels	7	Increasing print density.....	20
Entering text	7	Adjusting the Display	20
Adding punctuation.....	7	Applying Iron-On labels.....	21
Adding letters with an accent mark	8	Attaching your labels.....	21
Adding symbols.....	8	Label usage tips	22
Adding frames	13	Cleaning the Printer.....	23
Changing the font size.....	15	Cleaning the print head	23
Changing the font.....	15	Solving Problems	24
Changing the font style.....	16	Error messages.....	24
Saving labels	16	Problems and solutions.....	25
Deleting labels	16	Epson Technical Support	27
Printing labels.....	17	Recycling	27
Printing multiple copies	17	Purchase supplies and accessories	28

Specifications	28
Notices	29
Safety instructions.....	29
About printed labels.....	32
FCC Compliance Statement.....	32
Epson America, Inc. Limited Warranty.....	33
Trademarks	35

Welcome

Your LabelWorks Iron-on Kit lets you create attractive, long-lasting labels for uniforms, clothing, backpacks, and other fabric items.

Get creative by adding symbols and frames for holidays, sports, animals, food, and more!

Use iron-on labels for:

- day care
- school
- camp
- nursing homes
- handmade craft projects

Save up to 30 labels to reuse at any time. The kit includes two iron-on cartridges so you can print more than 150 labels.

In addition to the included blue and white tapes, iron-on labels are also available in pink.

Need more ideas for iron-on labels?

- Try using decorative-edge scissors to shape your labels.
- Personalize baby shower gifts.
- Add symbols to sports team uniforms.
- Use fun frames, animals, or other graphic symbols to help young children identify their clothing.

With the other types of tape listed on the back cover, you can do even more:

- Organize stuff in your kitchen, bathroom, and every room of your house.
- Decorate and personalize school supplies.
- Create professional looking file labels.
- Identify your computer cables and other equipment.

You'll find hundreds of uses for your LabelWorks printer!


Getting Started

Your Label Works printer requires 6 AAA alkaline batteries (not included). An optional AC adapter is also available (APT0615Z1-1).


Follow the instructions in this section to insert the batteries and tape cartridge, and change the language if necessary.

Inserting batteries


1. Remove the rear cover.

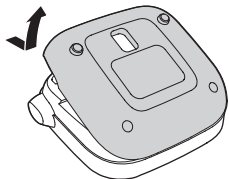

2. Insert 6 AAA alkaline batteries, positioning the + and - ends as shown.

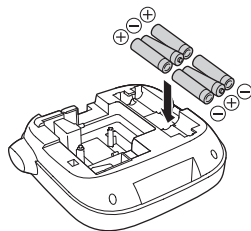


3. Replace the cover and snap it into place.

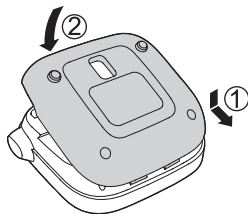

Using the optional AC adapter


1. Plug one end of the AC adapter into the product.
2. Plug the other end of the AC adapter into a wall outlet.

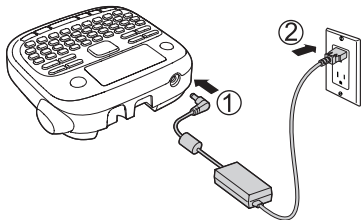


Caution: Make sure you use only the AC adapter designed for your LabelWorks printer (APT0615Z1-1) or damage may occur.

Inserting a tape cartridge

1. Remove any slack from the ink ribbon.

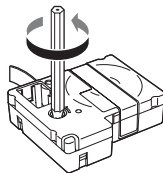



 


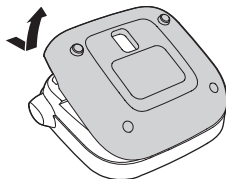2. Remove the rear cover.




3. Insert the tape cartridge and press it down firmly until it snaps into place.

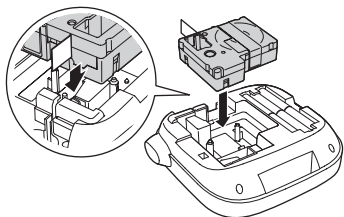4. If there is excess tape, feed the end of the tape through the tape guide slot.




5. Replace the cover and snap it into place.
6. Press  to turn on the printer.
7. Press  + .
8. Press the  Cut button to cut the tape.

Warning: Do not press the  Cut button until the tape stops moving or the tape cartridge may be damaged.

 


 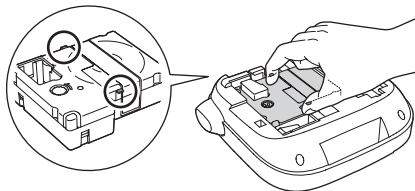


Removing a tape cartridge

1. Remove the rear cover.
2. Hold the cartridge by the tabs, and lift it straight up.



Changing the language

If you want to change the language on the display, follow these steps:

 

 

1. Press  + .
2. Press  to highlight **Language**, then press  to select it.
3. Press  to highlight your language, then press  to select it.


 

Creating labels

You can create labels with text, symbols, and frames in a variety of fonts and styles.

Entering text

Use the built-in keyboard to enter letters and numbers.

 
- Press  to use upper case for all letters, or  + character for a single letter.
- Press  to delete the previous character.
- Press  to start a new line. The line number is indicated on the display.

Note: You can print a maximum of two lines of text. If you try to exceed the maximum,  appears and you will not be able to print. Press  to delete the  and print your label.

 
Adding punctuation

 

 



You can select from two groups of punctuation marks, as shown below:

Group 1







Group 2



- Press  repeatedly to scroll through the first group of marks, then press  to select the desired mark.
- Press  + , then press  repeatedly to scroll through the second group of marks. Then press  to select the desired mark.






 
Adding letters with an accent mark


You can choose from a list of accented letters on the display.

1. Enter the letter that needs an accent mark.
2. Press . A list of options appears on the display (for example, ÂĂÂ).
3. Press  or  to highlight an item, then press  to select it.

Adding symbols

You can add symbols for sports, food, holidays, animals, and more.

1. Press .
2. Press  to scroll through the symbol categories, then press  to select a category.
3. Press  or  to highlight a symbol, then press  to select it.

Note: To cancel and return to the previous menu, press .

Tip: For young children, try using animal labels to help them match clothing.

You can choose from the symbols shown on the following pages.

Symbols

Prohibition



Household



Food



Sports



Activity



Measurement

°F °C ° A V Ω W kWhzdBHP Å ft' " %

Metric

μm mm cm m km cm² m² km² cm³ m³ mg g kg mL ℓ °C

Abbreviation

No. & © ® TEL FAX™

Punctuation

, . · : ; ? ! - / \ ~ @ ~ _ § i ¿

Parentheses

‘ ’ “ ” () [] { } < > « » 「 」 『 』 【 】

Math

+ - ± × * ÷ = ≠ < > ≤ ≥ ∞ ∴ ≡ ≐ √ ∞ ∧ ∫ Σ ^

Currency

\$ € £ Fr ¢ ¥ ¤

DoubleFigure

00 01 ... 09 10 11 ... 98 99

Greek

Α Β Γ Δ Ε Ζ Η Θ Ι Κ Λ Μ Ν Ξ Ο Π Ρ Σ Τ Υ Φ Χ Ψ
Ω α β γ δ ε ζ η θ ι κ λ μ ν ξ ο π ρ σ τ υ φ χ
ψ ω

Office



Safety



 



Facility






 
 
 






























Adding frames

Frames include borders and fun symbols for activities and special occasions.



1. Press  to display **Frame**, then press  to select it.
2. Press  to scroll through the options, then press  or enter the frame number to select the frame you want to use.

 


 

You can choose from the following frames:

1		2		3		4		5		6	
7		8		9		10		11		12	
13		14		15		16		17		18	
19		20		21		22		23		24	
25		26		27		28		29		30	
31		32		33		34		35		36	

37		38		39		40		41		42	
43		44		45		46		47		48	
49		50		51		52		53		54	
55		56		57		58		59		60	
61		62		63		64		65		66	
67		68		69		70		71		72	
73		74		75		76		77		78	
79		80		81		82		83		84	
85		86		87		88		89			

Changing the font size

You can change the size for the letters, numbers, and symbols on your label.

 


1. Press .
2. Press  to select a 1-line or 2-line layout, then press . You see squares representing the font, and an indication of the size and number of lines.
3. Press  to scroll through the 4 available sizes, then press  to select the one you want to use.



Tip: The size you select is indicated on the display.


Changing the font

Go from simple to ornate, and create the right impression for each label.

1. Press .
2. Press  to scroll through the fonts, then press  to select the one you want.


 

The font you select will apply to the entire line.

You can choose from the following fonts:

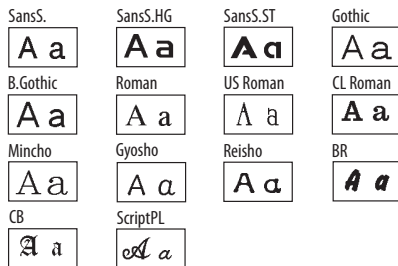


Changing the font style

Personalize your labels with italic, shadow, and outline effects.

1. Press .
2. Press  to scroll through the styles, then press  to select the one you want.


 
Note: Styles applied to small or elaborate characters may not print clearly.

You can choose from the following font styles:

 
 
 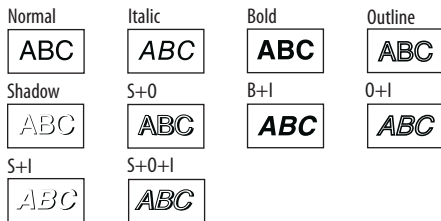


 

 


Saving labels



You can store up to 30 saved labels at a time.


After you finish creating your first label, press  +  to create another label (the label number appears to the left of the text). Your first label is automatically saved.



 

 

Deleting labels

1. Press  +  or  +  to select a label for deletion.
2. Press  + . You see a confirmation message.
3. Press  to delete, or press  if you change your mind.

Printing labels

1. Press  to print the current label.
The length of the label and the number of copies shows on the display while the label prints.
2. When printing stops, press the  Cut button.




Warning: Do not press the  Cut button until the tape stops moving or the tape cartridge may be damaged.

- To select a saved label for printing, press  + [] or  + [] to scroll through your labels, then press  to select the one you want.
- To preview your label before printing, press . The text scrolls across the display.

Note: Only the text and the length of the label can be previewed. The actual print image will not show on the display.

Printing multiple copies

You can print up to 9 copies of a label at the same time.

1. Press . You see 2-9 on the display.
2. Press the one of the number keys to enter the number of copies (2-9).
3. Press . The length of the label and the number of copies shows on the display while the labels print.
4. When printing stops, press the  Cut button to cut the tape. A cut mark is printed between each copy, as shown:



5. Using scissors, cut along the marks to separate each label.

 



 
Customizing your labels

You can customize your labels by creating special effects, such as vertical and mirrored text. You can also print sequentially numbered labels or custom lengths. In addition, you can adjust the font width, spacing, and print density.

Creating vertical text

You can specify vertical orientation either before or after you enter the text for a label.



 




1. Press .
2. Press  repeatedly until **Vertical** appears, then press  to select it.
3. Press  to select **On**, then press .

Using mirror-image text

 
Create unique labels with mirror-image text and symbols.



1. Press .
2. Press  repeatedly until **Mirror print** appears, then press  to select it.
3. Press  to select **On**, then press .

Creating sequentially numbered labels

You can create a label, and then print numbered copies of it.



1. Create your label as described on page 7.
2. Press [◀] or [▶] to move the cursor where you want to add the number, then press [⇧] + [★△].
3. Enter the number for the first label, then press [↵].
4. Follow the instructions on page 17 to print multiple copies of the label. Each copy is numbered in order.

Customizing the length of labels

You can create extra-long or short labels.

1. Press [H].
2. Press [▶] until you see **Label length**, then press [↵] to select it.
3. Press [▶] to select a value up to 15 in. (40 cm), then press [↵].

Tip: Selecting Auto will adjust to the proper length automatically.

Adding space between characters

You can add extra space between the letters, numbers, and symbols on your label.



1. Press [H].
2. Press [▶] until you see **Char. spacing**, then press [↵] to select it.

3. Press **[▶]** to change from **Narrow** to **Wide**, then press **[↵]**.

Selecting narrow characters

You can change from normal characters and symbols to narrow ones.

1. Press **[W]**.
2. Press **[▶]** until you see **Narrow**, then press **[↵]** to select it.
3. Press **[↵]** again to select **Narrow**.

Increasing print density

You can make your labels darker if necessary.

1. When the power is off, press **[⏻]** + **[⏻]**.
Print density appears on the display.
2. Press **[↵]**.
3. Press **[▶]** to adjust the print density, then press **[↵]** to select the density you want.

Note: The default value (0) is recommended.

Adjusting the Display

You can adjust the following display settings:


Contrast: Adjusts the density of the fonts on the display.

Language: Changes the language of the settings and messages on the display.

inch:cm: Selects the unit of measurement.

1. Press **[↑]** + **[Ⓜ]**.
2. Press **[▶]** to highlight a setting, then press **[↵]** to select it.
3. Press **[▶]** to highlight the option you want, then press **[↵]** to select it.

Applying Iron-On labels

Use only label cartridges with this mark: 

You can attach labels to the following types of fabric:


- 100% cotton
- 100% linen
- 100% polyester
- cotton/polyester blends
- fabrics with a flat, smooth surface

Do not use textured fabrics such as terry cloth, corduroy, or flannel; roughly woven fabrics; fabrics with a rough surface such as denim; waterproof fabrics; or fabrics which require a cool iron.

Attaching your labels

Press the entire label firmly, avoid the steam vents, and do not use a press cloth.

1. Set your iron to 284–320 °F (140–160 °C), without steam.
2. Make sure the area where you want to attach the label doesn't have any wrinkles.
3. Place the label in the desired location with the printed side up.
4. Gently press the iron down on one end of the label to temporarily attach it in place.
5. Press the iron firmly down on the entire label, holding the iron still for about 10 to 15 seconds. To make sure the label adheres securely, repeat this step 3 or 4 times.

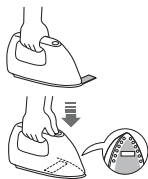

Label usage tips

- Labels are made from non-toxic materials; however, attached labels are stiff, and may rub or scratch the skin if direct contact occurs.
- Labels are dry-cleanable and machine washable.
- Keep the label length short (up to about half the width of the iron soleplate). Labels that are too long may be difficult to attach or may look distorted due to the expansion and contraction of the fabric.
- Trimming the corners of the label before attaching it will prevent it from peeling easily.
- If a label does peel, it can be re-attached by ironing; however, it may not adhere as securely to the fabric.
- When attaching a label to fabric that may be frequently washed or dry-cleaned, it is recommended that the label be sewn on.
- When using a steam iron, turn the steam off when ironing on the label.
- Once a label is attached, it cannot be easily removed.
- Never clean the labels with chemicals or solvents such as benzine, thinner, or alcohol. Otherwise, the print on the label may become faint or distorted.
- If labels are exposed to direct sunlight for long periods of time, yellowing may occur.
- Labels do not adhere to non-fabric materials such as paper or leather.
- When using bleach or spot detergent, make sure you test it in advance.

Cleaning the Printer


Use a dry, soft cloth or, for stubborn stains, a moist cloth that has been wrung dry.

Caution: Never use chemicals or solvents such as benzine, thinner, or alcohol, or use a chemical duster. This could damage your product.

Cleaning the print head

If the print becomes faint or distorted, the print head may need cleaning.

 
Remove the tape cartridge and clean the print head using a cotton swab moistened with rubbing alcohol, as shown below:

 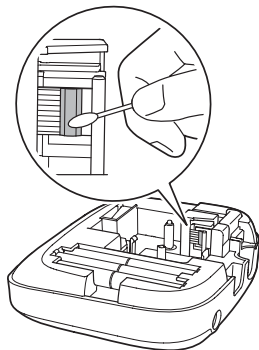



Solving Problems

If you have a problem with your LabelWorks, check the display or the troubleshooting suggestions below.

Error messages

Insert tape	Turn the power off and install a tape cartridge.
Check battery	The batteries may be running out or installed incorrectly, non-alkaline batteries are being used with alkaline batteries, or old and new batteries are being used together. Turn the power off and replace batteries with new ones, or use the optional AC adapter. Make sure new batteries are installed correctly.
Too many lines	You have exceeded the maximum number of lines (2). Press  to delete the lines indicated by the cursor.)
Seq. num. only 1	Sequence numbers have already been set. You can only enter one sequence number per label.

Txt too long-OK?	Entered text is too long for the specified tape length. Press  and adjust the label length or make text shorter.
Overheated!	The print head is too hot. Turn the power off and take out the tape cartridge. Allow the print head to cool before trying to print again.
Cover open!	If you open the rear cover while the power is on, this message displays and the power turns off automatically. Always turn the power off before opening the rear cover.
Delete all text?	When creating a label with a special format, the current text will be deleted. Press  to delete the text and show the special format.
Motor error!	An error occurred in the motor operation. Turn the power off, then turn it back on. If the same message appears, turn the power off again and contact Epson for technical support.






Problems and solutions

Check the solutions below if you are having trouble using your product.

The product does not function normally

The product may stop functioning due to static electricity or other causes. If your product does not function normally (for example, the power doesn't turn on/off or the display is distorted), reset your product by following the procedure below.

Warning: Resetting your product will erase all saved labels and formatting and return your product to default settings.

1. Press  to turn the power off.
2. Press and hold  +  , and press .
3. When a message appears, press  (to cancel, press any other button).

The product will be reset.

Power is on but no images appear on the display

- Make sure the batteries are correctly seated.
- Replace the batteries with new ones, or use the optional AC adapter (APT0615Z1-1).
- If you are using the AC adapter, make sure that it is securely connected to both the wall outlet and the product.
- Adjust the contrast as described on page 20.

The display turns off

- The power turns off automatically if the product is idle for more than 5 minutes.
- If an incorrect button sequence is entered, the display may flicker or turn off for an instant.

Nothing prints

- Make sure text has been entered.
- Replace the tape cartridge if necessary.
- Check the display for an error message and perform the suggested solution.
- Replace the batteries with new ones, or use the optional AC adapter (APT0615Z1-1).
- Make sure the rear cover is closed.


 
Characters do not print properly

- Make sure the tape cartridge is correctly seated.
- Clean the print head.
- Change the font (sometimes symbols do not print properly when certain fonts are selected).

Printing stops in the middle of text

- Install a new tape cartridge.
- Replace the batteries or use the optional AC adapter (APT0615Z1-1).

Saved labels are gone

- Make sure you have not accidentally deleted the text by pressing  + .
- If the product is reset, all of the previously entered text will be deleted.
- If the AC adapter is unplugged or the batteries are removed during operation, the text may be deleted.

Labels curl after ironing

- Try raising the iron temperature setting.
- Make sure you press the iron down on the entire label.
- Try trimming the corners of the label and iron it again.

Labels fall off after a few washings

- Try ironing the label on again with a higher temperature setting.
- Make sure you press the iron down on the entire label.
- Try holding the iron down for 15 to 20 seconds.
- If the item needs frequent washing, you might need to sew on the label.

Epson Technical Support

Visit epson.com/support (U.S.) or epson.ca/support (Canada) where you can view manuals, get FAQs, or e-mail Epson.

To speak with a support specialist, call:

U.S.: (562) 276-7245, 6 am to 8 pm, Pacific Time, Monday through Friday, and 7 am to 4 pm, Saturday.

Canada: (905) 709-2567, 6 am to 8 pm, Pacific Time, Monday through Friday.

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Recycling

Epson offers a recycling program for end of life products. Please go to www.epson.com/recycle for information on how to return your products for proper disposal.

Purchase supplies and accessories

Epson offers a wide array of tapes for multiple uses. For a complete list of available tapes, including additional widths, visit epson.com/LW300Tapes.

You can purchase tape cartridges and accessories at:

www.epson.com/LabelWorks (U.S. sales) or **www.epson.ca/LabelWorks** (Canadian sales).

You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

Specifications

Dimensions (approximate)	Width: 5.70 inches (145 mm) Depth: 5.90 inches (150 mm) Height: 2.16 inches (55 mm)
Weight (approximate)	14 oz (400 g) (excluding batteries and tape cartridge)
Operating temperature	50 to 95 °F (10 to 35 °C)
Storage temperature	14 to 131 °F (-10 to 55 °C)
Power supply - batteries	AAA alkaline battery x 6
Power supply - optional AC adapter	Model: APT0615Z1-1 Manufacturer: Seiko Epson Corp. Input: AC100-240 V, 0.3 A, 50-60Hz Output: DC 6.5 V, 1.5 A Total output power: 10 W
Supported tape widths (approximate)	1/4" (6 mm) 3/8" (9 mm) 1/2" (12 mm)

Notices

Safety instructions

Before using your product, read the following safety instructions to make sure you use it safely and effectively.

- Always use the product as instructed in the manual. Otherwise, damage or injury may occur.
 - Do not subject the product to any strong force or shock such as dropping, hitting, or standing on the product.
 - Do not spill liquid on the product or use the product with wet hands.
 - Do not open any covers on the product other than the rear cover.
 - Do not touch the print head.
 - Turn the product off, unplug the AC adapter and remove the batteries, and refer servicing to qualified service personnel under the following conditions: if liquid or foreign objects get inside the product; if the product does not operate normally or exhibits a distinct change in performance.
- Continuing to use the product may result in damage or injury.
- To avoid injury, keep your fingers away from the label exit slot when printing or using the cutter.
 - Avoid locations that are subject to rapid changes in heat or humidity, shocks or vibrations, or dust.
 - Do not place or store the product in the following locations: outdoors or in direct sunlight; near sources of excessive heat, humidity, shocks, vibrations, or dust; where it may get wet or be exposed to excessive humidity; on an unstable place such as a shaky or inclined surface; near potential sources of electromagnetic interference such as loudspeakers or the base units of cordless telephones.
 - The product and product manuals may come packaged in plastic bags. Keep plastic bags away from small children to avoid any risk of suffocation.
 - If you will not be using the product for a long period, unplug the power cord and remove the batteries.
 - Before cleaning, unplug the power cord and remove the batteries. Use only a dry, soft cloth to clean the product; do not use liquid or chemical cleaners.

- Operate the keyboard gently.
- Take care not to cut your fingers when cutting a label with scissors.
- Do not attach a label on human bodies, living things, public facilities or other people's belongings.
- Do not touch the soleplate of your iron or the label immediately after it is attached. Doing so may cause a burn.
- Make sure the label is ironed down firmly. Otherwise, the edges of the label may rub or scratch the skin.
- Do not let children use an iron unsupervised. Doing so may cause accidents such as fire or burns.
- Do not iron wet fabric.
- Take extreme care when handling your iron.

Battery

- Use batteries properly to avoid injury or fire caused by leaking, overheating, explosion, erosion, or damage to the product.
- Keep batteries out of reach of children. If battery acid gets into your eyes or on your skin, immediately rinse the affected area thoroughly

with water and seek medical treatment. If a battery is swallowed, seek medical treatment immediately.


 

- When replacing batteries, follow these safety instructions:
 - If battery acid leaks from a battery, wipe it off with a cloth and replace the battery with a new one.
 - Do not use new and old batteries together or mix different types of batteries.
 - Use only AAA alkaline batteries. You cannot use rechargeable batteries with your product.
 - Insert batteries so that the polarities (+ and -) are correct.
 - Remove dead batteries promptly.
 - Do not heat batteries or throw them in fire or water.
 - Do not remove batteries with metal objects such as tweezers or the tip of a pen.
- Make sure to follow local battery disposal regulations.

AC adapter

- Use only model APT0615Z1-1 AC adapter and power cord with your product. Do not use the AC adapter with any other equipment and use only with the specified voltage. Using the wrong AC adapter and power cord may result in damage, overheating, fire, or electric shock.
- Plug the power cord firmly into the outlet. When removing the plug from the outlet, grasp the plug firmly and do not yank on the cord.
- Make sure the plug is not dusty when inserting it into an outlet.
- Do not hold the plug with wet hands.
- Do not make any modifications to the AC adapter or power cord.
- Place the AC adapter and power cord to avoid abrasions, cuts, fraying, crimping, and kinking. Do not place heavy objects on top of the AC adapter or power cord.
- Make sure the AC adapter has sufficient ventilation so that it doesn't overheat and become damaged. Do not crowd it with too many other adapters or cords.
- Do not forcibly bend or twist the power cord.

- Do not place the AC adapter or power cord near a heater.
- To avoid fire or electric shock, do not use a damaged AC adapter or power cord.
- Turn off the product before unplugging the AC adapter. Otherwise, it may not function properly or may become damaged.

Tape cartridge

- Use only compatible LC  tape cartridges.
- To avoid damage, do not drop or disassemble tape cartridges.
- Feed the tape using the  +  buttons. Do not forcibly pull out the tape. Otherwise, you may damage the tape cartridge.
- Do not try to print with an empty tape cartridge; this may overheat the print head and damage the product.

Note: Tape cartridges contain ink ribbons. Make sure to follow local ink disposal regulations.

About printed labels

Attached labels and adhesive are affected by the type of surface and by environmental conditions such as humidity and heat. Labels may peel off, curl, or fade; printed characters may fade; color may be left behind after removing the label; adhesive may become stuck to the attached surface.

Epson is not responsible for any damage or loss caused by labels or adhesive.

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference

to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For Canadian Users

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Epson America, Inc. Limited Warranty

What Is Covered: Epson America, Inc. (“Epson”) warrants to the original retail purchaser that the Epson label-printing device and its consumables and accessories covered by this limited warranty statement (each, a “product”), if purchased and operated only in the United States, Canada, or Puerto Rico, will be free from defects in workmanship and materials for a period of one (1) year from the date of original purchase, in the case of the label-printing device, and for a period of thirty (30) days from the date of original purchase, in the case of its consumables or accessories. Consumables include label and tape rolls and cassettes. Accessories include an AC adaptor. For consumables, the warranty covers only mechanical defects in workmanship and materials. For warranty service, you must provide proof of the date of original purchase.

What Epson Will Do To Correct Problems: Should your Epson product prove defective during the warranty period, please call the Epson Connection at (562) 276-7245 (U.S. and Puerto Rico) or (905) 709-2567 (Canada) for warranty repair instructions and return authorization. An Epson service technician will provide telephone diagnostic service to determine whether the

product requires service. If service is needed, Epson will, at its option, exchange or repair the product without charge for parts or labor. If Epson authorizes an exchange for the defective unit, Epson will ship a replacement product to you, freight prepaid, so long as you use an address in the United States, Canada, or Puerto Rico. Shipments to other locations will be made freight collect. You are responsible for securely packaging the defective unit and returning it to Epson within five (5) working days of receipt of the replacement. Epson requires a debit or a credit card number to secure the cost of the replacement product in the event that you fail to return the defective one. If Epson authorizes repair instead of exchange, Epson will direct you to send your product to Epson or its authorized service center, where the product will be repaired and sent back to you. You are responsible for packing the product and for all costs to and from the Epson authorized service center. When warranty service involves the exchange of the product or a part, the item replaced becomes Epson property. The replacement product or part may be new or refurbished to the Epson standard of quality, and, at Epson's option, may be another model of like kind and quality. Exchange products and parts assume the remaining warranty period of your original product covered by this limited warranty.

What This Warranty Does Not Cover: This warranty covers only normal use in the United States, Canada, or Puerto Rico. Using this product for continuous production or similar high duty purposes is not considered normal use; damage, maintenance or service from such use will not be covered under this warranty. This warranty is not transferable. This warranty does not cover damage to the Epson product caused by parts or supplies not manufactured, distributed or certified by Epson. This warranty does not cover third party parts, components, or peripheral devices added to the Epson product after its shipment from Epson, e.g., dealer or user-added boards or components. Epson is not responsible for warranty service should the Epson label or logo or the rating label or serial number be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, improper installation, neglect, improper shipping, damage caused by disasters such as fire, flood, and lightning, improper electrical current, software problems, interaction with non-Epson products, or service other than by an Epson Authorized Servicer. If a claimed defect cannot be identified or reproduced, you will be held responsible for the costs incurred.

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENTS OR REPRESENTATIONS MADE BY ANY OTHER PERSON OR FIRM ARE VOID. IN NO EVENT SHALL EPSON OR ITS AFFILIATES BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OR INABILITY TO USE THE EPSON PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY. IN NO EVENT SHALL EPSON OR ITS AFFILIATES BE LIABLE FOR DAMAGES OF ANY KIND IN EXCESS OF THE ORIGINAL RETAIL PURCHASE PRICE OF THE PRODUCT.

In Canada, warranties include both warranties and conditions.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and

exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

To find the Epson Authorized Reseller nearest you, visit our website at <http://www.epson.com>.

To find the Epson Customer Care Center nearest you, visit <http://www.epson.com/support>.

You can also write to Epson America, Inc., P.O. Box 93012, Long Beach, CA 90809-3012.

Trademarks

EPSON is a registered trademark and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2012 Epson America, Inc. 9/12

CPD-38096

Printed in USA

