



11/05



940498-001 Rev. A



# Optimum L4200 Hardware Installation Guide

### WARNING:

- Only qualified technicians should service this terminal.
- This terminal was designed for indoor use only; do not expose to rain or snow.
- Do not immerse in fluid.
- Only use Hypercom approved cables to power this terminal.



Optimum L4200

Due to a variety of Electronic Cash Registers (ECRs), cables for the Optimum L4200 must be ordered and are shipped separately from the terminal. Contact your Hypercom Sales Representative at 602.504.5000 if you require a specific cable.

### **Power Connection**

# TOO BASE T



The Optimum L4200 supports 12 or 24 Volts DC input power that is available from the USB Client Port or the RS-232 Port.

## Restarting the Optimum L4200



To restart the Optimum L4200, press the red reset button once on the back of the device using the tip of a ball-park pen.

### Swiping your Credit Card



To swipe your credit card, hold the card, making sure the magnetic stripe is toward the body of the terminal. Slide the card in the long slot of the terminal and pull the card towards you in one smooth stroke.