

wireless mobile speaker

Brand Name: ETEKCITY

Model Name: ROVERBEATS T12

FCC ID: 2AB22ROVERBEATST12

P1

Thank you for purchasing our products. This is a Bluetooth speaker system in fashionable design, with wireless Bluetooth stereo sound. It supports Bluetooth 3.0 agreement, not only being compatible with smartphones, tablets, laptops, iPhone and other Bluetooth enabled devices, let you get rid of cables completely, enjoy the joy of music freely, but also audio input from mobile phones, laptops, MP3, MP4 and other equipments.

Please read the following instructions carefully before operating. Keep them safe for future reference.

Features as shown in below:

1. Volume decrease/ Previous song
2. Play/Pause
3. Volume increase/Next song
4. Lamp for working situation
5. Speakers
6. Micro USB power input port
7. AUX audio input port
8. ON/OFF
9. Bass strengthening unit

P2

Product Features

- Stereo sound output.
- Bass boost, make you rock.
- Quickly connect/disconnect via Bluetooth
- Fashionable facade
- Control the music playing between speaker and mobile phone or other equipments has Bluetooth function
- Support more sound source input
- Built-in rechargeable lithium battery, use freely.

P3

Technical Parameters

- 2.0 Sound Channel Stereo Output
- Power Output:3Wx2
- Speaker Unit:2 " 4Ω 3W
- Frequency Response:100Hz~18KHz
- S/N Ratio:≥70dB
- Bluetooth standard 3.0
- Support A2DP, AVRCP and etc.
- Working range:10M
- Built-in battery: 3.7V 2200mAH, rechargeable lithium battery
- Play Time:10 hours (mid. Volume)
- Dimension: 196x87x74.5mm

How to operate:

Charging

Under shutdown state, connect DC 5V 1000mA to speaker by USB cable, charging lights in red. Finished, working light is off.

※ Built-in rechargeable lithium battery, charge up before use.

ON/OFF

Push the power switch to ON position, work light is lit up, machine starts.

Push the power switch to OFF position, work light is off, machine stops.

P4

Working Modes Changing

There are two different working modes, Bluetooth and AUX IN modes. They can be changed between each other.

When AUX cable connected, the mode is confirmed AUX input mode; take out AUX cable, Bluetooth mode starts.

Bluetooth Mode

When turns on, it enters Bluetooth mode automatically, working lamp flicker:

•Pair: It is necessary to pair this product for the first operating.

Operation as below: turn on and enter pairing status automatically, working light flashes between green and blue; search for Bluetooth device, until find out ROVERBEARS T12, select it, then lamp keeps lighting blue in slow flash, pair successfully.(Noted: if the pass code is required, entry "0000")

※ If timeout for pairing (blue/green working light stops flashing), the speaker will be in standby mode (light blue flashes twice).Please restart the machine or long press Play/Pause button to make it re-enter the pairing mode.

•Operation: After pairing, you can control the music play/pause by buttons (short press Play/Pause), adjust the volume (long press "+/-"), choose previous/next song (short press "+/-")

•Connected: This speaker can store the devices which have paired with it. If devices close to this speaker enough (range 10 M), Bluetooth mode will start and pair automatically. If out of range or haven't opened Bluetooth function on devices, this speaker will enter the pairing mode and search devices nearby.

Ps: There may be some difference between different devices, such as smart phones, computers, etc., which has Bluetooth function. Before pairing to this speaker, please check devices manual firstly.

P7

Warranty Notes

Thank you very much for purchasing our products. In order to provide you warrant service conveniently, please fill the user information file as request, from the day of purchasing.

Principle of the warranty

Since the date you purchased, broken under the condition of normal operation and without repairing,1month replacement, 1 year warranty.

Warranty coverage

Within 1year since the date of purchasing, damage or malfunction cause by manufacture or components, will belong to the guaranteed repair in warranty card.

The following situation does not in the warranty coverage,

- 1, Cause the improper use, as well as repair, dismantling, and breakdown by man-made.
- 2, Malfunction due to force majeure (such as: flood, fire, earthquake, lightning, etc.)
- 3, Without product warranty card and effective purchasing proof and user information file.
- 4, Warranty card and purchasing proof are not consistent with the model, or ever altered.

Warranty rules

1,The purchasing date will subject to the day of invoice. (Without invoice and after-sale service card, but it can certify that the

product be in period of service, can enjoy repair/replacement. No effective proof, purchasing date will take the producing day for it).
2, If products without barcode, serial number, there's no obligation to provide after-sales service.
3, Quality defects do not include personal subjective objection against timbre, tone, etc. If it appears the quality problem caused by the manufacturer, buyer can change a new one from distributor within 1 month from the purchasing date (damage of appearance, guarantee repair).
4, Warranty service coverage does not include shell, user manual, packaging. During the warranty period, if it has quality problem, users can enjoy the warranty service in the local after-sales service center. If no, users can entrust dealer for warranty service.

P8

AUX input mode

Once insert AUX cable into this speaker, AUX mode starts. It can play music from the external device connected.

Under this mode, you can control the music or adjust volume through pressing buttons. Volume increasing(long press)/next song, volume decreasing(long press)/previous song.

When the power is low, working light in green will rapid flash intermittently, accompanied by sound alerts, alert the user to charge up speaker. If not charge timely, it will shut down automatically when the voltage is too low, please use after full charging.

Instruction on Product Safety Maintenance

- Do not place this product under the high-temperature and damp environment and make it be caught by rain or impacted by strong force.
- If this product gives out of smoke or encounters other exceptions, in order to avoid accidents, pull up the DC-USB power cable instantly. Contact local franchiser or dial the seller for repair.

P9

● The audio signal cable and power cable can not be pulled, tied, extruded, trampled or suspended with heavy objects to avoid damaging the insulation layer of the audio signal cable and USB power cable, which will lead to short circuit or bad contact, etc.

● Please power off this product when it is not operated for a long time.

● With Bluetooth function, it can be compatible with common smart phones and tablets, but there may be some differences once make use of some special devices or application program. Some functions may be not supported.

P10

Images of speaker and attachments

Standard USB to Micro USB cable

3.5 mm stereo audio cable

User manual

ROVERBEATS T12 Bluetooth speaker

Package List

- ROVERBEATS T12 Bluetooth Speaker1unit
- User Manual1copy
- 3.5mm Stereo Audio Cable.....1piece
- Cable of standard USB to Micro USB1piece

* If the materials inside the package are not consistent with the accompanied list, please contact the manufacturer or retail seller who you purchased from.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**